

Vacuum Pad/Bellows Type

2.5-stage $\varnothing 20$, $\varnothing 25$, $\varnothing 32$, $\varnothing 40$, $\varnothing 50$
5.5-stage

For the adsorption transfer of workpieces with flexible soft film packaging



Thin film skirt and special shaped ribs

Thin film skirt


Adapts to changes in soft packaging shape

Special ribs

Vacuum leakage reduced by improved sealing effect
Prevent the skirt from becoming caught

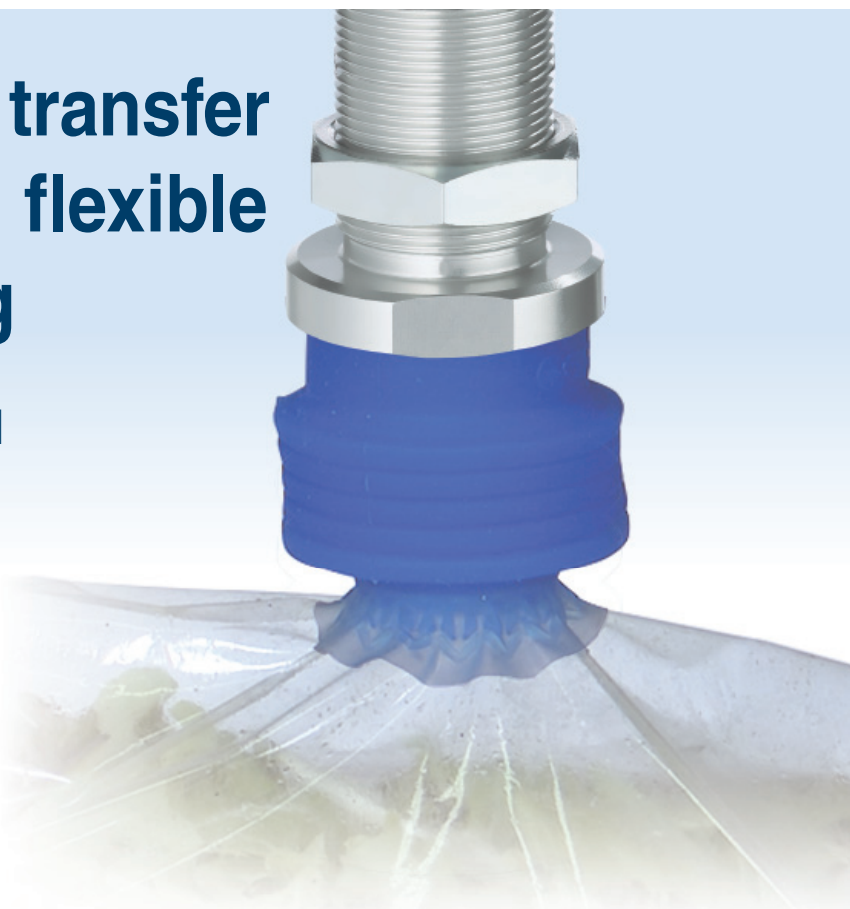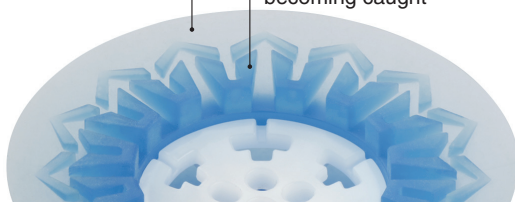

Overall length reduced

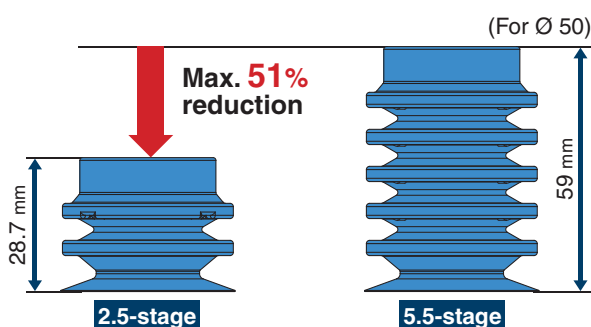

The pad and attachment are made of materials compliant with FDA (U.S. Food and Drug Administration) regulations as well as Food Sanitation Act standards.

Blue coloured pad

Easy to distinguish the vacuum pad by colour during contamination inspection

2.5-Stage Bellows Type



5.5-Stage Bellows Type




ZP3P-JT Series




CAT.EUS100-128B-UK

Unstable workpieces such as bagged liquid or powder can be transferred.

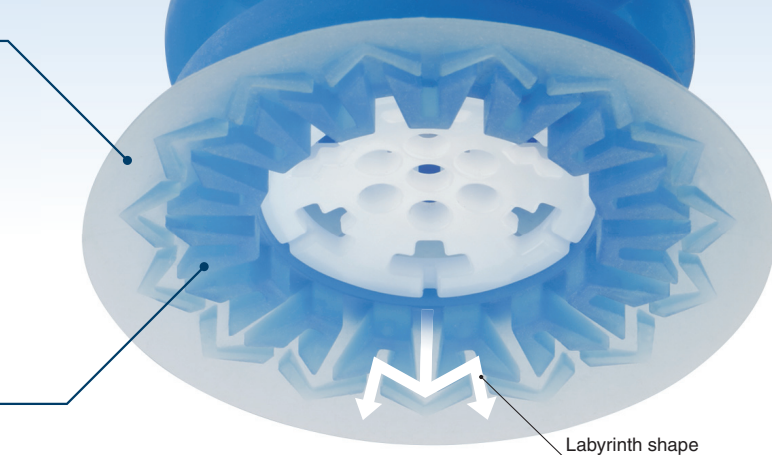


Application examples

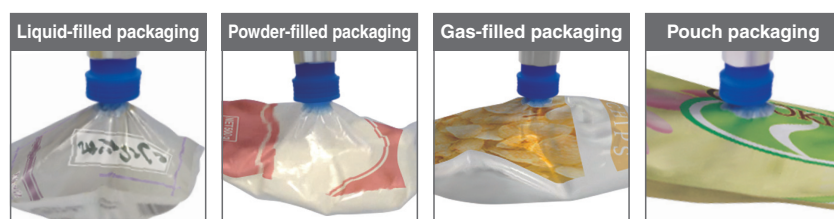

Bellows Type

2.5-stage

Prevents the suction of foreign matter

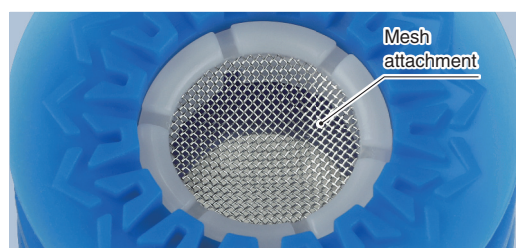


Stainless steel mesh at suction port*1


- Prevents the intrusion of foreign matter into piping
- Easy to check for clogging and easy to clean
- Reduced suction filter element replacement frequency

*1 The mesh will not fall off because it is integrally molded into the attachment.

Reduced deflection during transfer before adsorption

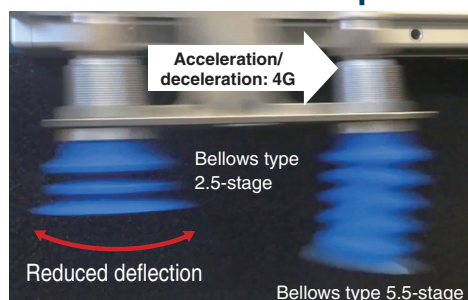

Expanded hole size

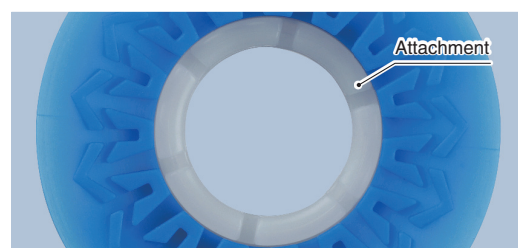

- Expanded hole size to ensure suction flow rate
- Compatible with vacuum blower pumps

- G3/8 and G1/2 standardised for the direct mounting/male thread type
- Min. opening hole size of the adapter: Ø 11.5
(Pad diameter: Ø 32, Ø 40 or Ø 50)



Bellows Type

5.5 -stage

Guide attachment


Deformation of the pad and deflection of the workpiece during adsorption transfer are reduced.

With guide attachment



Small deformation and deflection

Without guide attachment

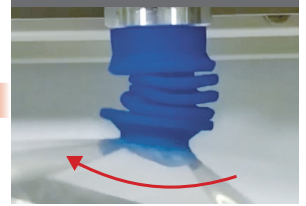

Large deformation and deflection


Guide attachment



Transfer conditions

Pad diameter: $\varnothing$ 40 [mm], Workpiece mass: 700 [g], Supply pressure: -85 [kPa], Acceleration/Deceleration: 4 [G]

Before adsorption Vacuum OFF




During adsorption Vacuum ON



Guide part


Flexible bag packaging

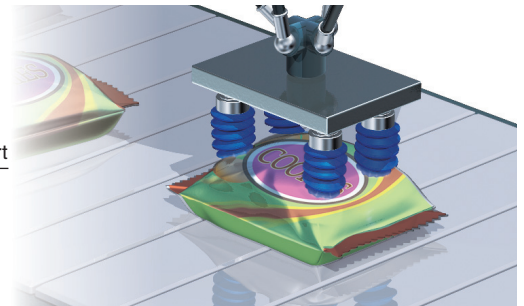


Multi-stage stroke

- Adaptable to changes in workpiece height and angle
- Reduced impact on the contents

Before adsorption Vacuum OFF

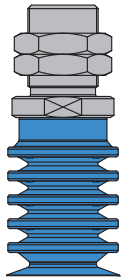

During adsorption Vacuum ON



Stroke


Stroke [mm]

$\varnothing$ 20	10
$\varnothing$ 25	12
$\varnothing$ 32	16
$\varnothing$ 40	20
$\varnothing$ 50	26

* Achieved vacuum pressure: Reference at -85 [kPa]

Sticking is prevented.


Support ribs prevent the sticking of the bellows. This reduces returning failure when the vacuum pressure is turned off.

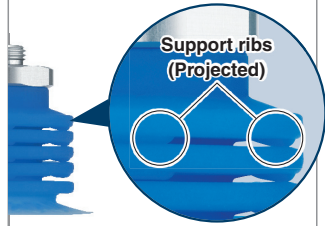

Application examples

Workpieces of varying heights can be adsorbed by the stroke.


Before adsorption Vacuum OFF

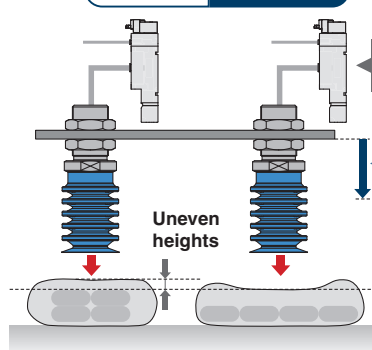

Vacuum ejector ZL Series

Downward adsorption


During adsorption Vacuum ON

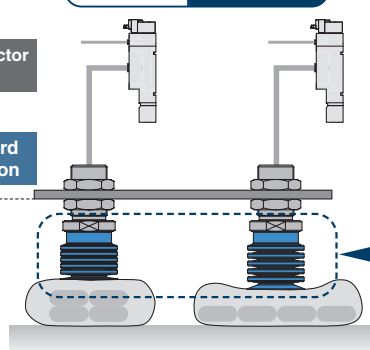

Low-resilience bellows reduce the impact applied to the workpiece.

Standardised built-in One-touch fitting type

Reduced overall length, assembly, and labour time

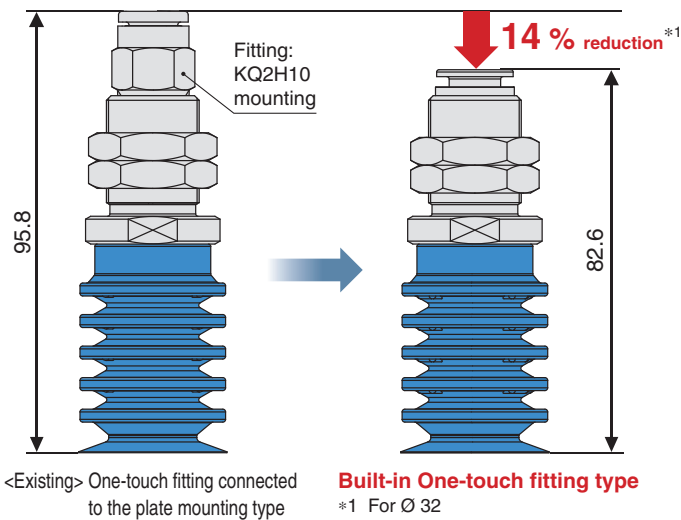

Applicable tubing O.D.

Bore size	Pad diameter
Ø 8	Ø 20
	Ø 25
	Ø 32
Ø 10	Ø 40
	Ø 50

* Same for both the 2.5-stage and the 5.5-stage



Variations

Bellows Type 2.5-Stage			Connection thread	Vacuum inlet	Pad diameter				
					Ø 20	Ø 25	Ø 32	Ø 40	Ø 50
Pad unit			—		—	—	—	—	—
Direct mounting (Male thread)			Male thread	G1/8	*1	•	•	•	•
				G1/4	*1	•	•	•	•
				G3/8	*1	•	•	•	•
				G1/2	*1	•	•	•	•
Direct mounting (Female thread)			Female thread	G1/8	*1	•	•	•	•
				G1/4	*1	•	•	•	•
Plate mounting (Male/Female thread)			Male thread	M16 x 1	Rc, NPT1/8	•	•	•	•
				M20 x 1	Rc, NPT1/4	•	•	•	•
Plate mounting (Male thread/ One-touch fitting)			Male thread	M16 x 1	Ø 8	•	•	•	•
				M20 x 1	Ø 10	•	•	•	•

*1 Same as the connection thread

Bellows Type 5.5-Stage			Connection thread	Vacuum inlet	Pad diameter				
					Ø 20	Ø 25	Ø 32	Ø 40	Ø 50
Pad unit			—		—	—	—	—	—
Direct mounting (Male thread)			Male thread	G1/8	*1	•	•	•	•
				G1/4	*1	•	•	•	•
Direct mounting (Female thread)			Female thread	G1/8	*1	•	•	•	•
				G1/4	*1	•	•	•	•
Plate mounting (Male/Female thread)			Male thread	M16 x 1	Rc, NPT1/8	•	•	•	•
				M20 x 1	Rc, NPT1/4	•	•	•	•
Plate mounting (Male thread/ One-touch fitting)			Male thread	M16 x 1	Ø 8	•	•	•	•
				M20 x 1	Ø 10	•	•	•	•

*1 Same as the connection thread

CONTENTS

Vacuum Pad/Bellows Type *ZP3P-JT Series*



2.5-Stage/Bellows Type

How to Order	p. 5
Specifications	p. 5
Dimensions/Models	p. 6
Construction	p. 8

5.5-Stage/Bellows Type

How to Order	p. 9
Specifications	p. 9
Dimensions/Models	p. 10
Construction	p. 12
Mounting Bracket Assembly	p. 13
Specific Product Precautions	p. 14



Vacuum Pad

2.5-Stage/Bellows Type

ZP3P-JT Series

How to Order



Pad unit

ZP3P - **20** **JT** **2** **SF** - **W**

With adapter

ZP3P **1** - **T** **20** **JT** **2** **SF** - **W** - **AG01** - **5**

2.5-stage
Silicone rubber

1 Adapter material

—	Aluminium
S	Stainless steel (Stainless steel 304)

2 Pad diameter

20	Ø 20
25	Ø 25
32	Ø 32
40	Ø 40
50	Ø 50

3 Attachment

W	With attachment
WM	With mesh attachment

With adapter

4 Connection thread/5 Vacuum inlet

4 Connection thread				5 Vacuum inlet			Pad diameter [mm]		
Type	Thread	Symbol	Size	Thread	Symbol	Size	Ø 20, Ø 25	Ø 32, Ø 40, Ø 50	
Direct mounting	Male thread	AG01	G1/8	—	—	—*1	●	●	
		AG02	G1/4				●	●	
		AG03	G3/8				●	●	
		AG04	G1/2				—	●	
	Female thread	BG01	G1/8	—	—	—*1	●	—	
		BG02	G1/4				—	●	
Plate mounting	Male thread	A16	M16 x 1	Female thread	B01	Rc1/8	●	—	
					BN01	NPT1/8			
				One-touch fitting*2	08	Ø 8			
		A20	M20 x 1	Female thread	B02	Rc1/4	—	●	
					BN02	NPT1/4			
				One-touch fitting*2	10	Ø 10			

*1 Use the connection thread.

*2 Built-in One-touch fitting type

Pad, adapter assembly, and mounting nuts are included but do not come assembled.

Specifications

Operating temperature range		−30 to 90 °C*1
Pad	Material	Silicone rubber*2, *3
	Colour	Blue
	Hardness (Shore A: ±5°)	40
Attachment	Material	Synthetic resin*2, *4/Stainless steel*5
	Colour	White
	Mesh	Mesh: 60/Opening: 280 µm

*1 −5 to 60 [°C] for the vacuum inlet with One-touch fitting

*2 Compliant with FDA (U.S. Food and Drug Administration) regulation 21CFR§177.


*3 Compliant with the standards for "Rubber apparatus (excluding baby drinking apparatus) and containers/packaging" (D 3) (Partial revision: Ministry of Health, Labour, and Welfare Notification No. 5 9 5 , 2 0 1 2) in Section 3 "Apparatus and Containers/Packaging" of the Food Sanitation Act, Article 1 8 "Specifications and Standards for Food and Food Additives, etc." (Ministry of Health and Welfare Notification No. 370, 1959)

*4 Compliant with the standards for "Synthetic resin apparatus and containers/packaging" (D2) in Section 3 "Apparatus and Containers/Packaging" of the Food Sanitation Act, Article 18 "Specifications and Standards for Food and Food Additives, etc." (Ministry of Health and Welfare Notification No. 370, 1959)

*5 Stainless steel included only for mesh attachment

Dimensions/Models

Pad unit

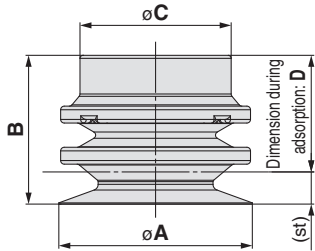


ZP3P - [20] JT2SF - [W]
① ②

Model						A	B	C	D	(st)*1	Weight [g]
① Pad dia.	Form	Number of bellows stages	Material	② Attachment							
ZP3P	20	JT	2	SF	W WM	20	17.7	16	15.2	2.5	2.8
	25					25	18.8		15.8	3	3.5
	32					32	24.6	25	20.6	4	8.3
	40					40	26.9		21.9	5	11
	50					50	28.7		22.2	6.5	13.8

*1 (st) indicates achieved vacuum pressure: Reference at -85 [kPa]

With adapter Direct mounting type (Male thread)

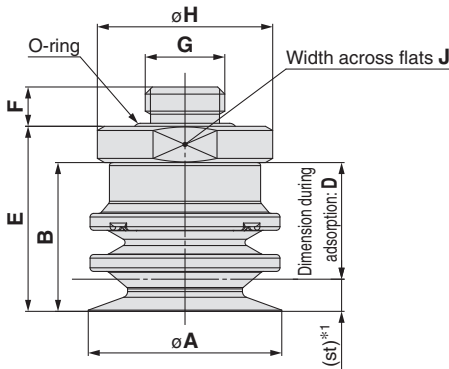

*1 Same dimension as the pad unit

ZP3P [] - T [20] JT2SF - [W] - [AG01]
① ② ③ ④

① Adapter material

—	Aluminium
S	Stainless steel (Stainless steel 304)


④ Connection thread (Male thread)

AG01	G1/8
AG02	G1/4
AG03	G3/8
AG04	G1/2

Model								E	F	G	H	J	Weight [g]		Min. opening hole size of the adapter	
① Adapter material	Vacuum inlet direction	② Pad dia.	Form	Number of bellows stages	Material	③ Attachment	④ Connection thread						Aluminium	Stainless steel		
ZP3P	— S	T	20	2	SF	W WM	AG01	21.7	5.5	G1/8	18	17	6.5	13.8	Ø 5	
							AG02	22.7	6.5	G1/4	23	21	9.4	22.2	Ø 6.2	
							AG03	23.7	7.5	G3/8	29	27	15.9	41.6		
							AG01	22.8	5.5	G1/8	18	17	7.2	14.6	Ø 5	
							AG02	23.8	6.5	G1/4	23	21	10.3	23	Ø 6.2	
							AG03	24.8	7.5	G3/8	29	27	17.2	42.4		
			32				AG01		5.5	G1/8	29	27	21.9	48.9	Ø 5.7	
							AG02		6.5	G1/4			21.6	48	Ø 8	
							AG03		7.5	G3/8			20.9	45.5	Ø 11.5	
							AG04	31.6	9	G1/2	32	30	27.8	66.2		
							40	AG01		5.5	G1/8	29	27	24.6		51.6
								AG02		6.5	G1/4			24.4	50.7	Ø 8
			AG03					7.5		G3/8	23.6			48.2	Ø 11.5	
			AG04					33.9	9	G1/2	32	30	30.5	68.9		
			50					AG01		5.5	G1/8	29	27	27.4		54.4
								AG02		6.5	G1/4			27.1	53.5	Ø 8
							AG03	7.5		G3/8	26.4			51	Ø 11.5	
							AG04	35.7		9	G1/2			32		30

Dimensions/Models

With adapter Direct mounting type (Female thread)

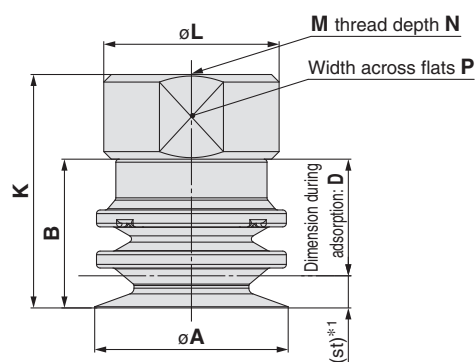

*1 Same dimension as the pad unit

ZP3P - T 20 JT2SF - W - BG01

1 Adapter material


—	Aluminium
S	Stainless steel (Stainless steel 304)

4 Connection thread (Female thread)

BG01	G1/8
BG02	G1/4

Model								K	L	M	N	P	Weight [g]		Min. opening hole size of the adapter	
① Adapter material	Vacuum inlet direction	② Pad dia.	Form	Number of bellows stages	Material	③ Attachment	④ Connection thread						Aluminum	Stainless steel		
ZP3P	— S	T	20	JT	2	SF	W WM	BG01	28.7	18	G1/8	7.4	17	9.2	22.1	Ø 5
			29.8						10					22.9		
			BG02					38.6	29	G1/4	11	27	31.1	77		
								40.9					33.7	79.7		
								42.7	36.7	82.6						

With adapter Plate mounting type (Male/Female thread)

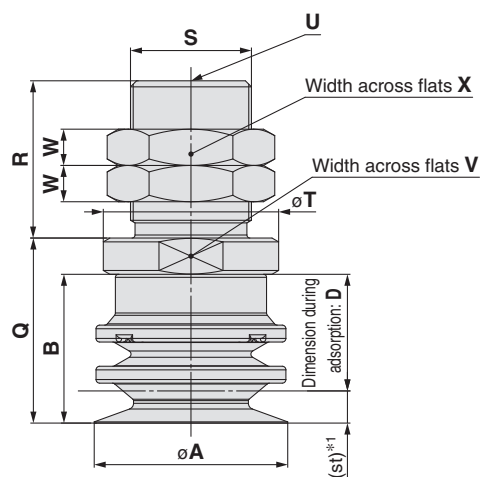

*1 Same dimension as the pad unit

ZP3P - T 20 JT2SF - W - A16 - B01

1 Adapter material

—	Aluminium
S	Stainless steel (Stainless steel 304)

Connection thread (Male thread)

A16	M16 x 1
A20	M20 x 1


5 Vacuum inlet (Female thread)

B01	Rc1/8
BN01	NPT1/8
B02	Rc1/4
BN02	NPT1/4

Model										Q	R	S	T	U	V	W	X	Weight [g]		Min. opening hole size of the adapter
① Adapter material	Vacuum inlet direction	② Pad dia.	Form	Number of bellows stages	Material	③ Attachment	④ Connection thread	⑤ Vacuum inlet	Aluminium									Stainless steel		
ZP3P	— S	T	20	JT	2	SF	W WM	A16	B01	21.7	22	M16 x 1	18	Rc1/8	17	5	19	24	49.7	Ø 5
			BN01						23.8					46						
			B01						24.7					50.5						
			BN01						24.6					46.8						
			A20					B02	30.6	26	M20 x 1	29	Rc1/4	54.3	108					
								BN02					54.1	107						
								B02					56.7	110.7						
								BN02					56.5	109.7						
		A20	B02	32.9	26	M20 x 1	29	Rc1/4	59.8	113	Ø 8									
			BN02					59.7	113											
			B02					59.7	113											
			BN02					59.7	113											

Dimensions/Models

With adapter Plate mounting type (Male thread/One-touch fitting)

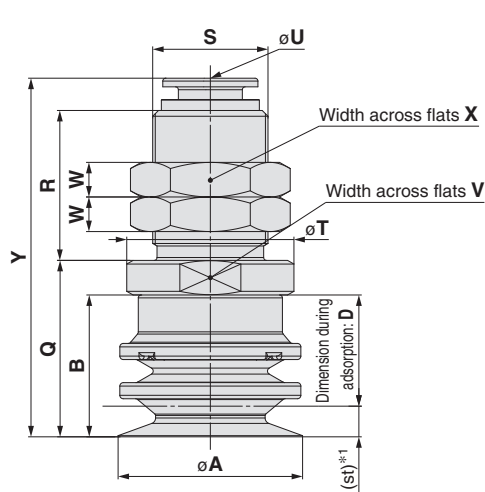

ZP3P - T 20 JT2SF - W - A16 - 08

①

②

③

④

⑤

① Adapter material

—	Aluminium
S	Stainless steel (Stainless steel 304)

Connection thread (Male thread) ④

A16	M16 x 1
A20	M20 x 1

⑤ Vacuum inlet (One-touch fitting)

08	Ø 8
10	Ø 10

*1 Same dimension as the pad unit

Model										Q	R	S	T	U	V	W	X	Y	Weight [g]		Min. opening hole size of the adapter
① Adapter material	Vacuum inlet direction	② Pad dia.	Form	Number of bellows stages	Material	③ Attachment	④ Connection thread	⑤ Vacuum inlet	Aluminium										Stainless steel		
ZP3P	— S	T	20	JT	2	SF	W WM	A16	08	21.7	22	M16 x 1	18	8	17	5	19	48.6	24.8	45.8	Ø 5
			25					22.8	49.7	25.6								46.6			
			32					A20	10	30.6	26	M20 x 1	29	10	27	6	24	62	56.7	111	Ø 7.5
			40							32.9								64.3	58.9	113.7	
			50							34.7								66.1	62	116	


Vacuum Pad **ZP3P-JT Series**

2.5-Stage/Bellows Type

Construction

Direct mounting type (Male thread)

ZP3P□-T□JT2SF-□-A□

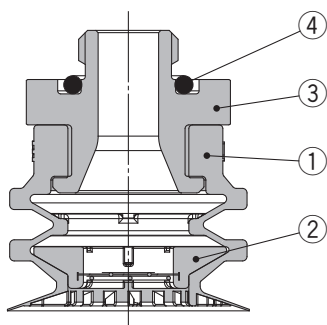

Direct mounting type (Female thread)

ZP3P□-T□JT2SF-□-B□

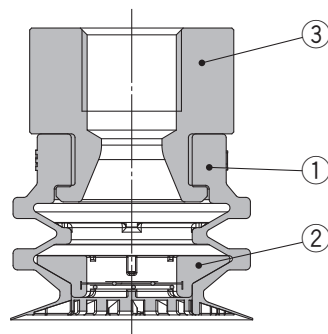


Plate mounting (Male/Female thread)

ZP3P□-T□JT2SF-□-A□-B□


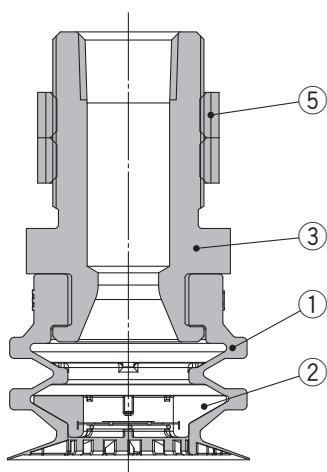


Plate mounting (Male thread/One-touch fitting)

ZP3P□-T□JT2SF-□-A□-□

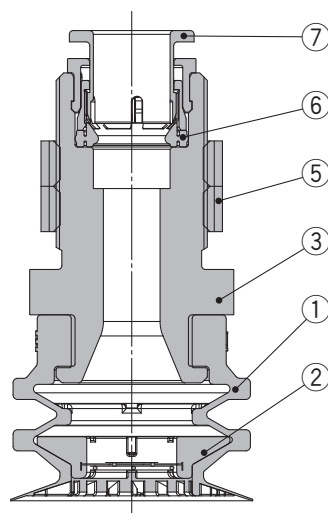

Component Parts

No.	Description	Material (Surface treatment)	Note
1	Bellows pad	Silicone rubber*1 *2	
	Attachment	Synthetic resin*1 *3	
2	Mesh attachment	Synthetic resin/Stainless steel	
3	Adapter	Aluminium alloy (Anodized)	ZP3P-T□
		Stainless steel	ZP3PS-T□
4	O-ring	Silicone rubber	
5	Mounting nut	Steel (Trivalent zinc chromated)	ZP3P-T□
		Stainless steel	ZP3PS-T□
6	Seal	NBR	ZP3P-T□
		FKM	ZP3PS-T□
7	Cassette	—	

*1 Compliant with the FDA (U.S. Food and Drug Administration) regulation 21CFR§177

*2 Compliant with the standards for "Rubber apparatus (excluding baby drinking apparatus) and containers/packaging" (D 3) (Partial revision: Japanese Ministry of Health, Labour, and Welfare Notification No. 5 9 5 , 2 0 1 2) in Section 3 "Apparatus and Containers/Packaging" of the Food Sanitation Act, Article 1 8 "Specifications and Standards for Food and Food Additives, etc." (Japanese Ministry of Health and Welfare Notification No. 370, 1959)

*3 Compliant with the standards for "Synthetic resin apparatus and containers/packaging" (D 2) in Section 3 "Apparatus and Containers/Packaging" of the Food Sanitation Act, Article 1 8 "Specifications and Standards for Food and Food Additives, etc." (Ministry of Health and Welfare Notification No. 3 7 0 , 1959)

Replacement Parts

Pad Unit (Without attachment)


Part number	Applicable pad dia.
ZP3P-20JT2SF	Ø 20
ZP3P-25JT2SF	Ø 25
ZP3P-32JT2SF	Ø 32
ZP3P-40JT2SF	Ø 40
ZP3P-50JT2SF	Ø 50

Attachment Unit

Part number	Applicable pad dia.
ZP3PW-20JT2	Ø 20
ZP3PW-25JT2	Ø 25
ZP3PW-32JT2	Ø 32
ZP3PW-40JT2	Ø 40
ZP3PW-50JT2	Ø 50

Mesh Attachment Unit

Part number	Applicable pad dia.
ZP3PWM-20JT2	Ø 20
ZP3PWM-25JT2	Ø 25
ZP3PWM-32JT2	Ø 32
ZP3PWM-40JT2	Ø 40
ZP3PWM-50JT2	Ø 50

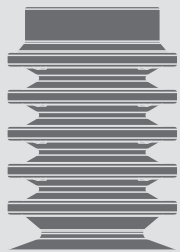

Vacuum Pad

5.5-Stage/Bellows Type

ZP3P-JT Series

How to Order



Pad unit **ZP3P** - **20** **JT** **5** **SF** - **WG**

With adapter **ZP3P** **1** - **T** **20** **JT** **5** **SF** - **AG01** - **4**

* With guide attachment

Bellows type • 5.5-stage • Silicone rubber • With guide attachment

1 Adapter material

—	Aluminium
S	Stainless steel (Stainless steel 304)

2 Pad diameter

20	Ø 20
25	Ø 25
32	Ø 32
40	Ø 40
50	Ø 50

With adapter

3 Connection thread/4 Vacuum inlet

3 Connection thread				4 Vacuum inlet			Pad diameter [mm]	
Type	Thread	Symbol	Size	Thread	Symbol	Size	Ø 20, Ø 25	Ø 32 to Ø 50
Direct mounting	Male thread	AG01	G1/8	—	—	—*1	●	●
		AG02	G1/4				—	●
	Female thread	BG01	G1/8				●	—
		BG02	G1/4				—	●
Plate mounting	Male thread	A16	M16 x 1	Female thread	B01	Rc1/8	●	—
				One-touch fitting*2	BN01	NPT1/8		
		A20	M20 x 1	Female thread	B02	Rc1/4	—	●
				One-touch fitting*2	BN02	NPT1/4		
					10	Ø 10		

*1 Use the connection thread.

*2 Built-in One-touch fitting type

Pad, adapter assembly, and mounting nuts are included but do not come assembled.

Specifications

Operating temperature range		−30 to 90 °C*1
Pad	Material	Silicone rubber*2, *3
	Colour	Blue
	Hardness (Shore A: ±5°)	40
Guide attachment	Material	Synthetic resin*2, *4
	Colour	White

*1 −5 to 60 [°C] for the vacuum inlet with One-touch fitting


*2 Compliant with FDA (U.S. Food and Drug Administration) regulation 21CFR§177.

*3 Compliant with the standards for "Rubber apparatus (excluding baby drinking apparatus) and containers/packaging" (D 3) (Partial revision: Ministry of Health, Labour, and Welfare Notification No. 5 9 5 , 2 0 1 2) in Section 3 "Apparatus and Containers/Packaging" of the Food Sanitation Act, Article 1 8 "Specifications and Standards for Food and Food Additives, etc." (Ministry of Health and Welfare Notification No. 370, 1959)

*4 Compliant with the standards for "Synthetic resin apparatus and containers/packaging" (D 2) in Section 3 "Apparatus and Containers/Packaging" of the Food Sanitation Act, Article 1 8 "Specifications and Standards for Food and Food Additives, etc." (Ministry of Health and Welfare Notification No. 3 7 0 , 1959)

Dimensions/Models

Pad unit

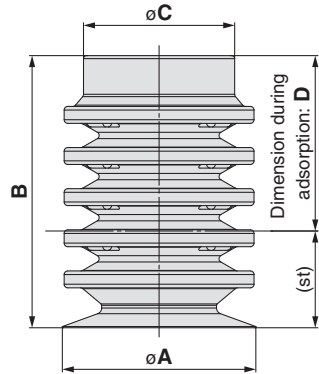


ZP3P - **20** JT5SF - WG

①

Model						A	B	C	D	(st)*1	Weight [g]
① Pad dia.	Form	Number of bellows stages	Material	Attachment							
ZP3P	20	JT	5	SF	WG	20	31.2	16	21.2	10	4.6
						25	35		23	12	6.3
						32	45	25	29	16	14.8
						40	51.5		31.5	20	20.3
						50	59		33	26	26.9

*1 (st) indicates achieved vacuum pressure: Reference at -85 [kPa]

With adapter Direct mounting type (Male thread)

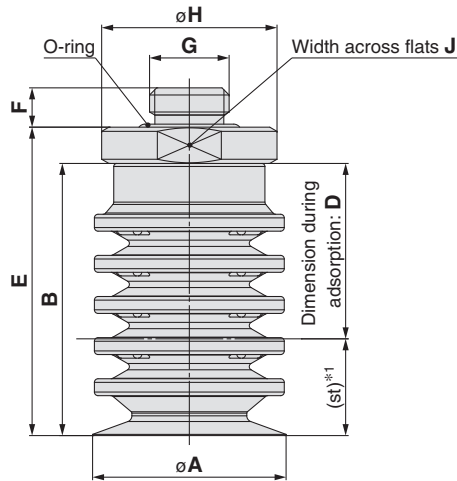

*1 Same dimension as the pad unit

ZP3P **1** - T **20** JT5SF - **AG01**

①

②

③

① Adapter material


—	Aluminium
S	Stainless steel (Stainless steel 304)

③ Connection thread (Male thread)

AG01	G1/8
AG02	G1/4

Model								E	F	G	H	J	Weight [g]		Min. opening hole size of the adapter
① Adapter material	Vacuum inlet direction	② Pad dia.	Form	Number of bellows stages	Material	③ Connection thread	Aluminum						Stainless steel		
ZP3P	— S	T	JT	5	SF	AG01	35.2	5.5	G1/8	18	17	8.3	15.6	Ø 5	
						AG01	39					10.1	17.4		
						AG01	51	5.5	G1/8	29	27	28.4	55.4	Ø 5.7	
								AG02	6.5			G1/4	28.2	54.6	Ø 8
						AG01	57.5	5.5	G1/8	33.9	60.9	Ø 5.7			
								AG02	6.5	G1/4	33.7	60.1	Ø 8		
						AG01	65	5.5	G1/8	40.5	67.5	Ø 5.7			
								AG02	6.5	G1/4	40.2	66.6	Ø 8		

With adapter Direct mounting type (Female thread)

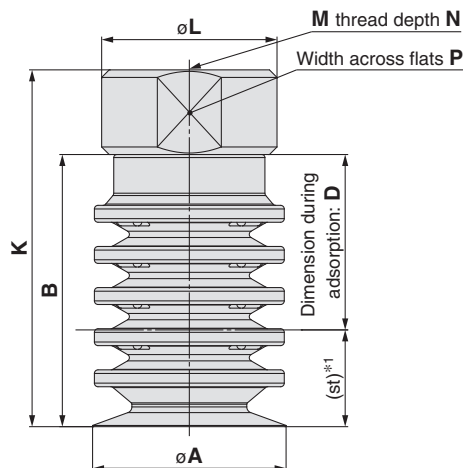

*1 Same dimension as the pad unit

ZP3P **1** - T **20** JT5SF - **BG01**

①

②

③

① Adapter material

—	Aluminium
S	Stainless steel (Stainless steel 304)


③ Connection thread (Female thread)

BG01	G1/8
BG02	G1/4

Model							K	L	M	N	P	Weight [g]		Min. opening hole size of the adapter	
① Adapter material	Vacuum inlet direction	② Pad dia.	Form	Number of bellows stages	Material	③ Connection thread						Aluminum	Stainless steel		
ZP3P	— S	T	20	JT	5	SF	BG01	42.2	18	G1/8	7.4	17	11	23.9	Ø 5
			25					46					12.8	25.7	
			32					59					37.7	83.6	
			40				BG02	65.5	29	G1/4	11	27	43.2	89.1	Ø 8
			50					73					49.8	95.7	

Dimensions/Models

With adapter Plate mounting type (Male/Female thread)

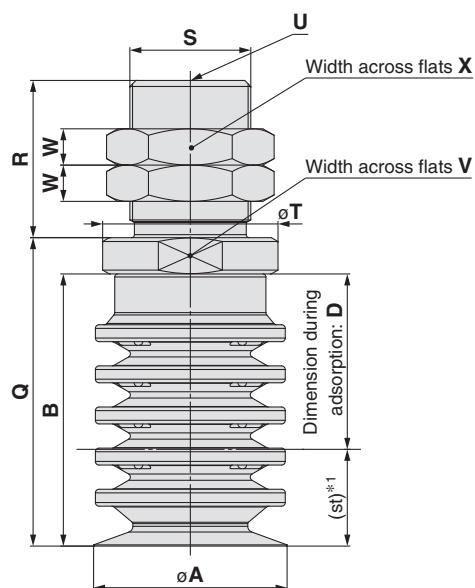

*1 Same dimension as the pad unit

ZP3P - **T** 20 **JT5SF** - A16 - B01

① Adapter material

—	Aluminium
S	Stainless steel (Stainless steel 304)

③ Connection thread (Male thread)


A16	M16 x 1
A20	M20 x 1

④ Vacuum inlet (Female thread)

B01	Rc1/8
BN01	NPT1/8
B02	Rc1/4
BN02	NPT1/4

Model									Q	R	S	T	U	V	W	X	Weight [g]		Min. opening hole size of the adapter
① Adapter material	Vacuum inlet direction	② Pad dia.	Form	Number of bellows stages	Material	③ Connection thread	④ Vacuum inlet	Aluminum									Stainless steel		
ZP3P	— S	T	20	JT	5	SF	A16	B01	35.2	22	M16 x 1	18	Rc1/8	17	5	19	25.8	51.5	Ø 5
								BN01					NPT1/8				25.7	47.9	
								B01	39				Rc1/8				27.5	53.2	
								BN01					NPT1/8				27.4	49.6	
			25	JT	5	SF	A20	B02	51	26	M20 x 1	29	Rc1/4	27	6	24	60.8	114	Ø 8
								BN02					NPT1/4				60.6	114	
								B02	57.5				Rc1/4				66.3	120	
								BN02					NPT1/4				66.1	119	
			32	JT	5	SF	A20	B02	65	26	M20 x 1	29	Rc1/4	27	6	24	72.9	126	Ø 8
								BN02					NPT1/4				72.7	126	
								B02					Rc1/4						
								BN02					NPT1/4						
40	JT	5	SF	A20	B02		26	M20 x 1	29	Rc1/4	27	6	24	72.9	126	Ø 8			
					BN02					NPT1/4									
					B02					Rc1/4									
					BN02					NPT1/4									
50	JT	5	SF	A20	B02		26	M20 x 1	29	Rc1/4	27	6	24	72.9	126	Ø 8			
					BN02					NPT1/4									
					B02					Rc1/4									
					BN02					NPT1/4									

With adapter Plate mounting type (Male thread/One-touch fitting)

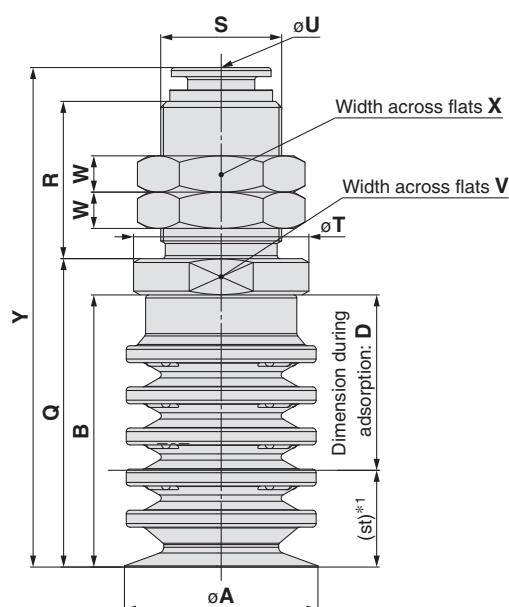

*1 Same dimension as the pad unit

ZP3P - **T** 20 **JT5SF** - A16 - 08

① Adapter material

—	Aluminium
S	Stainless steel (Stainless steel 304)

③ Connection thread (Male thread)

A16	M16 x 1
A20	M20 x 1

④ Vacuum inlet (One-touch fitting)

08	Ø 8
10	Ø 10

Model									Q	R	S	T	U	V	W	X	Y	Weight [g]		Min. opening hole size of the adapter
① Adapter material	Vacuum inlet direction	② Pad dia.	Form	Number of bellows stages	Material	③ Connection thread	④ Vacuum inlet	Aluminum										Stainless steel		
ZP3P	— S	T	20	JT	5	SF	A16	08	35.2	22	M16 x 1	18	8	17	5	19	62.1	26.6	47.5	Ø 5
			25					39	65.9								28.4	49.3		
			32					51	82.4								63.2	117		
			40					57.5	88.9								68.4	122		
			50				A20	10	65	26	M20 x 1	29	10	27	6	24	96.4	75.1	129	Ø 7.5


Vacuum Pad **ZP3P-JT Series**

5.5-Stage/Bellows Type

Construction

Direct mounting type (Male thread)

ZP3P□-T□JT5SF-A□

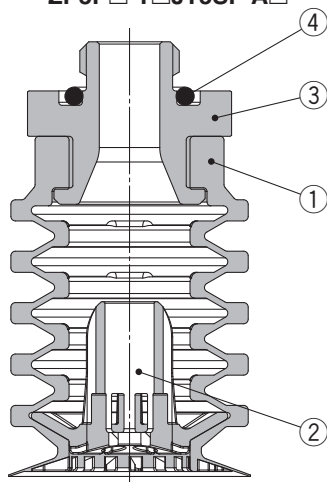

Direct mounting type (Female thread)

ZP3P□-T□JT5SF-B□

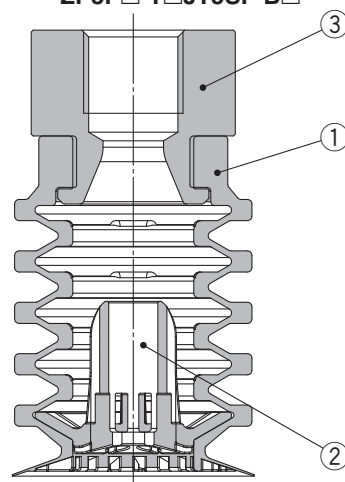


Plate mounting type (Male/Female thread)

ZP3P□-T□JT5SF-A□-B□


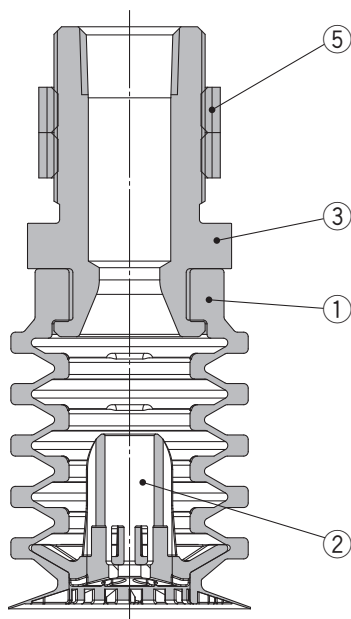


Plate mounting type (Male thread/One-touch fitting)

ZP3P□-T□JT5SF-A□-□

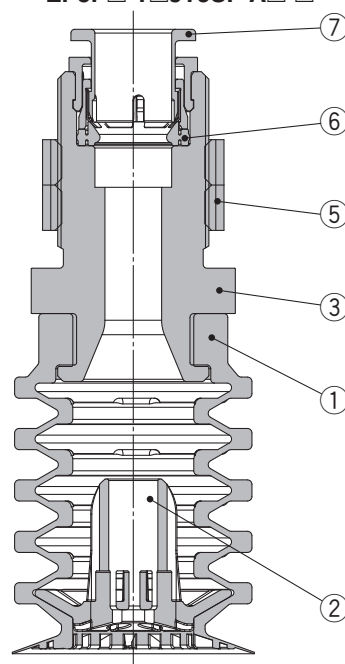

Component Parts

No.	Description	Material (Surface treatment)	Note
1	Bellows pad	Silicone rubber*1 *2	
2	Guide attachment	Synthetic resin*1 *3	
3	Adapter	Aluminium alloy (Anodized)	ZP3P-T□
		Stainless steel	ZP3PS-T□
4	O-ring	Silicone rubber	
5	Mounting nut	Steel (Trivalent zinc chromated)	ZP3P-T□
		Stainless steel	ZP3PS-T□
6	Seal	NBR	ZP3P-T□
		FKM	ZP3PS-T□
7	Cassette	—	

*1 Compliant with FDA (U.S. Food and Drug Administration) regulation 21CFR§177.

*2 Compliant with the standards for "Rubber apparatus (excluding baby drinking apparatus) and containers/packaging" (D3) (Partial revision: Ministry of Health, Labour, and Welfare Notification No. 595, 2012) in Section 3 "Apparatus and Containers/Packaging" of the Food Sanitation Act, Article 18 "Specifications and Standards for Food and Food Additives, etc." (Ministry of Health and Welfare Notification No. 370, 1959)

*3 Compliant with the standards for "Synthetic resin apparatus and containers/packaging" (D2) in Section 3 "Apparatus and Containers/Packaging" of the Food Sanitation Act, Article 18 "Specifications and Standards for Food and Food Additives, etc." (Ministry of Health and Welfare Notification No. 370, 1959)

Replacement Parts

Pad Unit (Without guide attachment)



Part number	Applicable pad dia.
ZP3P-20JT5SF	Ø 20
ZP3P-25JT5SF	Ø 25
ZP3P-32JT5SF	Ø 32
ZP3P-40JT5SF	Ø 40
ZP3P-50JT5SF	Ø 50

Guide Attachment Unit

Part number	Applicable pad dia.
ZP3PWG-20JT5	Ø 20
ZP3PWG-25JT5	Ø 25
ZP3PWG-32JT5	Ø 32
ZP3PWG-40JT5	Ø 40
ZP3PWG-50JT5	Ø 50

Vacuum Pad *ZP3P-JT Series* Mounting Bracket Assembly



■ Adapter Assembly: Direct Mounting Type

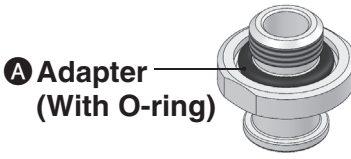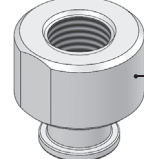Product part number	2.5-stage ZP3P ☐ - T ^① JT2SF - ☐ - ^② 5.5-stage ZP3P ☐ - T ^① JT5SF - ☐ - ^②			Adapter material (Aluminum/Stainless steel) Pad diameter Connection thread (Male/Female thread) Attachment
Component parts	Male thread  A Adapter (With O-ring)		Female thread  A Adapter	

A Adapter	② Connection thread	Type	Size	Symbol	① Pad diameter symbol				
					20	25	32	40	50
A	②	Male thread	G1/8	AG01	ZP3P ☐ A-T1JT-AG01		ZP3P ☐ A-T2JT-AG01		
			G1/4	AG02	ZP3P ☐ A-T1JT-AG02*1		ZP3P ☐ A-T2JT-AG02		
			G3/8	AG03	ZP3P ☐ A-T1JT-AG03*1		ZP3P ☐ A-T2JT-AG03*1		
			G1/2	AG04	—		ZP3P ☐ A-T2JT-AG04*1		
A	②	Female thread	G1/8	BG01	ZP3P ☐ A-T1JT-BG01		—		
			G1/4	BG02	—		ZP3P ☐ A-T2JT-BG02		

*1 2.5-stage bellows only

■ Adapter Assembly: Plate Mounting Type

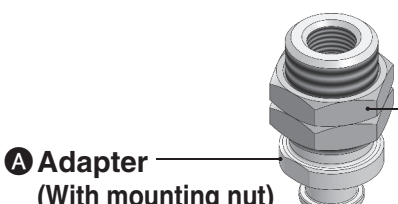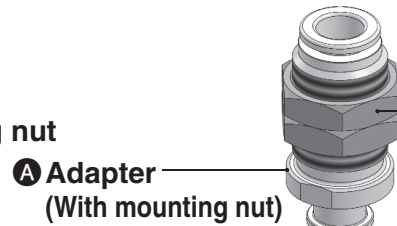Product part number	2.5-stage ZP3P ☐ - T ^① JT2SF - ☐ - ^② - ^③ 5.5-stage ZP3P ☐ - T ^① JT5SF - ☐ - ^② - ^③			Adapter material (Aluminum/Stainless steel) Pad dia. Attachment Vacuum inlet Connection thread (Male thread)
Component parts	Male/Female thread  A Adapter (With mounting nut)		Male thread/One-touch fitting  A Adapter (With mounting nut)	

A Adapter	2 Connection thread	Type	Size	Symbol	3 Vacuum inlet	Type	Size	Symbol	1 Pad diameter symbol				
						20	25	32	40	50			
B Mounting nut (Single unit) (Sales unit: 10 pcs.)	Male thread	M16 x 1	A16	3 Vacuum inlet	Female thread	Rc1/8	B01	ZP3P□A-T1JT-A16-B01		—			
						NPT1/8	BN01	ZP3P□A-T1JT-A16-BN01		—			
		M20 x 1	A20		One-touch fitting	Ø 8	08	ZP3P□A-T1JT-A16-08		—			
						Female thread	Rc1/4	B02	—		ZP3P□A-T2JT-A20-B02		
					NPT1/4		BN02	—		ZP3P□A-T2JT-A20-BN02			
					One-touch fitting	Ø 10	10	—		ZP3P□A-T2JT-A20-10			
	Adapter material	Aluminum	M16 x 1		KQ08-P01A		—						
			M20 x 1		—		KQ10-P01A						
		Stainless steel	M16 x 1		ZPSNA-M16A		—						
			M20 x 1		—		ZPSNA-M20						



ZP3P-JT Series

Vacuum Pad/Specific Product Precautions

Be sure to read this before handling the products. Refer to the back cover for safety instructions. For vacuum equipment precautions, refer to the “Handling Precautions for SMC Products” and the “Operation Manual” on the SMC website: <https://www.smc.eu>


Operating Precautions

⚠ Caution

1. When mounting the product, tighten with the tightening torque shown in the table below.


If excessive or insufficient tightening torque is applied, sealing failure or loose screws may result.

Direct mounting type
(Male thread)

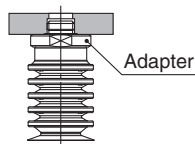


Product part number	Connection thread size	Proper tightening torque [N·m]
ZP3P□-T□JT□-□-AG01	G1/8	3 to 5
ZP3P□-T□JT□-□-AG02	G1/4	8 to 12
ZP3P□-T□JT2-□-AG03	G3/8	15 to 20
ZP3P□-T□JT2-□-AG04	G1/2	20 to 25

Direct mounting type
(Female thread)

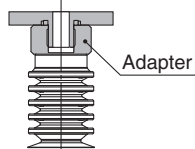

Product part number	Connection thread size	Proper tightening torque [N·m]
ZP3P□-T□JT□-□-BG01	G1/8	3 to 5
ZP3P□-T□JT□-□-BG02	G1/4	8 to 12

Plate mounting type
(Male/Female thread
(Male thread/One-touch fitting))

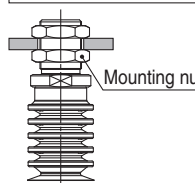

Product part number	Connection thread size	Proper tightening torque [N·m]
ZP3P□-T□JT□-□-A16-□	M16 x 1	7 to 9
ZP3P□-T□JT□-□-A20-□	M20 x 1	14 to 17

2. Depending on the achieved vacuum pressure, the theoretical lifting force may exceed the strength of the vacuum pad, deforming or breaking the pad.

The safety factor should be 16 times or more of the theoretical lifting force for horizontal lifting, and it should be 2.5 times or more for vertical lifting.

[Calculation of theoretical lifting force]

$$W = P \times S \times 0.1 \times \frac{1}{t}$$

W: Lifting force [N]

P: Vacuum pressure [kPa]

S: Pad area [cm²]

t: Safety factor Horizontal lifting: 16 or more
Vertical lifting: 25 or more

3. When a bagged workpiece is lifted, the skirt changes its shape according to the changing shape of the workpiece.

As the vacuum pad skirt changes its shape, the actual lifting force may be below the theoretical lifting force. Before use, please conduct testing with the customer's actual equipment.

4. Mount the attachment for use.

Without the attachment, the vacuum pad will be easily deformed, resulting in adsorption failure.

5. When the vacuum pad is pressed onto the workpiece, make sure it stays within the stroke range.

When the maximum stroke is exceeded, the guide attachment may contact the adapter, leading to malfunction.

6. When the attachment is inserted into the vacuum pad, the attachment may damage or break the skirt if it is pulled with excessive force as the skirt is very thin.

Vacuum pad damage or breakage may lead to adsorption failure.

7. When the achieved vacuum pressure is low (approx. – 20 [kPa]), the vacuum pad does not completely operate its stroke.

When a 5.5-stage bellows is used, and vacuum pressure is approx. – 20 [kPa], the guide function cannot be used effectively because the guide attachment cannot be pulled up into the adapter.

8. Use the product within the operating temperature range.

The heat resistant temperature of the attachment (made of synthetic resin) is 90 °C.

Operate within the specified operating temperature range (–30 to 90 °C).

For temperatures outside of the operating temperature range, contact your local SMC representative.

9. Do not interfere with the vacuum pad stroke with an external stopper.

The vacuum pad will become deformed, resulting in adsorption failure or breakage. In some cases, the workpiece will separate from the pad and fall.

10. Vacuum pads are consumable. Please replace them when cracks, wear, or deformation is confirmed during periodic maintenance.

11. Before use, please check the transfer conditions with the customer's actual equipment.

Products are confirmed as transferable under SMC's specific testing conditions in the table below, but these are not guaranteed values. The transfer ability varies depending on the workpiece material, the friction between the pad and workpiece, moment, wind, vibration, etc. Testing with the customer's actual equipment is necessary.

· SMC's Specific Testing Conditions (Reference)

Pad diameter	Number of bellows stages	Workpiece		Adsorption conditions		Horizontal transfer conditions	
		Material	Load [kg]	Ejector part number	Supply pressure [kPa]	Speed [mm/s]	Acceleration/Deceleration [G]
Ø 20	5.5-stage	Aluminium metalized film	0.17	ZH15D	–85	1000	2
Ø 25			0.27				3
Ø 32			0.5				3
Ø 40			0.7				4
Ø 50			1.1				4

* Adsorption is confirmed for 1 stroke, not for a back and forth or repeated operation.

12. When supplying vacuum release air, do so at a release flow rate of 110 l/min (ANR) or less. Failure to do so may result in damage to the vacuum pads.

Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of “Caution,” “Warning” or “Danger.” They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC) ¹⁾, and other safety regulations.

-  **Caution:** **Caution** indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.
-  **Warning:** **Warning** indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.
-  **Danger:** **Danger** indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

- 1) ISO 4414: Pneumatic fluid power – General rules relating to systems.
ISO 4413: Hydraulic fluid power – General rules relating to systems.
IEC 60204-1: Safety of machinery – Electrical equipment of machines.
(Part 1: General requirements)
ISO 10218-1: Manipulating industrial robots - Safety.
etc.

Warning

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalogue information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

3. Do not service or attempt to remove product and machinery/equipment until safety is confirmed.

1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.

4. Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions.

1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalogue.
3. An application which could have negative effects on people, property, or animals requiring special safety analysis.
4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

Caution

1. The product is provided for use in manufacturing industries.

The product herein described is basically provided for peaceful use in manufacturing industries.
If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary.
If anything is unclear, contact your nearest sales branch.

Limited warranty and Disclaimer/Compliance Requirements

The product used is subject to the following “Limited warranty and Disclaimer” and “Compliance Requirements”. Read and accept them before using the product.

Limited warranty and Disclaimer

1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first. ²⁾ Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
 2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
 3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalogue for the particular products.
- 2) Vacuum pads are excluded from this 1 year warranty.
A vacuum pad is a consumable part, so it is warranted for a year after it is delivered. Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

Compliance Requirements

1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

Caution

SMC products are not intended for use as instruments for legal metrology.

Measurement instruments that SMC manufactures or sells have not been qualified by type approval tests relevant to the metrology (measurement) laws of each country.
Therefore, SMC products cannot be used for business or certification ordained by the metrology (measurement) laws of each country.

Safety Instructions

Be sure to read “Handling Precautions for SMC Products” (M-E03-3) before using.

Revision History

Edition B	- The 2.5-stage bellows type has been added. - Plate mounting (One-touch fitting) has been added to the 5.5-stage bellows type. - Number of pages has been increased from 12 to 16.	YV
------------------	---	----

SMC Corporation (Europe)

Austria	+43 (0)2262622800	www.smc.at	office@smc.at
Belgium	+32 (0)33551464	www.smc.be	info@smc.be
Bulgaria	+359 (0)2807670	www.smc.bg	office@smc.bg
Croatia	+385 (0)13707288	www.smc.hr	office@smc.hr
Czech Republic	+420 541424611	www.smc.cz	office@smc.cz
Denmark	+45 70252900	www.smc.dk.com	smc@smcdk.com
Estonia	+372 651 0370	www.smcee.ee	info@smcee.ee
Finland	+358 207513513	www.smc.fi	smcfr@smc.fi
France	+33 (0)164761000	www.smc-france.fr	supportclient@smc-france.fr
Germany	+49 (0)61034020	www.smc.de	info@smc.de
Greece	+30 210 2717265	www.smchellas.gr	sales@smchellas.gr
Hungary	+36 23513000	www.smc.hu	office@smc.hu
Ireland	+353 (0)14039000	www.smcautomation.ie	sales@smcautomation.ie
Italy	+39 03990691	www.smcitalia.it	mailbox@smcitalia.it
Latvia	+371 67817700	www.smc.lv	info@smc.lv

Lithuania	+370 5 2308118	www.smclt.lt	info@smclt.lt
Netherlands	+31 (0)205318888	www.smc.nl	info@smc.nl
Norway	+47 67129020	www.smc-norge.no	post@smc-norge.no
Poland	+48 222119600	www.smc.pl	office@smc.pl
Portugal	+351 214724500	www.smc.eu	apoioclientept@smc.smces.es
Romania	+40 213205111	www.smcromania.ro	smcromania@smcromania.ro
Russia	+7 (812)3036600	www.smc.eu	sales@smcru.com
Slovakia	+421 (0)413213212	www.smc.sk	office@smc.sk
Slovenia	+386 (0)73885412	www.smc.si	office@smc.si
Spain	+34 945184100	www.smc.eu	post@smc.smces.es
Sweden	+46 (0)86031240	www.smc.nu	smc@smc.nu
Switzerland	+41 (0)523963131	www.smc.ch	info@smc.ch
Turkey	+90 212 489 0 440	www.smcturkey.com.tr	satis@smcturkey.com.tr
UK	+44 (0)845 121 5122	www.smc.uk	sales@smc.uk

South Africa	+27 10 900 1233	www.smcza.co.za	zasales@smcza.co.za
---------------------	-----------------	-----------------	---------------------