


Circulating Fluid Temperature Controller

Thermo-chiller Basic Type

New
CE RoHS

Large energy saving
by triple control!

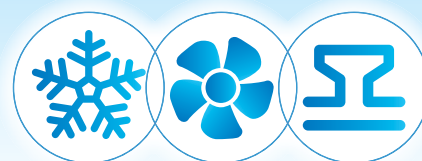


Compressor Fan Valve

Triple control

Compressor ON/OFF

Air-cooled condenser fan

Electronic valve control

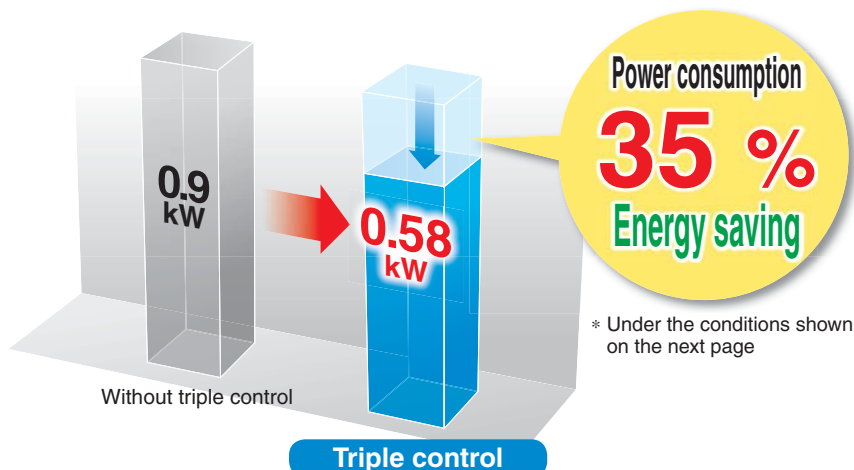

Cooling capacity **1.0, 1.4, 1.9 kW**

Max. ambient temperature **40 °C**

Set temperature range **10 to 30 °C**

Temperature stability **±2.0 °C**

Maintenance free **Magnet pump**

Low-noise design **57 dB (A)**

Power supply **230 VAC 50 / 60 Hz**

Compact/Lightweight **35 kg**



Series HRSE



CAT.EUS40-58B-UK


Simple function and performance

Cooling capacity 1.0, 1.4, 1.9 kW (50 Hz)

Power supply 230 VAC (50 / 60 Hz)

Triple control

Compressor, fan and electronic control valve can be controlled depending on the heat load from the user's equipment.

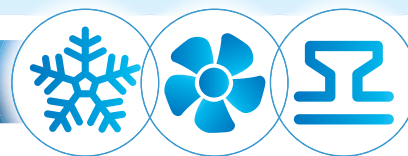

Compressor Fan Valve

Triple control

Power consumption


reduced by **35 %**

Conditions

• 230 VAC • Frequency: 50 Hz • Circulating fluid temperature in the rated operation: 20 °C • Ambient temperature: 25 °C • Load: 1200 W • Flow rate: 7 l/min

Circuit diagram

* This circuit construction of the position of the parts may be different from actual product.

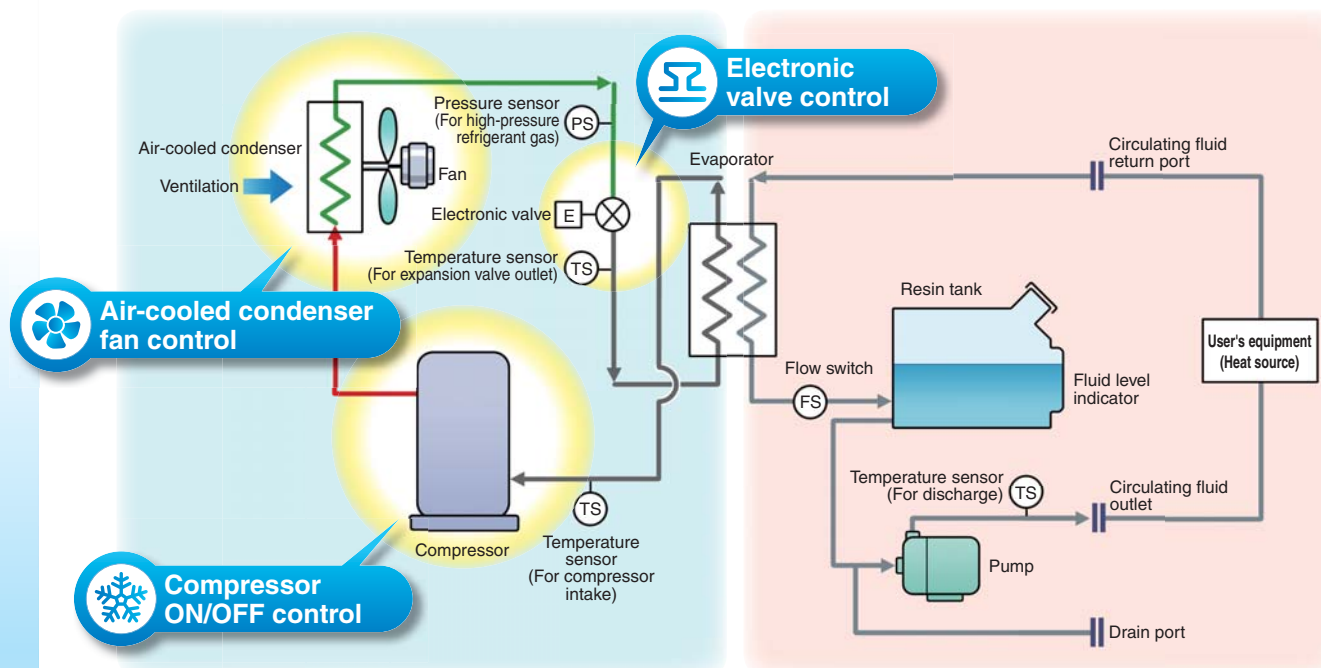

Refrigeration circuit

- The compressor compresses the refrigerant gas, and discharges the high temperature and high pressure refrigerant gas.
- The high temperature and high pressure refrigerant gas is cooled down by an air-cooled condenser with the ventilation of the fan, and becomes a liquid.
- The liquefied high pressure refrigerant gas expands and its temperature lowers when it passes through the electronic valve and vaporises by taking heat from the circulating fluid in the evaporator.
- The vaporised refrigerant gas is sucked into the compressor and compressed again.

Point Refrigeration circuit control system requires the minimum basic essential function.

According to the amount of heat generated from user's equipment, the system turns power ON/OFF to the compressor and controls the electronic valve. By combining the above function, the system also controls the number of rotations of the fan that is appropriate to the amount of heat and ambient temperature, to provide the performance of temperature control of ± 2 °C.

Circulating fluid circuit


- The circulating fluid discharged from the pump, is heated by the user's equipment and returns to the tank.
- The circulating fluid is sent to the evaporator by the pump, and is controlled to a set temperature by the refrigeration circuit, to be discharged to the user's equipment side again by the thermo-chiller.

Point Temperature control system requires the minimum basic essential function.

Signal of temperature sensor for pump discharging controls the refrigeration circuit. Circulating fluid is heated by the pump heat and the amount of heat generated from user's equipment.

Thermo-chiller of the basic type €


Simple operation

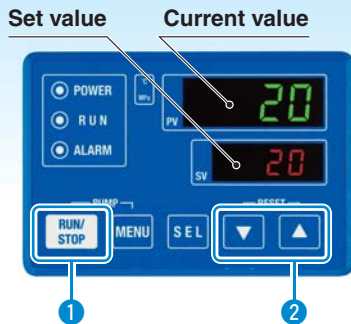

Step 1
 Press the **RUN/STOP** key.

Step 2
 Adjust the temperature setting with the **▼** / **▲** keys.

Immediate usage after fitting plug to power supply



Shaped for easy supply of circulating fluid

Easy to supply circulating fluid even the product is installed under a laboratory work bench or two products are stacked.

Easy check of the circulating fluid level

Easy to check the circulating fluid level at a glance!


No tools are required to mount/remove the front panel.

Easy to mount/remove due to magnet type!

Easy to clean dust and cutting chips etc. stuck to the dustproof net by brush or air blow.



With casters (Removable)

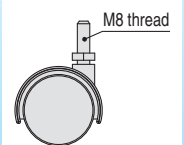


Option

High pressure pump mounted

For large piping resistance

Bypass piping set


When the circulating fluid goes below the rated flow (7 l/min), cooling capacity will be reduced or the temperature stability will be badly affected. In such a case, use the bypass piping set.

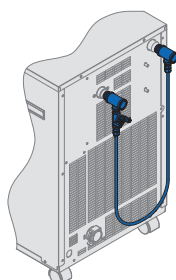

Optional Accessories


Replacement type dustproof filter set

Suitable for use in excessively dusty atmospheres. The disposable type filter saves time and effort of cleaning.

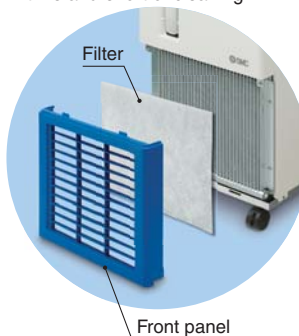


Particle filter set

Removes foreign objects in the circulating fluid.

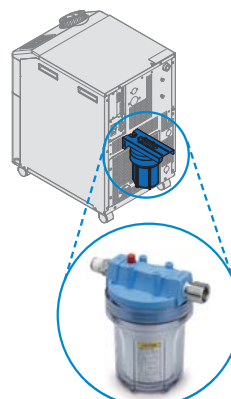



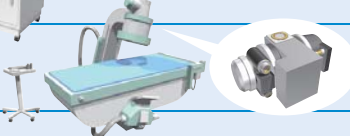
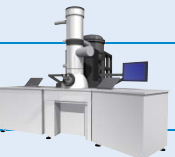


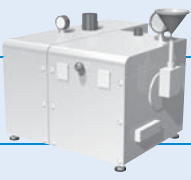
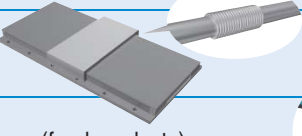
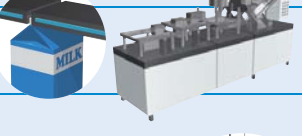
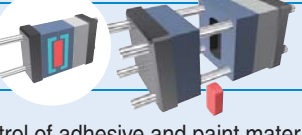

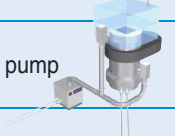




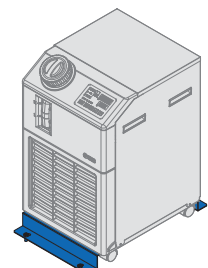





Anti-quake bracket

Measures against earthquake. It can be fixed to the floor or base.

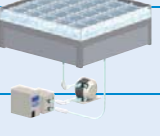

Application Examples

	Heat source	Automotive	Light electrical appliance	Food	Machinery	Medical	Semiconductor
Arc welding machine 	Torch	●			●		
Resistance welding machine 	Tip	●	●		●		
Laser welding machine 	Oscillator	●	●		●		●
UV curing device 	Lamp	●	●	●		●	
X-ray instrument 			●			●	●
Electronic microscope 	Lens		●			●	●
Laser marker 	Oscillator	●	●	●		●	●
Ultra sonic wave inspection machine 		●	●		●		
Atomizing device/ Crushing equipment 	Blade			●			
Linear motor 	Motor	●			●		
Packaging machines (food products) 	Dies/ Welded portions			●			
Mold cooling 	Mold	●	●	●		●	
Temperature control of adhesive and paint material 	Paint material/ Welding materials	●	●	●			
Cooling of vacuum pump 	Pump	●					●
Shrink fit machine 	Workpiece	●			●		
Gas cylinder cabinet 							●
Concentrating equipment 	Test liquid			●		●	
Reagent cooling equipment 	Reagent			●		●	●
Cleaning machine (hydrocarbon-based) 	Cleaning tank	●	●		●		
Printing machine 	Roller		●	●	●		
Chamber electrode 	Electrode						●
High frequency induction heating equipment 	Power supply/ Heating coil	●			●		

Global Supply Network

SMC has a comprehensive network in the global market.





We now have a presence of more than 400 branch offices and distributors in 78 countries world wide such as Asia, Oceania, North/Central/South America, and Europe. With this global network, we are able to provide a global supply of our substantial range of products with the best service.



SMC Thermo-chiller Variations


Lots of variations are available in response to the users' requirements.

As of November 2014

Series	Temperature stability [°C]	Set temperature range [°C]	Approximate cooling capacity [kW]												Environment	Power supply
			1.2	1.8	2.4	3	5	6	10	11	15	20	25			
 HRSE Basic type	±2.0	10 to 30	●	●	●									Indoor use	Single-phase 230 VAC (50 / 60 Hz)	
 HRS Standard type	±0.1	5 to 40	●	●	●	●	●	●						Indoor use	Single-phase 100 to 115 VAC (50 / 60 Hz)* Single-phase 200 to 230 VAC (50 / 60 Hz)	
 HRSH090 Inverter type	±0.1	5 to 40							●					Indoor use	3-phase 380 to 415 VAC (50 / 60 Hz)	
 HRSH Inverter type	±0.1	5 to 35								●	●	●	●	Outdoor installation IPX4	3-phase 200 VAC (50 Hz) 3-phase 200 to 230 VAC (60 Hz) 3-phase 380 to 415 VAC (50 / 60 Hz)	

* Only available for lower cooling capacities.

Circulating Fluid Line Equipment

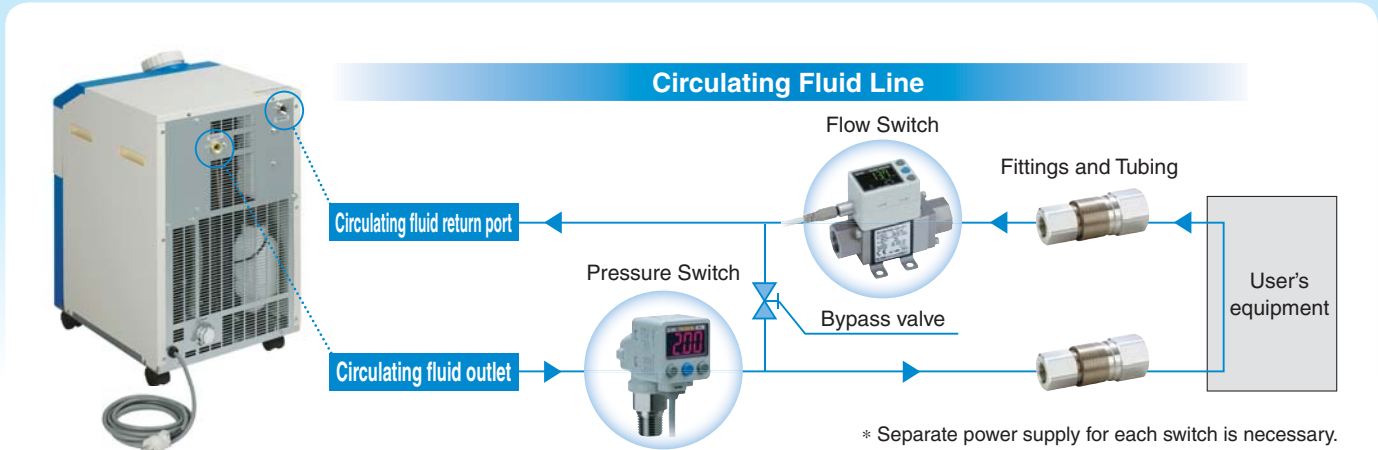

Pressure Switch

2-Colour Display
High-Precision Digital Pressure Switch
Series ISE80



Flow Switch

3-Colour Display
Digital Flow Switch for Water
Series PF3W



3-Colour Display
Electromagnetic Type
Digital Flow Switch
Series LFE



Fittings and Tubing

S Coupler
Series KK



S Coupler/Stainless Steel
(Stainless Steel 304)
Series KKA



Metal One-touch Fittings
Series KQB2



Stainless Steel 316
One-touch Fittings
Series KQG2



Stainless Steel 316
Insert Fittings
Series KFG2



Tubing
Series T □



Series	Material
T	Nylon
TU	Polyurethane
TH	FEP (Fluoropolymer)
TD	Modified PTFE (Soft fluoropolymer)
TL	Super PFA

For details of these products, refer to the catalogues on www.smc.eu.

CONTENTS

Series **HRSE** Basic Type



● Thermo-chiller Series **HRSE**

How to Order/Specifications	Single-phase 230 VAC ...	Page 7
Cooling Capacity		Page 8
Pump Capacity		Page 8
Dimensions		Page 9
Operation Display Panel		Page 10
Alarm		Page 10

● Option

High Pressure Pump Mounted	Page 11
----------------------------------	---------

● Optional Accessories

① Anti-quake Bracket	Page 11
② Bypass Piping Set	Page 11
③ Replacement Type Dustproof Filter Set	Page 12
④ Particle Filter Set	Page 12

● Cooling Capacity Calculation

Required Cooling Capacity Calculation	Page 13
Precautions on Cooling Capacity Calculation ...	Page 14
Circulating Fluid Typical Physical	Page 14
Property Values	

Specific Product Precautions	Page 15
------------------------------------	---------

Thermo-chiller

Basic Type

Series HRSE



How to Order

Single-phase 230 VAC

HRSE 018 - A - 23 -

Cooling capacity

012	Cooling capacity 1000 / 1200 W (50 / 60 Hz)
018	Cooling capacity 1400 / 1600 W (50 / 60 Hz)
024	Cooling capacity 1900 / 2200 W (50 / 60 Hz)

Cooling method

A	Air-cooled refrigeration
---	--------------------------

Option

Symbol	Option
—	None
T	High pressure pump mounted (Note)

Note) The cooling capacity will decrease by about 100 W from the value in the catalogue. The performance is different between product models. Make sure to check the pump capacity before selecting models.

Power supply

Symbol	Power supply
23	Single-phase 230 VAC (50 / 60 Hz)

Specifications

* There are different values from standard specifications.

Model		HRSE012-A-23-(T)	HRSE018-A-23-(T)	HRSE024-A-23-(T)
Cooling method		Air-cooled refrigeration		
Refrigerant		R407C (HFC)		
Control method		Compressor ON/OFF		
Ambient temperature/Humidity/Altitude (Note 1), (11)		Temperature: 5 to 40 °C, Humidity: 30 to 70 %, Altitude: less than 3000 m		
Circulating fluid system	Circulating fluid (Note 2)	Tap water, 15 % ethylene glycol aqueous solution		
	Set temperature range (Note 1) °C	10 to 30		
	Cooling capacity (Note 3), (11) W	1000 / 1200 For option -T: 900 / 1100	1400 / 1600 For option -T: 1300 / 1500	1900 / 2200 For option -T: 1800 / 2100
	Temperature stability (Note 4) °C	±2		
	Pump capacity (Note 5) (50 / 60 Hz) MPa	0.08 (at 7 l/min)/0.11 (at 7 l/min) For option -T: 0.13 (at 7 l/min)/0.18 (at 7 l/min)		
	Rated flow (Note 6) (50 / 60 Hz) l/min	7/7		
	Tank capacity L	Approx. 5		
	Port size	Rc 1/2		
Fluid contact material		Stainless steel, Copper (Heat exchanger brazing), Bronze, Brass, Ceramic, Carbon, PP, PE, POM, EPDM, PVC		
Electrical system	Power supply	Single-phase 230 VAC 50 / 60 Hz Allowable voltage range ±10 %		
	Fuse A	15		
	Power cable size (Note 10) —	3 cores x 14 AWG (2.0 mm ²), 3 m		
	Applicable earth leakage breaker capacity (Note 7) A	15		
	Rated operating current (Note 3) A	4.1 / 5.0 For option -T: 4.5 / 5.4	4.2 / 5.3 For option -T: 4.6 / 5.7	4.3 / 5.4 For option -T: 4.7 / 5.8
	Rated power consumption (Note 3) VA	0.58 / 0.74 For option -T: 0.66 / 0.82	0.73 / 0.86 For option -T: 0.81 / 0.94	0.87 / 1.04 For option -T: 0.93 / 1.10
Dimensions (Note 8) mm		W377 x D435 x H615 For option -T: W377 x D500 x H615		
Accessories		Fitting (for drain outlet) 1 pc., Operation Manual (for installation/operation) 1		
Weight (Note 9) kg		35 For option -T: 42		

Note 1) It should have no condensation. During seasons or in locations where the ambient temperature is likely to fall below freezing point, please contact SMC for that case.
 Note 2) If tap water is used, use water that conforms to Water Quality Standards of the Japan Refrigeration and Air Conditioning Industry Association (JRA GL-02-1994 cooling water system - circulating type - make-up water).

Note 3) ① Ambient temperature: 25 °C, ② Circulating fluid temperature: 20 °C, ③ Circulating fluid rated flow, ④ Circulating fluid: Tap water

Note 4) Temperature at the thermo-chiller outlet when the circulating fluid flow is rated flow, and the circulating fluid outlet and return port are directly connected. Installation environment and the power supply are within specification range and stable.

Note 5) The capacity at the thermo-chiller outlet when the circulating fluid temperature is 20 °C.

Note 6) Required flow rate for cooling capacity or maintaining the temperature stability. The specification of the cooling capacity and the temperature stability may not be satisfied if the flow rate is lower than the rated flow.

Note 7) Purchase an earth leakage breaker with current sensitivity of 30 mA/power supply 230 VAC separately.

Note 8) Dimensions between panels, not including the dimensions of protrusion.

Note 9) Weight in the dry state without circulating fluids.

Note 10) The end parts of all three lead wires of the cable terminal are untreated (bare cut).

Note 11) If the product is used at altitude of 1000 m or higher, refer to "Operating Environment/Storage Environment" (page 16 catalogue) Item 14 "For altitude of 1000 m or higher".


Note 1) If the product is used at altitude of 1000 m or higher, refer to "Operating Environment/Storage Environment" (page 16) Item 14 "* For altitude of 1000 m or higher".

Note 2) For models with high pressure pump mounted (-T), the cooling capacity will decrease by about 100 W from each graph.


Cooling Capacity

HRSE012-A-23-(T)

[50 Hz]

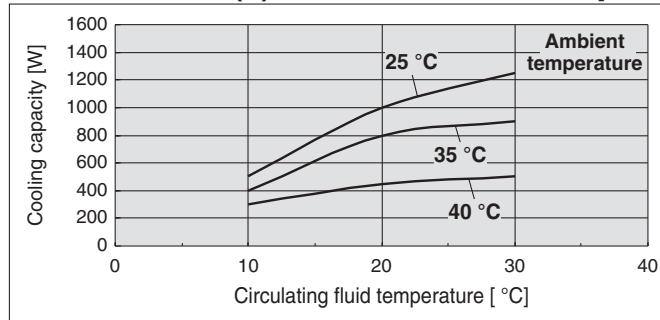


[60 Hz]

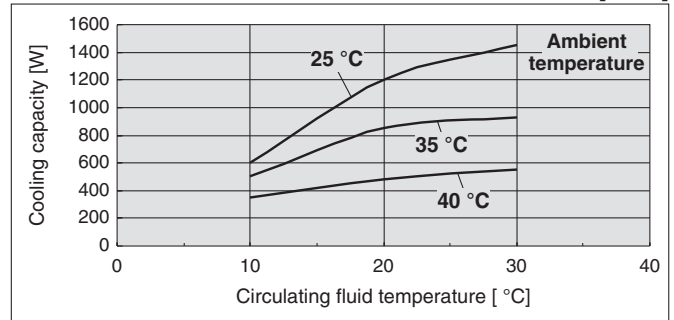


HRSE018-A-23-(T)

[50 Hz]

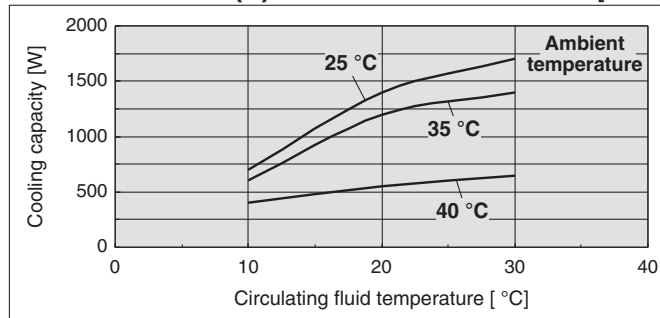


[60 Hz]

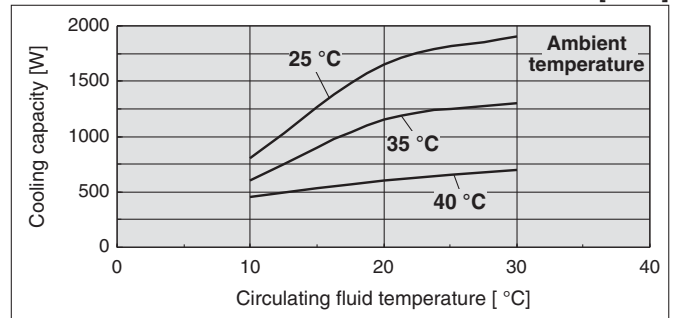


HRSE024-A-23-(T)

[50 Hz]

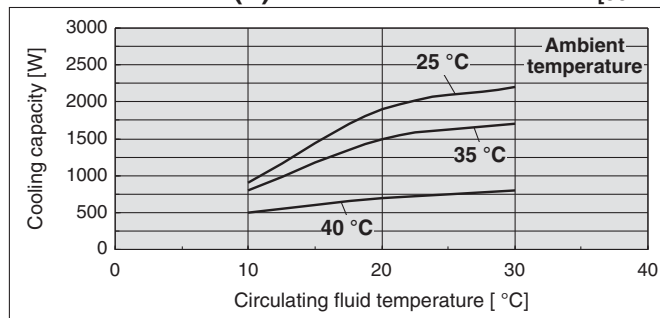


[60 Hz]

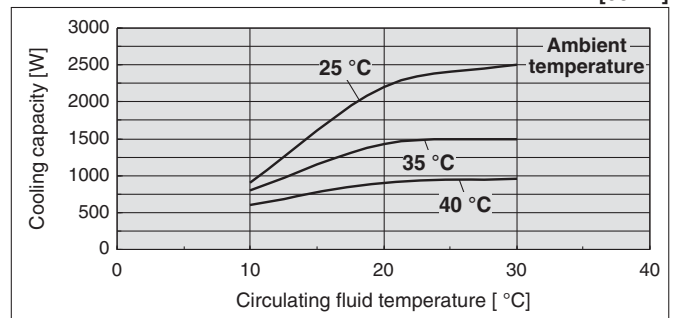


Pump Capacity

HRSE⁰¹²₀₁₈-A-23₀₂₄

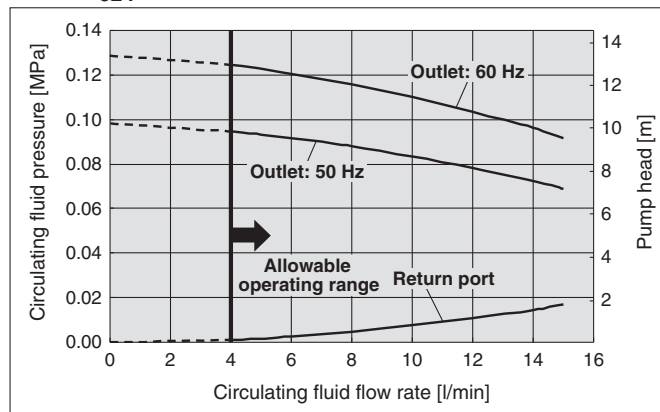


Option (-T): High Pressure Pump Mounted

HRSE⁰¹²₀₁₈-A-23-T₀₂₄

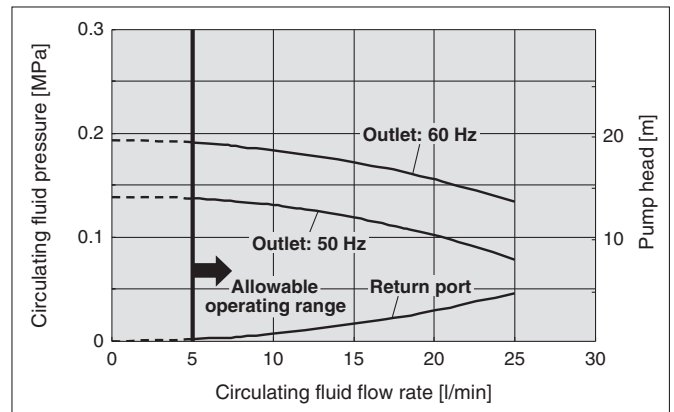


Dimensions


HRSE012/018/024-A-23

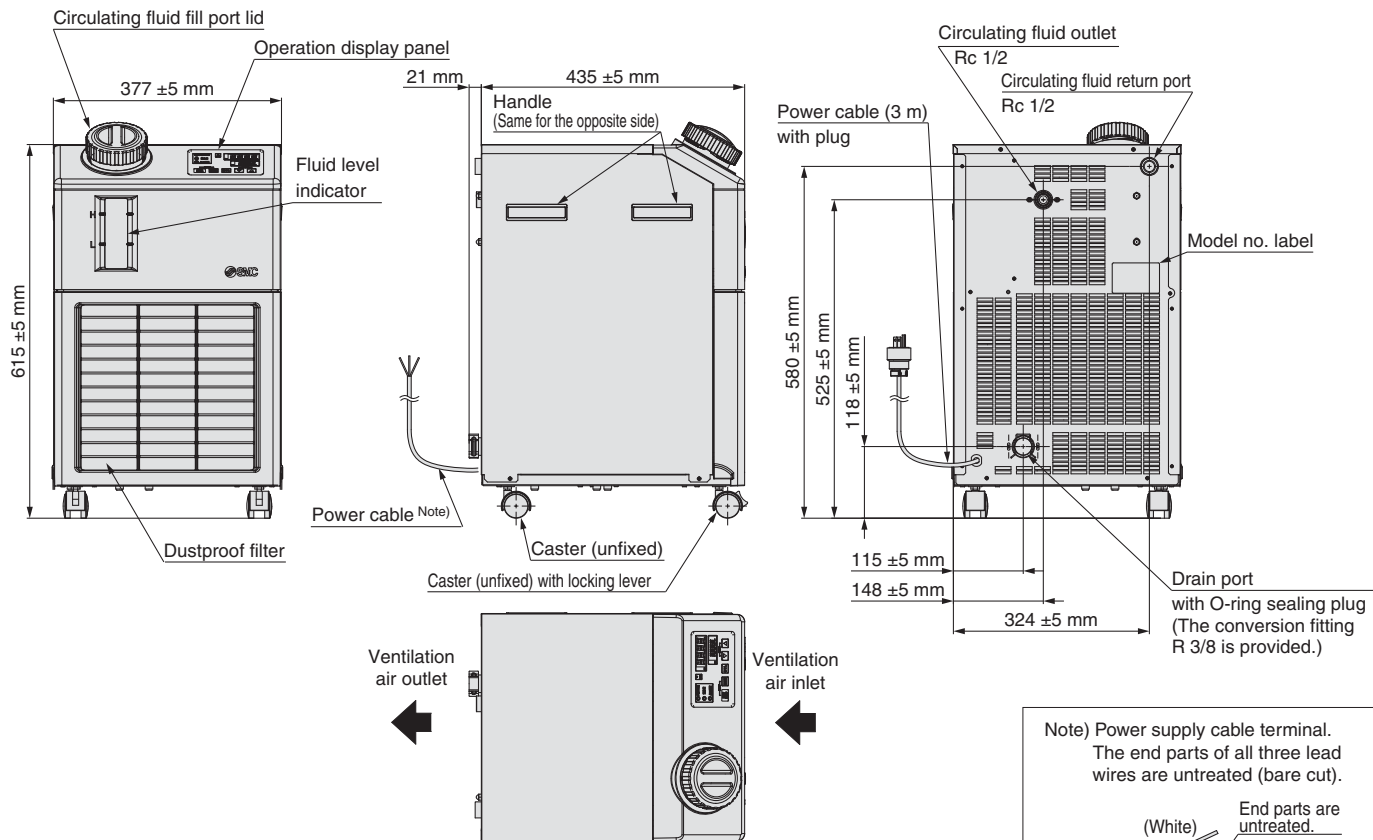

HRSE012/018/024-A-23-T (High pressure pump mounted)

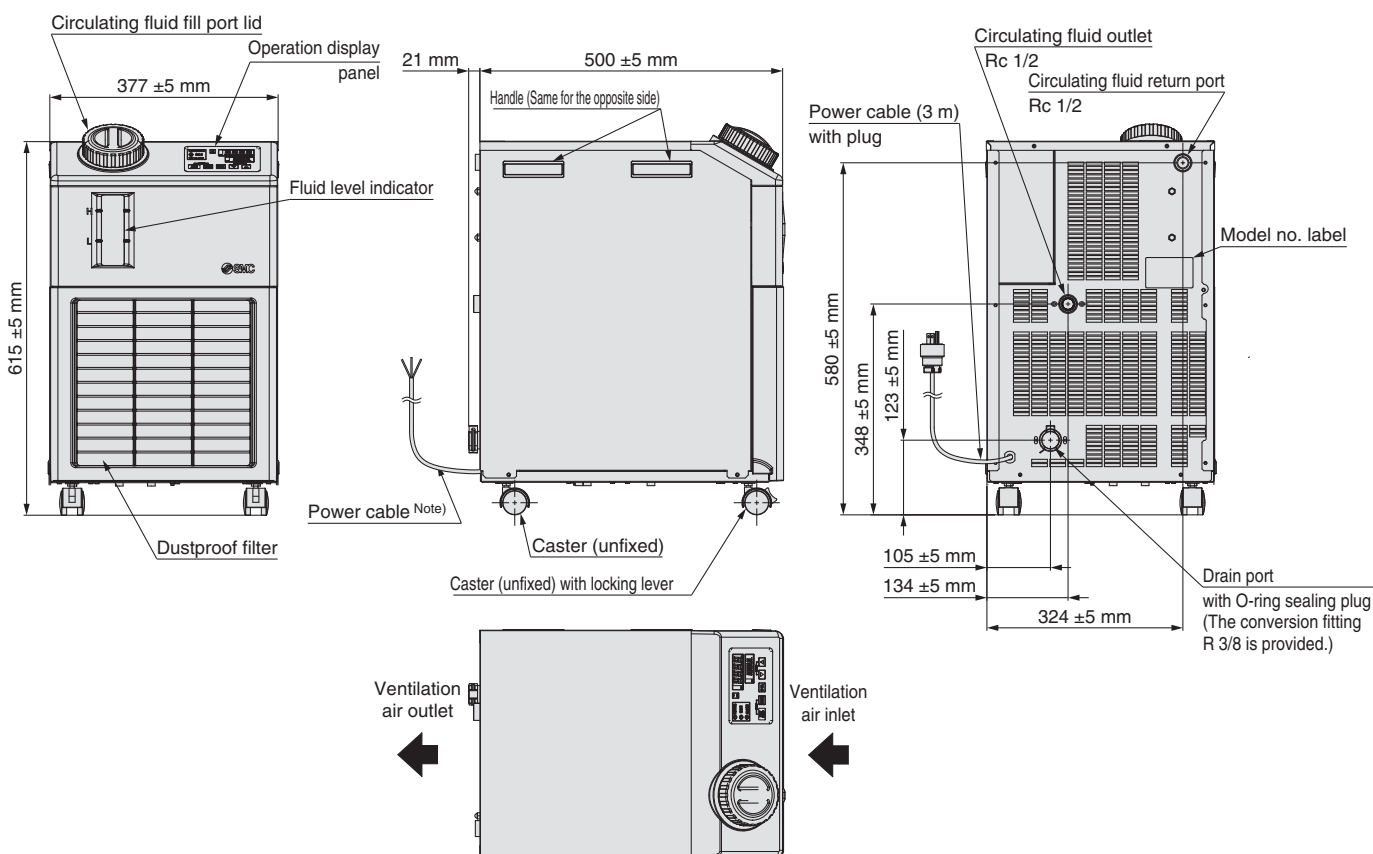

● Operation Display Panel

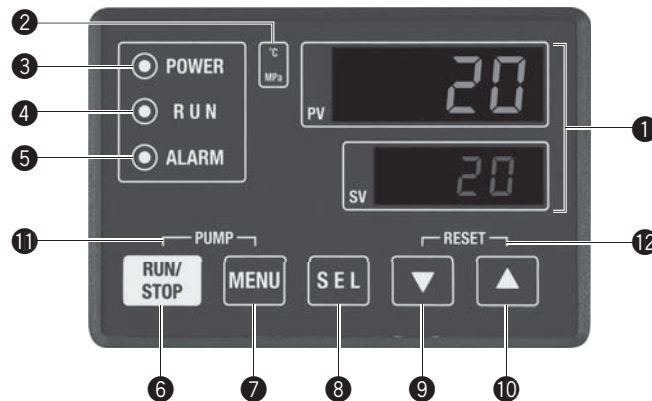

No.	Description	Function	
①	Digital display (7 segment, 4 digits)	PV	Displays the current circulating fluid temperature, pressure, alarm codes and other menu items (codes).
		SV	Displays the set values of the circulating fluid discharge temperature and other menus.
②	[°C] [MPa] lamp	[°C] lamp is turned on when temperature is displayed on the digital display. [MPa] lamp is turned on when pressure is displayed on the digital display.	
③	[POWER] lamp	Lights up when the power is being supplied to the unit.	
④	[RUN] lamp	Lights up during operation, and goes off when it is stopped. Flashes during stand-by for stop or independent operation of the pump.	
⑤	[ALARM] lamp	Flashes with buzzer when alarm occurs.	
⑥	[RUN/STOP] key	Makes the product run or stop.	
⑦	[MENU] key	Shifts the main menu (display screen of circulating fluid discharge temperature and pressure, etc.) and other menus (for monitoring and entry of set values).	
⑧	[SEL] key	Changes the item in menu and enters the set value.	
⑨	[▼] key	Decreases the set value.	
⑩	[▲] key	Increases the set value.	
⑪	[PUMP] key	Press the [MENU] and [RUN/STOP] keys simultaneously. The pump starts running independently to make the product ready for start-up (release the air).	
⑫	[RESET] key	Press the [▼] and [▲] keys simultaneously. The alarm buzzer is stopped and the [ALARM] lamp is reset.	

● Alarm

Code	Alarm message	Operation status
AL02	High circulating fluid discharge temp.	Stop
AL03	Circulating fluid discharge temp. rise	Continue*
AL04	Circulating fluid discharge temp. drop	Continue*
AL07	Abnormal pump operation	Stop
AL20	Memory error	Stop
AL22	Circulating fluid discharge temp. sensor failure	Stop
AL24	Compressor intake temp. sensor failure	Stop
AL26	Compressor discharge pressure sensor failure	Stop
AL27	Heat exchanger inlet temperature sensor	Stop
AL28	Pump maintenance	Continue
AL29	Fan motor maintenance	Continue
AL30	Compressor maintenance	Continue

* "Stop" or "Continue" are default settings. Users can change them to "Continue" and "Stop". For details, read the Operation Manual on <http://www.smc.eu>.

Series *HRSE*

Option/Optional Accessories

Option

Note) Options have to be selected when ordering the thermo-chiller.
It is not possible to add them after purchasing the unit.

T Option symbol

High Pressure Pump Mounted

HRSE - A - 23 - T

● High pressure pump mounted


Possible to choose a high pressure pump in accordance with user's piping resistance.
Cooling capacity will decrease by heat generated in the pump.

Optional Accessories

① Anti-quake bracket

Bracket for earthquakes. Anchor bolt (M8) suitable for the flooring material should be prepared separately by user.
(Anti-quake bracket thickness: 1.6 mm)

Part no. (per unit)	Applicable model	A	B	C	D
HRS-TK003	HRSE012-A-23	240	(335)	505	(540)
	HRSE018-A-23				
	HRSE024-A-23				
	HRSE012-A-23-T	240	(335)	555	(590)
	HRSE018-A-23-T				
	HRSE024-A-23-T				

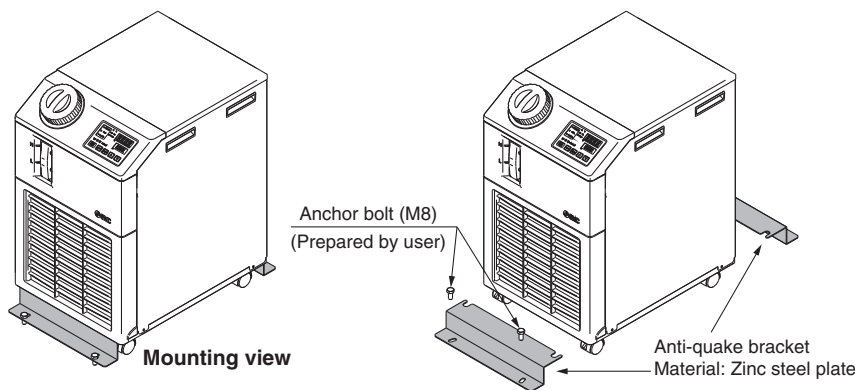


② Bypass piping set

When the circulating fluid goes below the rated flow (7 l/min), cooling capacity will be reduced and the temperature stability will be badly affected. In such a case, use the bypass piping set.
A high pressure pump is also available.

Part no.	Applicable model
HRS-BP001	HRSE012-A-23(-T)
	HRSE018-A-23(-T)
	HRSE024-A-23(-T)

Parts List

No.	Description
①	Bypass tube (700 mm) (Part no.: TL0806)
②	Outlet piping (with ball valve)
③	Return port piping
④	Nipple (Size: 1/2) (2 pcs.)

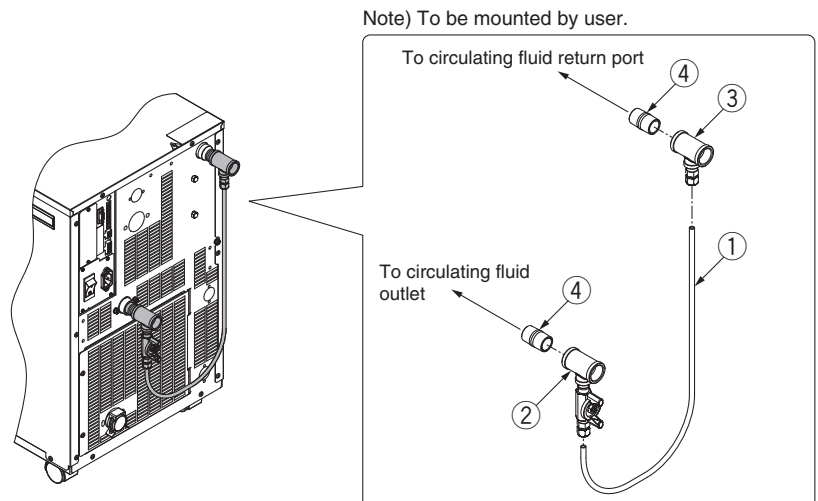

Optional Accessories


③ Replacement type dustproof filter set

A disposable dustproof filter is mounted instead of the dustproof net on the front panel.

Part no.	Applicable model
HRS-FL001	HRSE□-A-23-(T)

Parts List

No.	Description	Part no.	Note
①	Replacement type dustproof filter set	HRS-FL001	Front panel with hook-and-loop fastener for holding filter 5 filters are included. (No dustproof net is included.)
②	Replacement type dustproof filter	HRS-FL002	5 filters per set Size: 300 x 370

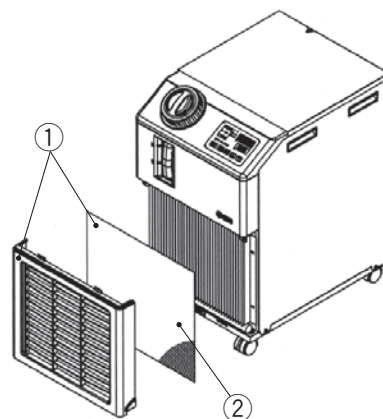

④ Particle filter set

Removes foreign objects in the circulating fluid.


HRS-PF001-W075-H

● Table 2



Symbol	Accessory
—	None
H	With handle

● Table 1

Symbol	Nominal filtration accuracy [μm]	Replacement element part no. for L125 (individual part)
—	Without element	—
W005	5	EJ202S-005X11
W075	75	EJ202S-075X11

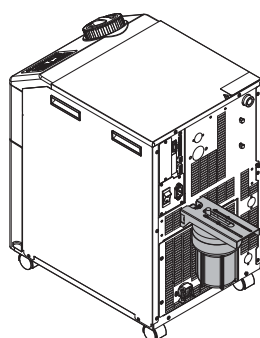

Mounting view

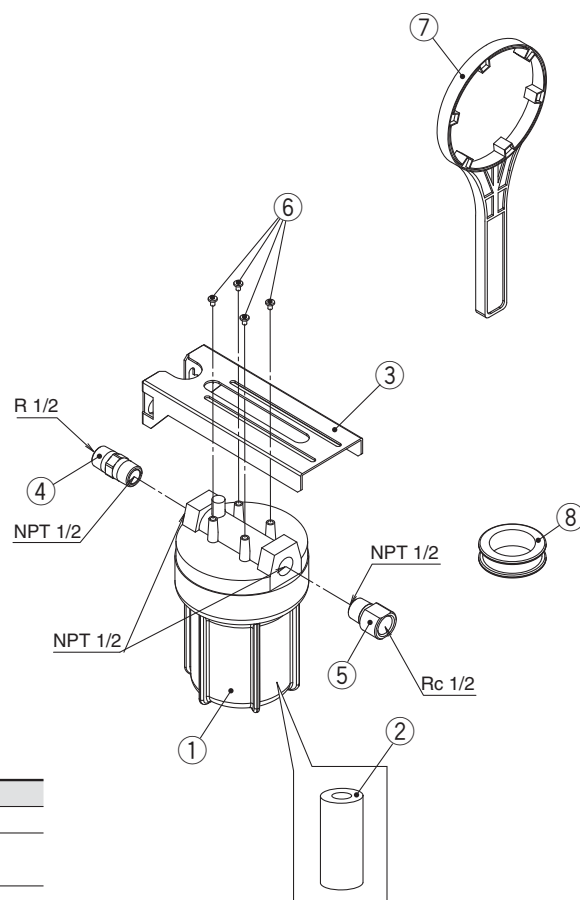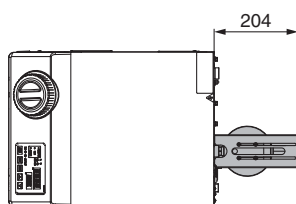

Parts List

No.	Model	Description	Material	Q'ty	Note
①	—	Body	PP	1	—
②	EJ202S-005X11 EJ202S-075X11	Element	PP/PE	1	—
③	—	Particle filter bracket	SGCC	1	—
④	—	Nipple	Stainless steel	1	Conversion from R to NPT
⑤	—	Extension piece	Stainless steel	1	Conversion from NPT to Rc
⑥	—	Tapping screw	—	4	—
⑦	—	Handle	—	1	When -H is selected
⑧	—	Sealant tape	PTFE	1	—

Cooling Capacity Calculation

Required Cooling Capacity Calculation

Example 1: When the heat generation amount in the user's equipment is known.

The heat generation amount can be determined based on the power consumption or output of the heat generating area — i.e. the area requiring cooling — within the user's equipment.*

Q: Heat generation amount

① Derive the heat generation amount from the power consumption.

Power consumption P: 1000 [W]

$$Q = P = 1000 \text{ [W]}$$

Cooling capacity = Considering a safety factor of 20 %,

$$1000 \text{ [W]} \times 1.2 = 1200 \text{ [W]}$$

② Derive the heat generation amount from the power supply output.

Power supply output VI: 1.0 [kVA]

$$Q = P = V \times I \times \text{Power factor}$$

In this example, using a power factor of 0.85:

$$= 1.0 \text{ [kVA]} \times 0.85 = 0.85 \text{ [kW]} = 850 \text{ [W]}$$

Cooling capacity = Considering a safety factor of 20 %,

$$850 \text{ [W]} \times 1.2 = 1020 \text{ [W]}$$

③ Derive the heat generation amount from the output.

Output (shaft power etc.) W: 800 [W]


$$Q = P = \frac{W}{\text{Efficiency}}$$

In this example, using an efficiency of 0.7:

$$= \frac{800}{0.7} = 1143 \text{ [W]}$$

Cooling capacity = Considering a safety factor of 20 %,

$$1143 \text{ [W]} \times 1.2 = 1372 \text{ [W]}$$

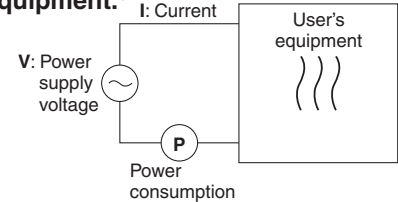

* The above examples calculate the heat generation amount based on the power consumption. The actual heat generation amount may differ due to the structure of the user's equipment. Be sure to check it carefully.

Example 2: When the heat generation amount in the user's equipment is not known.

Obtain the temperature difference between inlet and outlet by circulating the circulating fluid inside the user's equipment.

Heat generation amount by user's equipment Q : Unknown [W] ([J/s])
 Circulating fluid : Tap water*
 Circulating fluid mass flow rate q_m : $(= \rho \times q_v \div 60)$ [kg/s]
 Circulating fluid density ρ : 1 [kg/dm³]
 Circulating fluid (volume) flow rate q_v : 10 [dm³/min]
 Circulating fluid specific heat C : 4.2×10^3 [J/(kg·K)]
 Circulating fluid outlet temperature T₁ : 293 [K] (20 [°C])
 Circulating fluid return temperature T₂ : 295 [K] (22 [°C])
 Circulating fluid temperature difference ΔT : 2.0 [K] ($= T_2 - T_1$)
 Conversion factor: minutes to seconds (SI units) : 60 [s/min]

* Refer to page 14 for the typical physical property value of tap water or other circulating fluids.


$$Q = q_m \times C \times (T_2 - T_1)$$

$$= \frac{\rho \times q_v \times C \times \Delta T}{60} = \frac{1 \times 10 \times 4.2 \times 10^3 \times 2.0}{60}$$

$$= 1400 \text{ [J/s]} \approx 1400 \text{ [W]}$$

Cooling capacity = Considering a safety factor of 20 %,

$$1400 \text{ [W]} \times 1.2 = 1680 \text{ [W]}$$

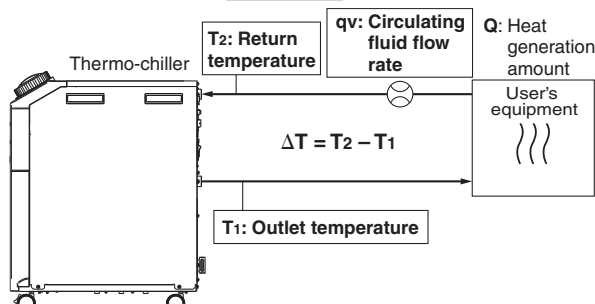

Example of conventional measurement units (Reference)

Heat generation amount by user's equipment Q : Unknown [cal/h] → [W]
 Circulating fluid : Tap water*
 Circulating fluid weight flow rate q_m : $(= \rho \times q_v \times 60)$ [kgf/h]
 Circulating fluid weight volume ratio γ : 1 [kgf/l]
 Circulating fluid (volume) flow rate q_v : 10 [l/min]
 Circulating fluid specific heat C : 1.0×10^3 [cal/(kgf·°C)]
 Circulating fluid outlet temperature T₁ : 20 [°C]
 Circulating fluid return temperature T₂ : 22 [°C]
 Circulating fluid temperature difference ΔT : 2.0 [°C] ($= T_2 - T_1$)
 Conversion factor: hours to minutes : 60 [min/h]
 Conversion factor: kcal/h to kW : 860 [(cal/h)/W]

$$Q = \frac{q_m \times C \times (T_2 - T_1)}{860}$$

$$= \frac{\gamma \times q_v \times 60 \times C \times \Delta T}{860}$$

$$= \frac{1 \times 10 \times 60 \times 1.0 \times 10^3 \times 2.0}{860}$$

$$= \frac{1200000 \text{ [cal/h]}}{860}$$

$$\approx 1400 \text{ [W]}$$

Cooling capacity = Considering a safety factor of 20 %,

$$1400 \text{ [W]} \times 1.2 = 1680 \text{ [W]}$$

Required Cooling Capacity Calculation

Example 3: When there is no heat generation, and when cooling the object below a certain temperature and period of time.

Heat quantity by cooled substance (per unit time) **Q**: Unknown [W] [(J/s)]
 Cooled substance : Water
 Cooled substance mass **m** : (= $\rho \times V$) [kg]
 Cooled substance density ρ : 1 [kg/l]
 Cooled substance total volume **V** : 20 [dm³]
 Cooled substance specific heat **C** : 4.2 x 10³ [J/(kg·K)]
 Cooled substance temperature when cooling begins **T₀**: 305 [K] (32 [°C])
 Cooled substance temperature after t hour **T_t** : 293 [K] (20 [°C])
 Cooling temperature difference ΔT : 12 [K] (= **T₀** – **T_t**)
 Cooling time Δt : 900 [s] (= 15 [min])


* Refer to the following for the typical physical property values by circulating fluid.

$$Q = \frac{m \times C \times (T_0 - T_t)}{\Delta t} = \frac{\rho \times V \times C \times \Delta T}{\Delta t}$$

$$= \frac{1 \times 20 \times 4.2 \times 10^3 \times 12}{900} = 1120 \text{ [J/s]} \approx 1120 \text{ [W]}$$

Cooling capacity = Considering a safety factor of 20 %,

$$1120 \text{ [W]} \times 1.2 = 1344 \text{ [W]}$$

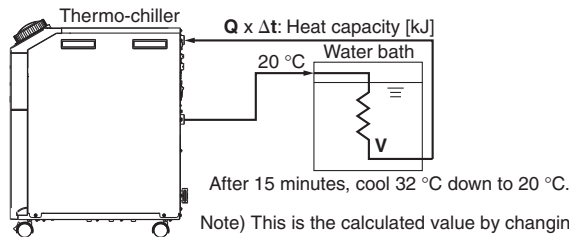

Note) This is the calculated value by changing the fluid temperature only.
 Thus, it varies substantially depending on the water bath or piping shape.

Example of conventional measurement units (Reference)

Heat quantity by cooled substance (per unit time) **Q**: Unknown [cal/h] → [W]
 Cooled substance : Water
 Cooled substance weight **m** : (= $\rho \times V$) [kgf]
 Cooled substance weight volume ratio γ : 1 [kgf/l]
 Cooled substance total volume **V** : 20 [L]
 Cooled substance specific heat **C** : 1.0 x 10³ [cal/(kgf·°C)]
 Cooled substance temperature when cooling begins **T₀** : 32 [°C]
 Cooled substance temperature after t hour **T_t**: 20 [°C]
 Cooling temperature difference ΔT : 12 [°C] (= **T₀** – **T_t**)
 Cooling time Δt : 15 [min]
 Conversion factor: hours to minutes : 60 [min/h]
 Conversion factor: kcal/h to kW : 860 [(cal/h)/W]

$$Q = \frac{m \times C \times (T_0 - T_t)}{\Delta t \times 860} = \frac{\gamma \times V \times 60 \times C \times \Delta T}{\Delta t \times 860}$$

$$= \frac{1 \times 20 \times 60 \times 1.0 \times 10^3 \times 12}{15 \times 860}$$

$$\approx 1120 \text{ [W]}$$

Cooling capacity = Considering a safety factor of 20 %,

$$1120 \text{ [W]} \times 1.2 = 1344 \text{ [W]}$$

Precautions on Cooling Capacity Calculation

1. Heating capacity

When the circulating fluid temperature is set above room temperature, it needs to be heated by the thermo-chiller. The heating capacity depends on the circulating fluid temperature. Consider the radiation rate and heat capacity of the user's equipment and check beforehand if the required heating capacity is provided.

2. Pump capacity

<Circulating fluid flow rate>

Circulating fluid flow rate varies depending on the circulating fluid discharge pressure. Consider the installation height difference between the thermo-chiller and the user's equipment, and the piping resistance such as circulating fluid pipings, or piping size, or piping curves in the machine. Check beforehand if the required flow is achieved, using the pump capacity curves.

<Circulating fluid discharge pressure>

Circulating fluid discharge pressure has the possibility to increase up to the maximum pressure in the pump capacity curves. Check beforehand if the circulating fluid pipings or circulating fluid circuit of the user's equipment are fully durable against this pressure.

Circulating Fluid Typical Physical Property Values

1. This catalogue uses the following values for density and specific heat in calculating the required cooling capacity.

Density ρ : 1 [kg/l] (or, using conventional unit system, weight volume ratio $\gamma = 1$ [kgf/l])
 Specific heat **C**: 4.19 x 10³ [J/(kg·K)] (or, using conventional unit system, 1 x 10³ [cal/(kgf·°C)])

2. Values for density and specific heat change slightly according to temperature shown below. Use this as a reference.

Water

Physical property value Temperature	Density ρ [kg/l]	Specific heat C [J/(kg·K)]	Conventional unit system	
			Weight volume ratio γ [kgf/l]	Specific heat C [cal/(kgf·°C)]
5 °C	1.00	4.2 x 10 ³	1.00	1 x 10 ³
10 °C	1.00	4.19 x 10 ³	1.00	1 x 10 ³
15 °C	1.00	4.19 x 10 ³	1.00	1 x 10 ³
20 °C	1.00	4.18 x 10 ³	1.00	1 x 10 ³
25 °C	1.00	4.18 x 10 ³	1.00	1 x 10 ³
30 °C	1.00	4.18 x 10 ³	1.00	1 x 10 ³
35 °C	0.99	4.18 x 10 ³	0.99	1 x 10 ³
40 °C	0.99	4.18 x 10 ³	0.99	1 x 10 ³

15 % Ethylene Glycol Aqueous Solution

Physical property value Temperature	Density ρ [kg/l]	Specific heat C [J/(kg·K)]	Conventional unit system	
			Weight volume ratio γ [kgf/l]	Specific heat C [cal/(kgf·°C)]
5 °C	1.02	3.91 x 10 ³	1.02	0.93 x 10 ³
10 °C	1.02	3.91 x 10 ³	1.02	0.93 x 10 ³
15 °C	1.02	3.91 x 10 ³	1.02	0.93 x 10 ³
20 °C	1.01	3.91 x 10 ³	1.01	0.93 x 10 ³
25 °C	1.01	3.91 x 10 ³	1.01	0.93 x 10 ³
30 °C	1.01	3.91 x 10 ³	1.01	0.94 x 10 ³
35 °C	1.01	3.91 x 10 ³	1.01	0.94 x 10 ³
40 °C	1.01	3.92 x 10 ³	1.01	0.94 x 10 ³

Note) The above shown are reference values. Contact circulating fluid supplier for details.



Series **HRSE**

Specific Product Precautions 1

Be sure to read this before handling. Refer to the back cover for Safety Instructions. For Temperature Control Equipment Precautions, refer to “Handling Precautions for SMC Products” and the Operation Manual on SMC website, <http://www.smc.eu>

Design

Warning

1. This catalogue shows the specifications of a single unit.

- 1) Check the specifications of the single unit (contents of this catalogue) and thoroughly consider the adaptability between the user's system and this unit.
- 2) Although the protection circuit as a single unit is installed, prepare a drain pan, water leakage sensor, discharge air facility, and emergency stop equipment, depending on the user's operating condition. Also, the user is requested to carry out the safety design for the whole system.

2. When attempting to cool areas that are open to the atmosphere (tanks, pipes), plan your piping system accordingly.

When cooling open-air external tanks, arrange the piping so that there are coil pipes for cooling inside the tanks, and to carry back the entire flow volume of circulating fluid that is released.

3. Use non-corrosive material for fluid contact parts of circulating fluid.

Using corrosive materials such as aluminium or iron for fluid contact parts such as piping may cause clogging or leakage in the circulating fluid circuit. Provide protection against corrosion when you use the product.

Selection

Warning

1. Model selection

For selecting a model of thermo-chiller, it is required to know the heat generation amount of the user's equipment. Obtain the heat generation amount, referring to “Cooling Capacity Calculation” on pages 13 and 14 before selecting a model.

Handling

Warning

1. Thoroughly read the Operation Manual.

Read the Operation Manual completely before operation, and keep this manual available whenever necessary.

Transportation/Carriage/Movement


Warning

1. This product is heavy. Pay attention to safety and position of the product when it is transported, carried and moved.
2. Read the Operation Manual carefully to move the product after unpacking.

Caution

1. Never put the product down sideways as this may cause failure.

The product will be delivered in the packaging shown below.

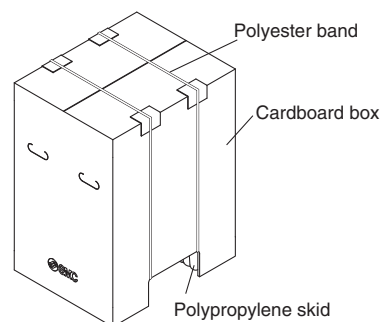

Model	Weight [kg]	Dimensions [mm]
HRSE012-A-23 HRSE018-A-23 HRSE024-A-23	41	Height 790 x Width 470 x Depth 580
HRSE012-A-23-T HRSE018-A-23-T HRSE024-A-23-T	48	Height 790 x Width 470 x Depth 580



Series HRSE

Specific Product Precautions 2

Be sure to read this before handling. Refer to the back cover for Safety Instructions. For Temperature Control Equipment Precautions, refer to "Handling Precautions for SMC Products" and the Operation Manual on SMC website, <http://www.smc.eu>

Operating Environment/Storage Environment

Warning

1. Do not use in the following environment as it will lead to a breakdown.

- 1) Outdoors
- 2) In locations where water, water vapor, salt water, and oil may splash on the product.
- 3) In locations where there are dust and particles.
- 4) In locations where corrosive gases, organic solvents, chemical fluids, or flammable gases are present. (This product is not explosion proof.)
- 5) In locations where the ambient temperature exceeds the limits as mentioned below.

During transportation/storage: 0 to 50 °C (But as long as water or circulating fluid are not left inside the pipings)

During operation: 5 to 40 °C

- 6) In locations where the ambient humidity is out of the following range or where condensation occurs.

During transportation/storage: 15 to 85 %

During operation: 30 to 70 %

- 7) In locations which receive direct sunlight or radiated heat.
- 8) In locations where there is a heat source nearby and the ventilation is poor.
- 9) In locations where temperature substantially changes.
- 10) In locations where strong magnetic noise occurs. (In locations where strong electric fields, strong magnetic fields and surge voltage occur.)
- 11) In locations where static electricity occurs, or conditions which make the product discharge static electricity.
- 12) In locations where high frequency occurs.
- 13) In locations where damage is likely to occur due to lightning.
- 14) In locations at altitude of 3000 m or higher (Except during storage and transportation)

* For altitude of 1000 m or higher

Because of lower air density, the heat radiation efficiencies of the devices in the product will be lower in the location at altitude of 1000 m or higher.

Therefore, the maximum ambient temperature to use and the cooling capacity will lower according to the descriptions in the table below.

Select the thermo-chiller considering the descriptions.

- ① Upper limit of ambient temperature: Use the product in ambient temperature of the described value or lower at each altitude.
- ② Cooling capacity coefficient: The product's cooling capacity will lower to one that multiplied by the described value at each altitude.

Altitude [m]	① Upper limit of ambient temperature [°C] Power supply 230 V	② Cooling capacity coefficient
Less than 1000 m	40	1.00
Less than 1500 m	38	0.85
Less than 2000 m	36	0.80
Less than 2500 m	34	0.75
Less than 3000 m	32	0.70

Warning

- 15) In locations where strong impacts or vibrations occur.
- 16) In locations where a massive force strong enough to deform the product is applied or a weight from a heavy object is applied.
- 17) In locations where there is not sufficient space for maintenance.

2. Install in an environment where the unit will not come into direct contact with rain or snow.

These models are for indoor use only.

Do not install outdoors where rain or snow may fall on them.

3. Conduct ventilation and cooling to discharge heat. (Air-cooled refrigeration)

The heat which is cooled down through air-cooled condenser is discharged.

When using in a room which is shut tightly, ambient temperature will exceed the specification range stipulated in this catalogue, which will activate the safety detector and stop the operation.

In order to avoid this situation, discharge the heat outside of a room by ventilation or cooling facilities.

4. The product is not designed for clean room usage. It generates particles internally.

Mounting/Installation

Warning

1. Do not use the product outdoors.
2. Do not place heavy objects on top of this product, or step on it.

The external panel can be deformed and danger can result.

Caution

1. Install on a rigid floor which can withstand this product's weight.
2. When you remove casters to install the product, lift the product at least 10 mm by using adjuster-foot etc.

This product cannot be directly installed on the floor as some screws come out from the bottom of the product.



Series **HRSE** Specific Product Precautions 3

Be sure to read this before handling. Refer to the back cover for Safety Instructions. For Temperature Control Equipment Precautions, refer to "Handling Precautions for SMC Products" and the Operation Manual on SMC website, <http://www.smc.eu>

Piping

⚠ Caution

1. Regarding the circulating fluid pipings, consider carefully the suitability for shutoff pressure, temperature and circulating fluid.

If the operating performance is not sufficient, the pipings may burst during operation.

2. Select the piping port size which can exceed the rated flow.

For the rated flow, refer to the pump capacity table.

3. When tightening at the circulating fluid inlet and outlet, drain port or overflow port of this product, use a pipe wrench to clamp the connection ports.

4. For the circulating fluid piping connection, install a drain pan and wastewater collection pit just in case the circulating fluid may leak.

5. This product series are constant-temperature fluid circulating machines with built-in tanks.

Do not install equipment on your system side such as pumps that forcibly return the circulating fluid to the unit. Also, if you attach an external tank that is open to the air, it may become impossible to circulate the circulating fluid. Proceed with caution.

Electrical Wiring


⚠ Warning

1. Grounding should never be connected to a water line, gas line or lightning rod.

⚠ Caution

1. Communication cable should be prepared by user.
2. Provide a stable power supply which is not affected by surge or distortion.

If the voltage increase ratio (dV/dt) at the zero cross should exceed 40 V/200 μ sec., it may result in malfunction.

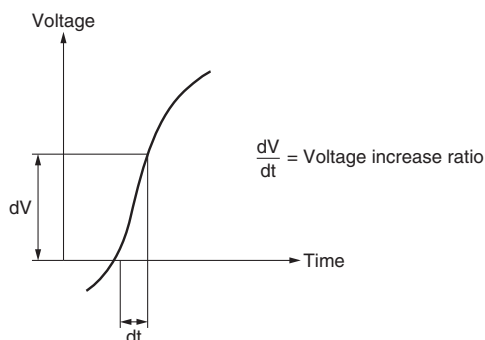

Circulating Fluid

⚠ Caution

1. Avoid oil or other foreign objects entering the circulating fluid.

2. When water is used as a circulating fluid, use tap water that conforms to the appropriate water quality standards.

Use tap water that conforms to the standards shown below (including water used for dilution of ethylene glycol aqueous solution).

Tap Water (as Circulating Fluid) Quality Standards

The Japan Refrigeration and Air Conditioning Industry Association
JRA GL-02-1994 "Cooling water system – Circulation type – Make-up water"

	Item	Unit	Standard value	Influence	
				Corrosion	Scale generation
Standard item	pH (at 25 °C)	—	6.0 to 8.0	○	○
	Electric conductivity (25 °C)	[μ S/cm]	100* to 300*	○	○
	Chloride ion (Cl^-)	[mg/l]	50 or less	○	
	Sulfuric acid ion (SO_4^{2-})	[mg/l]	50 or less	○	
	Acid consumption amount (at pH4.8)	[mg/l]	50 or less		○
	Total hardness	[mg/l]	70 or less		○
	Calcium hardness (CaCO_3)	[mg/l]	50 or less		○
Reference item	Ionic state silica (SiO_2)	[mg/l]	30 or less		○
	Iron (Fe)	[mg/l]	0.3 or less	○	○
	Copper (Cu)	[mg/l]	0.1 or less	○	
	Sulfide ion (S_2^{2-})	[mg/l]	Should not be detected.	○	
	Ammonium ion (NH_4^+)	[mg/l]	0.1 or less	○	
	Residual chlorine (Cl)	[mg/l]	0.3 or less	○	
	Free carbon (CO_2)	[mg/l]	4.0 or less	○	

* In the case of [$\text{M}\Omega\cdot\text{cm}$], it will be 0.003 to 0.01.

○: Factors that have an effect on corrosion or scale generation.

• Even if the water quality standards are met, complete prevention of corrosion is not guaranteed.

3. Use an ethylene glycol that does not contain additives such as preservatives.

4. When using an ethylene glycol aqueous solution, maintain a maximum concentration of 15 %.

Overly high concentrations can cause a pump overload.

5. A magnet pump is used as a circulating pump for circulating fluid.

It is particularly impossible to use liquid including metallic powder such as iron powder.



Series **HRSE**

Specific Product Precautions 4

Be sure to read this before handling. Refer to the back cover for Safety Instructions. For Temperature Control Equipment Precautions, refer to “Handling Precautions for SMC Products” and the Operation Manual on SMC website, <http://www.smc.eu>

Operation

Warning

1. Confirmation before operation

- 1) The fluid level of a tank should be within the specified range of “HIGH” and “LOW”.

When exceeding the specified level, the circulating fluid will overflow.

- 2) Remove the air.

Conduct a trial operation, looking at the fluid level.

Since the fluid level will go down when the air is removed from the user's piping system, supply water once again when the fluid level is reduced. When there is no reduction in the fluid level, the job of removing the air is completed.

Pump can be operated independently.

2. Confirmation during operation

- Check the circulating fluid temperature.

The operating temperature range of the circulating fluid is between 10 and 30 °C.

When the amount of heat generated from the user's equipment is greater than the product's capability, the circulating fluid temperature may exceed this range. Use caution regarding this matter.

3. Emergency stop method

- When an abnormality is confirmed, stop the machine immediately. After stopping operation, disconnect the power supply from the user's equipment.

Operation Restart Time

Caution

1. Wait five minutes or more before restarting operation after it has been stopped. If the operation is restarted within five minutes, the protection circuit may activate and the operation may not start properly.

Protection Circuit

Caution

1. If operating in the below conditions, the protection circuit will activate and an operation may not be performed or will stop.

- Power supply voltage is not within the rated voltage range of $\pm 10\%$.
- In case the water level inside the tank is reduced abnormally.
- Circulating fluid temperature is too high.
- Compared to the cooling capacity, the heat generation amount of the user's equipment is too high.
- Ambient temperature is too high. (Check the ambient temperature in the specifications.)
- Ventilation hole is clogged with dust or dirt.

Maintenance

Caution

<Periodical inspection every one month>

1. Clean the ventilation hole.

If the dustproof filter becomes clogged with dust or debris, a decline in cooling performance can result.

In order to avoid deforming or damaging the dustproof filter, clean it with a long-haired brush or air gun.

<Periodical inspection every three months>

1. Inspect the circulating fluid.

- 1) When using tap water

- Replacement of tap water

Failure to replace the tap water can lead to the development of bacteria or algae. Replace it regularly depending on your usage conditions.

- Tank cleaning

Consider whether dirt, slime or foreign objects may be present in the circulating fluid inside the tank, and carry out regular cleanings of the tank.

- 2) When using ethylene glycol aqueous solution

Use a concentration meter to confirm that the concentration does not exceed 15 %.

Dilute or add as needed to adjust the concentration.

<Periodical inspection during the winter season>

1. Make water-removal arrangements beforehand.




If there is a risk of the circulating fluid freezing when the product is stopped, release the circulating fluid in advance.

2. Consult a professional.

For additional methods to prevent freezing (such as commercially available tape heaters etc.), consult a professional for advice.

Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of “**Caution**,” “**Warning**” or “**Danger**.” They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)*1), and other safety regulations.

- **Caution:** **Caution** indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.
- **Warning:** **Warning** indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.
- **Danger :** **Danger** indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

- *1) ISO 4414: Pneumatic fluid power – General rules relating to systems.
ISO 4413: Hydraulic fluid power – General rules relating to systems.
IEC 60204-1: Safety of machinery – Electrical equipment of machines.
(Part 1: General requirements)
ISO 10218-1: Manipulating industrial robots - Safety.
etc.

Warning

- The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.**
Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalogue information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.
- Only personnel with appropriate training should operate machinery and equipment.**
The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.
- Do not service or attempt to remove product and machinery/equipment until safety is confirmed.**
 - The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
 - When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
 - Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.
- Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions.**
 - Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
 - Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalogue.
 - An application which could have negative effects on people, property, or animals requiring special safety analysis.
 - Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

Limited warranty and Disclaimer/ Compliance Requirements

The product used is subject to the following “Limited warranty and Disclaimer” and “Compliance Requirements”.
Read and accept them before using the product.

Limited warranty and Disclaimer

- The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first.*2)
Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
- For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
- Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalogue for the particular products.

*2) **Vacuum pads are excluded from this 1 year warranty.**

A vacuum pad is a consumable part, so it is warranted for a year after it is delivered. Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

Compliance Requirements

- The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
- The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

Caution

- The product is provided for use in manufacturing industries.**
The product herein described is basically provided for peaceful use in manufacturing industries.
If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary.
If anything is unclear, contact your nearest sales branch.

Caution

SMC products are not intended for use as instruments for legal metrology.

Measurement instruments that SMC manufactures or sells have not been qualified by type approval tests relevant to the metrology (measurement) laws of each country. Therefore, SMC products cannot be used for business or certification ordained by the metrology (measurement) laws of each country.

Safety Instructions

Be sure to read “Handling Precautions for SMC Products” (M-E03-3) before using.

SMC Corporation (Europe)

Austria	☎+43 (0)2262622800	www.smc.at	office@smc.at	Lithuania	☎+370 5 2308118	www.smclt.lt	info@smclt.lt
Belgium	☎+32 (0)33551464	www.smcpnematics.be	info@smcpnematics.be	Netherlands	☎+31 (0)205318888	www.smcpnematics.nl	info@smcpnematics.nl
Bulgaria	☎+359 (0)2807670	www.smc.bg	office@smc.bg	Norway	☎+47 67129020	www.smc-norge.no	post@smc-norge.no
Croatia	☎+385 (0)13707288	www.smc.hr	office@smc.hr	Poland	☎+48 (0)222119616	www.smc.pl	office@smc.pl
Czech Republic	☎+420 541424611	www.smc.cz	office@smc.cz	Portugal	☎+351 226166570	www.smc.eu	postpt@smc.smces.es
Denmark	☎+45 70252900	www.smc.dk	smc@smcdk.com	Romania	☎+40 213205111	www.smcromania.ro	smcromania@smcromania.ro
Estonia	☎+372 6510370	www.smcpnematics.ee	smc@smcpnematics.ee	Russia	☎+7 8127185445	www.smc-pneumatik.ru	info@smc-pneumatik.ru
Finland	☎+358 207513513	www.smc.fi	smc@smc.fi	Slovakia	☎+421 (0)413213212	www.smc.sk	office@smc.sk
France	☎+33 (0)164761000	www.smc-france.fr	promotion@smc-france.fr	Slovenia	☎+386 (0)73885412	www.smc.si	office@smc.si
Germany	☎+49 (0)61034020	www.smc.de	info@smc.de	Spain	☎+34 902184100	www.smc.eu	post@smc.smces.es
Greece	☎+30 210 2717265	www.smchellas.gr	sales@smchellas.gr	Sweden	☎+46 (0)86031200	www.smc.nu	post@smc.nu
Hungary	☎+36 23511390	www.smc.hu	office@smc.hu	Switzerland	☎+41 (0)523963131	www.smc.ch	info@smc.ch
Ireland	☎+353 (0)14039000	www.smcpnematics.ie	sales@smcpnematics.ie	Turkey	☎+90 212 489 0 440	www.smcpnomatik.com.tr	info@smcpnomatik.com.tr
Italy	☎+39 0292711	www.smcitalia.it	mailbox@smcitalia.it	UK	☎+44 (0)845 121 5122	www.smcpnematics.co.uk	sales@smcpnematics.co.uk
Latvia	☎+371 67817700	www.smc.lv	info@smc.lv				

SMC CORPORATION Akihabara UDX 15F, 4-14-1, Sotokanda, Chiyoda-ku, Tokyo 101-0021, JAPAN Phone: 03-5207-8249 FAX: 03-5298-5362