

# 3-Screen Display

New

# Multi-channel Digital Sensor Monitor

## Up to 4 pressure sensors can be connected!

CE UK CA RoHS

IO-Link



It is possible to change the settings while checking the measured value.

Main screen

Measured value (Current pressure value)

Sub screen

Left side

Right side

Label (Display item), Set value (Threshold value)

Visualisation of Settings

Set value (Threshold value)	P_1
Hysteresis value	H_1
Peak value	H_H
Bottom value	H_L0
Channel display	CH_1

● Differential Pressure Check Mode p. 2

● Input Range Selection p. 3

● 3 channels are displayed simultaneously. p. 2



IO-Link Compatible

● Hub Function p. 4

Convert analogue signals to digital signals!



## Applicable Pressure Sensor Variations

Compact Pneumatic Pressure Sensor  
PSE53□



Compact Pneumatic Pressure Sensor  
PSE54□



Low Differential Pressure Sensor  
PSE550



Pressure Sensor for General Fluids  
PSE56□



Pressure Sensor for General Fluids  
PSE57□




## PSE200A Series

 SMC®

CAT.EUS100-124A-UK

## ► Visualisation of Settings

Item and set value are displayed together.  
Easy to confirm the displayed item

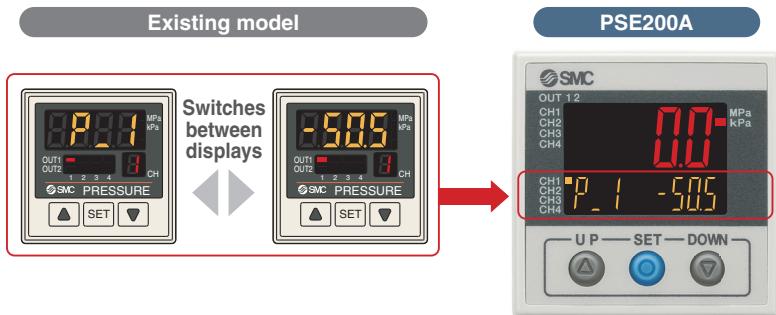

### Mode Examples


<b>Hysteresis mode</b>	Normal output ↓	Set value (Threshold value) ↓	Reversed output ↓	Set value (Threshold value) ↓	Hysteresis ↓	Set hysteresis value ↓
	P_1 -505		P_1 -505		H_1	5.1


<b>Window comparator mode</b>	Normal output/ Lo side ↓	Set value (Threshold value) ↓	Normal output/ Hi side ↓	Set value (Threshold value) ↓	Reversed output/ Lo side ↓	Set value (Threshold value) ↓	Reversed output/ Hi side ↓	Set value (Threshold value) ↓
	P_L -300		P_H -600		P_L -300		P_H -600	

## ► Easy Screen Switching

It is possible to change the settings while checking the measured value.

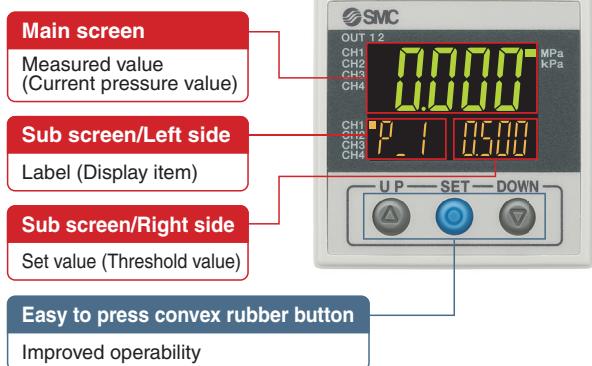


The sub screen can be switched by pressing the down buttons.

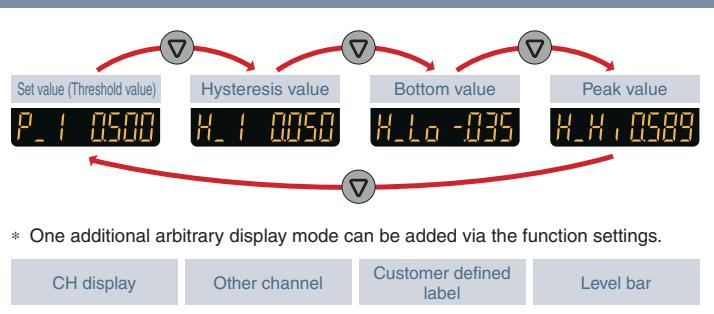


## ► Simple 3-Step Setting

After selecting the channel, when the SET button is pressed and the set value (P\_1) is displayed, the set value (threshold value) can be set.


When the SET button is pressed and the hysteresis (H\_1) is being displayed, the hysteresis value can be set.

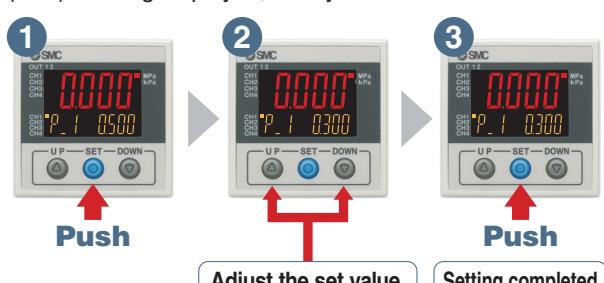

Now with a snap shot function for set value reading

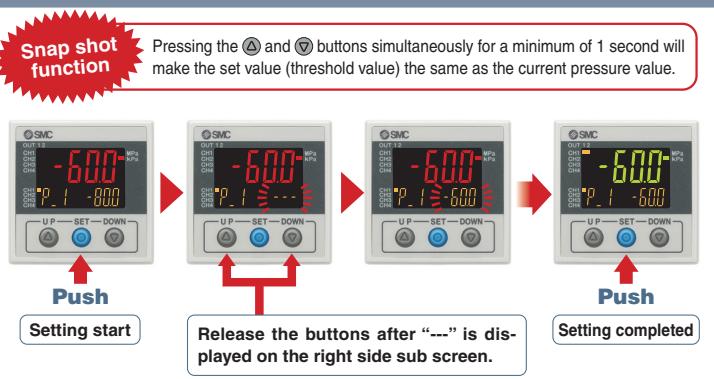


## ► Centralised Control Saves Installation Space.

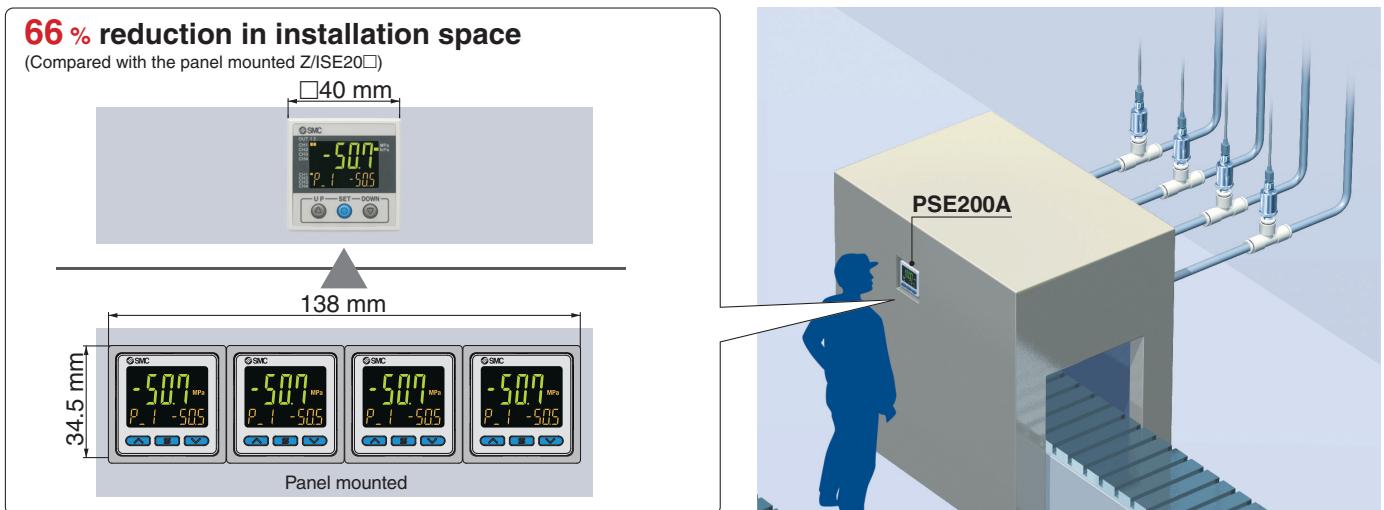


## ► Differential Pressure Check Mode p. 16


One monitor displays 2 lines of differential pressure.

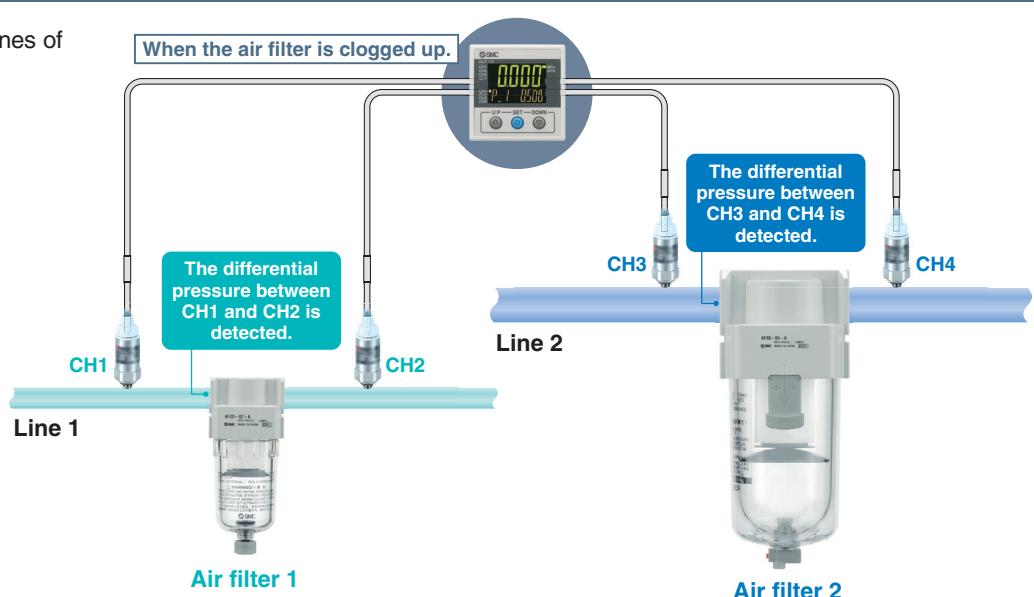

## ► A Single Monitor Various Applications

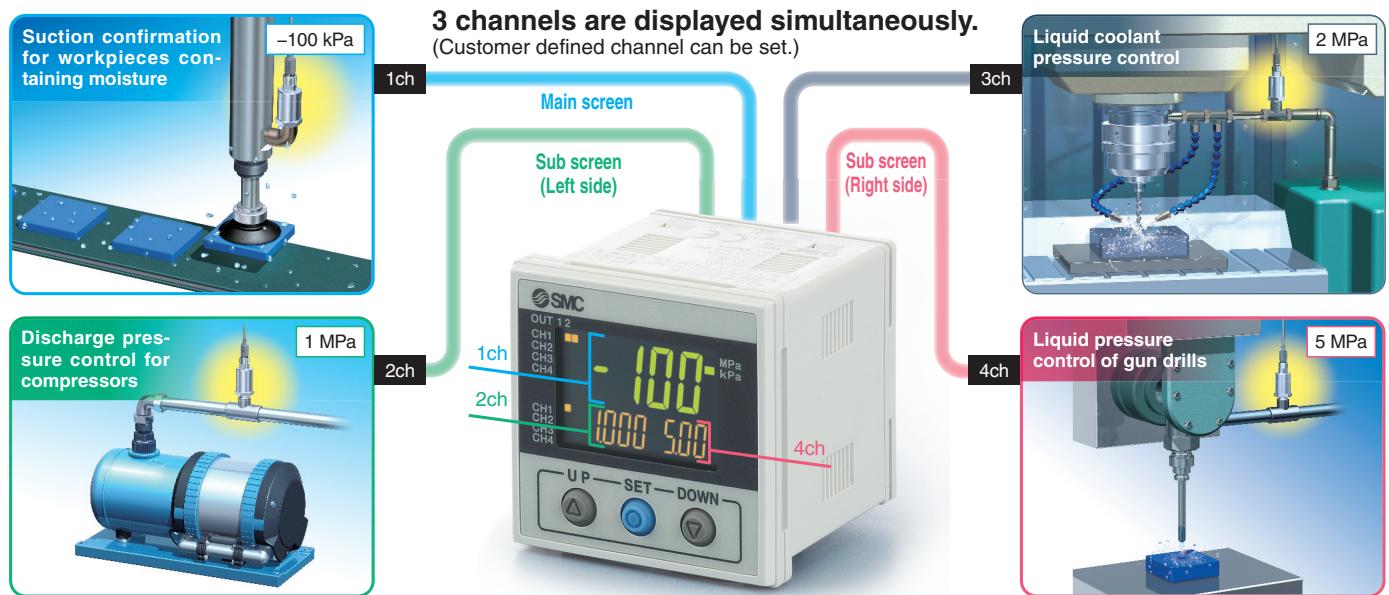

## ► Input Range Selection (for Pressure/Flow rate)

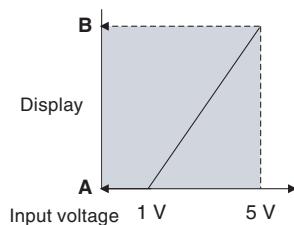

The sensor input range can be set to the required value and displayed. (Voltage input: 1 to 5 V)  
Pressure switch/Flow switch can be displayed.


**A is displayed for 1 V. B is displayed for 5 V.**

The range can be set as required.

Refer to page 8 for the specification of the sensors which can be connected.

For the individual specifications of each connectable sensor, refer to the Web Catalogue.


### ■ For Digital Flow Switch for Water / PF3W511

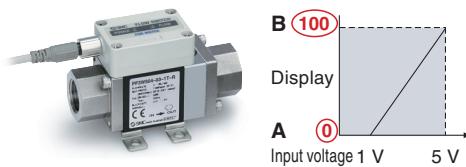

	A	B
PF3W504	0	4
PF3W520	0	16
PF3W540	0	40
PF3W511	0	100

Set A and B to the values shown in the table on the left.

### ■ For Flow Sensor / PFMV5

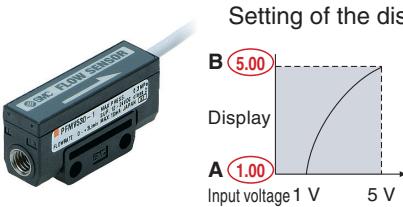


	A	B
PFMV5 Series	1.00	5.00

Set A and B to the values shown in the table on the left.

## ► Connectors

Connection and removal of wiring is easy.

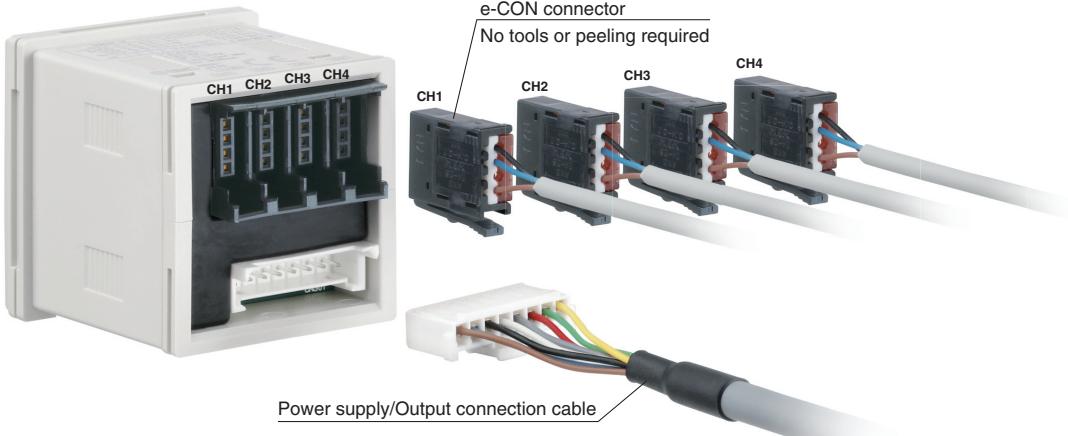

## ► Functions pp. 14 to 17

### ■ Auto-preset function

This function, when selected in the initial setting, calculates and stores the set value from the measured pressure.

### ■ Display value fine adjustment function

Fine adjustment of the indicated value of the pressure sensor can be made within the range of  $\pm 5\%$  of the read value.

### ■ Peak/Bottom value indication function

This function constantly detects and updates the maximum (minimum) pressure when the power is supplied, and allows to hold the maximum (minimum) pressure value.

### ■ Key-lock function

This function prevents operation errors such as accidentally changing setting values.

### ■ Zero-clear function

This function clears and resets the zero value on the display of measured pressure.

### ■ Error display function

This function displays error location and content when a problem or error has occurred.

### ■ Anti-chattering function

This function prevents the detection of such temporary drops in the supply pressure as errors by changing the delay time setting.

### ■ Pressure range/Unit selection function

The pressure range and displayed unit can be switched.

### ■ Zero-cut setting

When the pressure display value is close to zero, this function forces the display to zero.

### ■ Selection of power-saving mode

Power-saving mode can be selected. It shifts to power-saving mode automatically when there is no button operation for 30 seconds.

### ■ Setting of security code

Users can select whether a security code must be entered to release the key lock.

### ■ Auto-shift function

This function compensates for such supply pressure fluctuations. It measures the pressure at the time of auto-shift signal input and uses it as the reference pressure to correct the set value on the switch.

### ■ Differential pressure check mode

Set and display the differential pressure between CH1 - CH2, and CH3 - CH4.

### ■ Channel to channel copy function

The set values can be copied to other channel.

### ■ Channel select function

Pressure value for the selected channel is displayed.

### ■ Channel scan function


Pressure values for each channel are displayed in turn every 2 seconds.

## ► Hub Function

**Converts analogue signals to digital signals  
and supports IO-Link**

A currently used sensor can be used.

\* Supports analogue voltage output 1-5 V

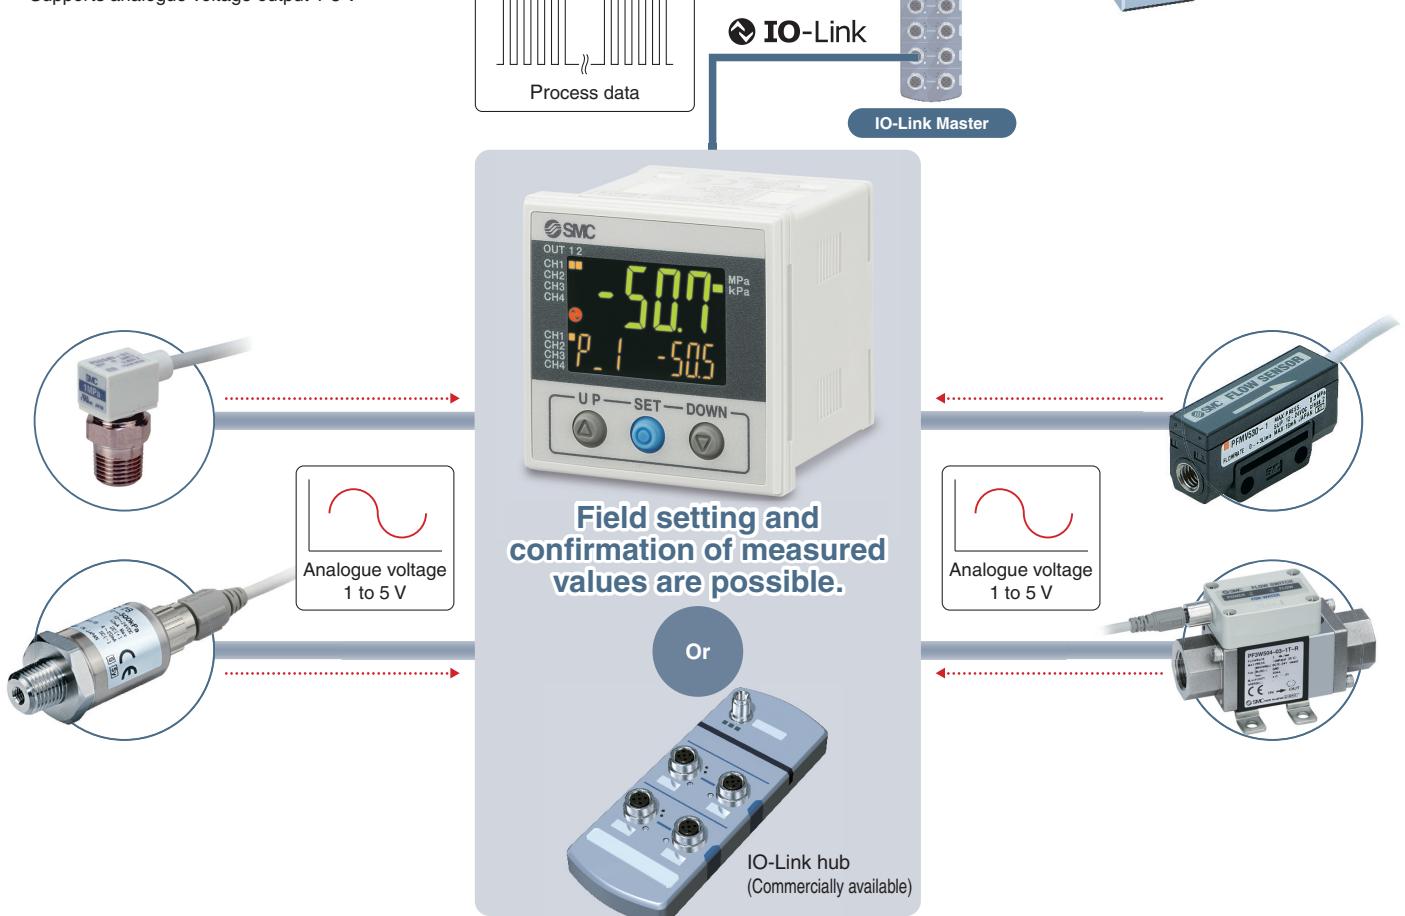

### Process Data

Bit offset	79	78	77	76	75	74	73	72	71	70	69	68	67	66	65	64
Item	CH1* <sup>1</sup> measured value: 16-bit signed integer															
Bit offset	63	62	61	60	59	58	57	56	55	54	53	52	51	50	49	48
Item	CH2 measured value: 16-bit signed integer															
Bit offset	47	46	45	44	43	42	41	40	39	38	37	36	35	34	33	32
Item	CH3* <sup>2</sup> measured value: 16-bit signed integer															
Bit offset	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
Item	CH4 measured value: 16-bit signed integer															
Bit offset	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Item	Error diagnosis	Reservation			CH4 diagnosis	CH3 diagnosis	CH2 diagnosis	CH1 diagnosis	CH4 OUT2	CH4 OUT1	CH3 OUT2	CH3 OUT1	CH2 OUT2	CH2 OUT1	CH1 OUT2	CH1 OUT1

Measurement data of sensors for 4 channels are combined and cyclically sent as a process data.

Each channel has 2 outputs\*<sup>3</sup>.

Diagnosis item · Internal product malfunction  
· Outside of zero-clear range

Diagnosis item · Applied pressure error  
· Differential pressure measurement error

Implement diagnostic bits in the process data.

\*1 During differential pressure operation mode, CH1-CH2 measurement value is used.


\*2 During differential pressure operation mode, CH3-CH4 measurement value is used.

\*3 During SIO mode, only CH1 has 2 switch outputs. CH2-4 has one output each.



IO-Link is an open communication interface technology between the sensor/actuator and the I/O terminal that is an international standard, IEC61131-9.

## Visualisation of operation/equipment status Remote monitoring and control by communication

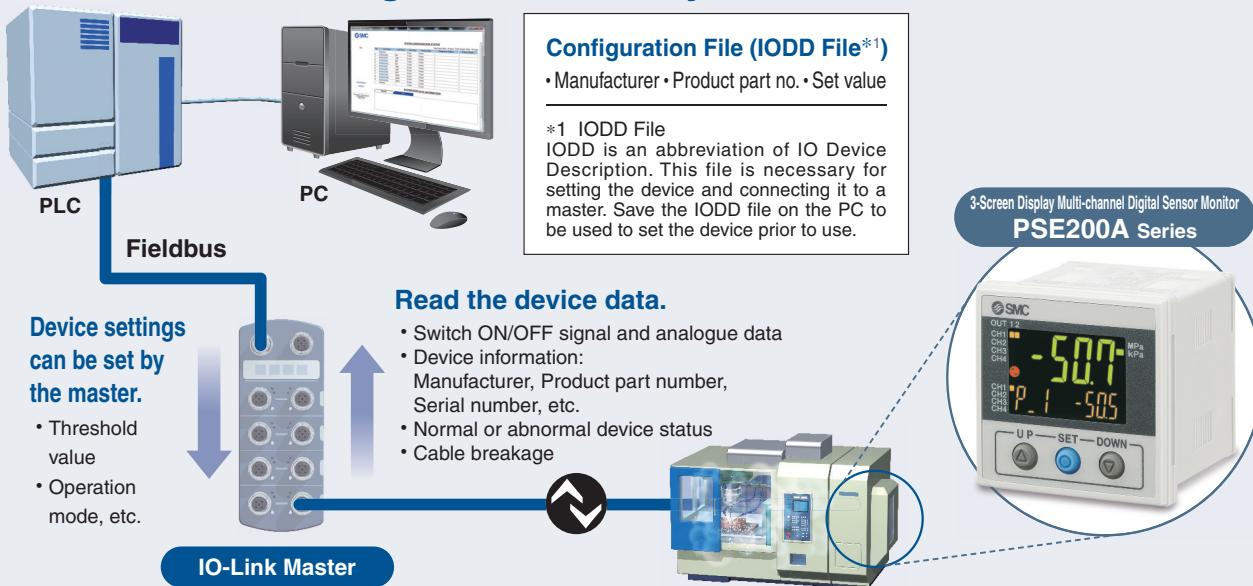

### Automatic setting function [Data storage function]

When replacing the sensor monitor with the same type (the same device ID), the parameters (set values) stored in the IO-Link master are automatically copied (set) to the new sensor monitor.



**Displays the output communication status and indicates the presence of communication data**



### Operation and Display

Communication with master	IO-Link status indicator light	Status		Screen display *2	Description
Yes	*1 *1 (Flashing)	Normal	Operate	ModE oPE	Normal communication status (readout of measured value)
			Start up	ModE Strt	At the start of communication
			Preoperate	ModE PrE	
		Abnormal	Version does not match	Er 15 / 10	IO-Link version does not match that of the master. The master uses version 1.0. * The applicable IO-Link version is 1.1.
No			Communication disconnection	ModE oPE ModE Strt ModE PrE	Normal communication was not received for 1 second or longer.
	OFF	SIO mode		ModE SIO	General switch output

\*1 In IO-Link mode, the IO-Link indicator is ON or flashes. \*2 When the sub screen is set to Mode

\* "ModE LoC" is displayed when the data storage lock is enabled. (Except for version mismatch or when in SIO mode)

## ► Series Variations

		Digital Sensor Monitor	Pressure Sensor Controller		
		PSE200A	PSE300AC	PSE300A	
<b>Basic Specifications</b>		Repeatability: <b>±0.1 % (F.S.)</b> Voltage: <b>12 to 24 VDC</b> No. of outputs for switch: <b>5 outputs</b> Analogue output: — Operating temperature: <b>0 to 50 °C</b>	Repeatability: ±0.1 % (F.S.) Voltage: 12 to 24 VDC No. of outputs for switch: 2 outputs Analogue output: 1 to 5 V 4 to 20 mA Operating temperature: 0 to 50 °C		
<b>Functions</b>		Number of screens: <b>3</b> Enclosure: Front face: IP65 Others: IP40 3 Step: Yes Wiring: Connector	Number of screens: 3 Enclosure: IP65 3 Step: Yes Wiring: Connector	Number of screens: 3 Enclosure: IP40	
<b>Applicable Pressure Sensors</b>		Compact Pneumatic Pressure Sensor <b>PSE53□</b>  Refer to the Web Catalogue for details.	Compact Pneumatic Pressure Sensor <b>PSE54□</b>  Low Differential Pressure Sensor <b>PSE550</b> 	Pressure Sensor for General Fluids <b>PSE56□</b>  Pressure Sensor for General Fluids <b>PSE57□</b> 	
Rated pressure range -101 kPa to 0 -100 kPa to 100 kPa 0 to 100 kPa 0 to 1 MPa		Rated pressure range -101 kPa to 0 -100 kPa to 100 kPa 0 to 1 MPa	Rated pressure range 0 to 2 kPa	Rated pressure range -101 kPa to 0 -100 kPa to 100 kPa 0 to 500 kPa 0 to 1 MPa	Rated pressure range -100 kPa to 100 kPa 0 to 500 kPa 0 to 1 MPa 0 to 2 MPa 0 to 5 MPa 0 to 10 MPa

## CONTENTS

How to Order .....	p. 7	Internal Circuits and Wiring Examples .....	p. 9
Options/Part Nos. ....	p. 7	Dimensions .....	p. 12
Specifications .....	p. 8	Function Details .....	p. 13
Applicable Pressure Sensors .....	p. 9		

# 3-Screen Display Multi-channel Digital Sensor Monitor **PSE200A Series**



## How to Order



**PSE200A-M**

Input/Output specification	
0	NPN 5 outputs + Auto-shift input
1	PNP 5 outputs + Auto-shift input
2	IO-Link + NPN 4 outputs or NPN 5 outputs (SIO mode)
3	IO-Link + PNP 4 outputs or PNP 5 outputs (SIO mode)

—	With unit selection function
M	SI units only*1

\*1 Fixed unit: kPa, MPa, Pa


Option 1

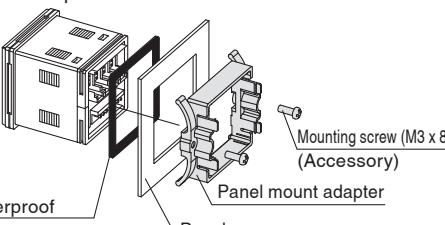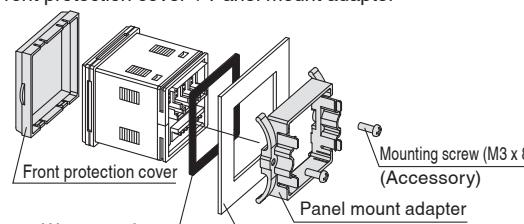—	None
A	Panel mount adapter  Mounting screw (M3 x 8L) (Accessory) Panel mount adapter Panel Waterproof seal
B	Front protection cover + Panel mount adapter  Mounting screw (M3 x 8L) (Accessory) Panel mount adapter Panel Waterproof seal

\* Options are not assembled, but shipped together.




Option 3

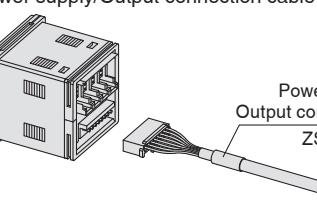—	Power supply/Output connection cable (2 m)
N	 Power supply/ Output connection cable ZS-26-L
None	

\* Cable is shipped together, but not connected.

Option 2


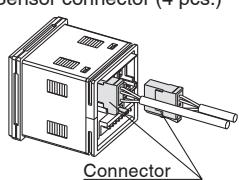
—	None
4C	 Connector

\* Connector is not connected, but shipped together.

\* This connector cannot be used with the PSE570 series.

## Options/Part Nos.

When only optional parts are required, order with the part numbers listed below.

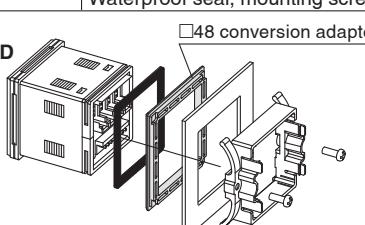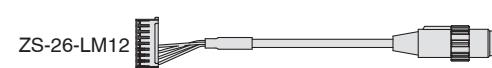Description	Part no.	Note
Panel mount adapter	ZS-26-B	Waterproof seal, mounting screws M3 x 8L (2 pcs.) included
Front protection cover + Panel mount adapter	ZS-26-C	Waterproof seal, mounting screws M3 x 8L (2 pcs.) included
□48 conversion adapter	ZS-26-D	□48 conversion adapter   Order panel mount adapter separately.
* This adapter is used to mount the PSE200A series on the panel fitting of the PSE100 series.		
Front protection cover	ZS-26-01	
Sensor connector (1 pc. per set)	ZS-28-C	For the PSE5□□ series (Excludes the PSE570 series)
	ZS-28-CA-4	For PSE570 series
Power supply with M12 connector/Output cable (Made to Order)	ZS-26-LM12	
* For use when using an M12 connector for IO-Link communication		

For pressure switch precautions and specific product precautions,  
refer to the "Operation Manual" on the SMC website.

## Specifications

Series		PSE200A								
<b>Applicable SMC pressure sensor</b>	PSE550	PSE531 PSE541 PSE561	PSE533 PSE543 PSE563 PSE573	PSE532	PSE564 PSE574	PSE530 PSE540 PSE560 PSE570	PSE575	PSE576	PSE577	
<b>Rated pressure range</b>	0 to 2 kPa	-101 to 0 kPa	-100 to 100 kPa	0 to 100 kPa	0 to 500 kPa	0 to 1 MPa	0 to 2 MPa	0 to 5 MPa	0 to 10 MPa	
<b>Display/Set pressure range</b>	-0.2 to 2.1 kPa	-105 to 10 kPa	-105 to 105 kPa	-10 to 105 kPa	-50 to 525 kPa	-0.105 to 1.05 MPa	-0.105 to 2.1 MPa	-0.25 to 5.25 MPa	-0.5 to 10.5 MPa	
<b>Display/Smallest settable increment</b>	0.001 kPa	0.1 kPa	0.1 kPa	0.1 kPa	1 kPa	0.001 MPa	0.001 MPa	0.01 MPa	0.01 MPa	
<b>Electrical</b>	<b>Power supply voltage</b>	When used as a switch output device	12 to 24 VDC ±10 % with 10 % ripple (p-p) or less							
	When used as an IO-Link device		18 to 30 VDC, including ripple (p-p) 10 % <sup>1</sup>							
	<b>Current consumption</b>		55 mA or less							
	<b>Protection</b>		Polarity protection							
	Power supply voltage for sensor <sup>2</sup>		[Power supply voltage] -1.5 V							
	Power supply current for sensor <sup>3</sup>		Max. 50 mA (However, the total current for the 4 inputs is 200 mA maximum or less.)							
	<b>Display accuracy</b>		±0.5 % F.S. ±1 digit (Ambient temperature of 25 ±3 °C)							
	<b>Repeatability</b>		±0.1 % F.S. ±1 digit							
	Temperature characteristics		±0.5 % F.S. (Reference: 25 °C)							
	<b>Output type</b>		NPN or PNP open collector output: 5 outputs							
<b>Sensor input</b>	<b>Output mode</b>		Hysteresis mode, Window comparator mode, Error output, Output OFF							
	<b>Switch operation</b>		Normal output, Reversed output							
	<b>Max. load current</b>		80 mA							
	Max. applied voltage (NPN only)		30 VDC							
	Internal voltage drop (Residual voltage)		1.5 V or less (at load current of 80 mA)							
	<b>Delay time<sup>4</sup></b>		5 ms or less, variable from 0 to 60 s/0.01 s increments							
	<b>Hysteresis</b>		Variable from 0 <sup>5</sup>							
	<b>Protection</b>		Over current protection							
	<b>Input type</b>		Voltage input: 1 to 5 VDC (Input impedance: 1 MΩ)							
	<b>Number of inputs</b>		4 inputs							
<b>Display</b>	<b>Connection method</b>		e-CON							
	<b>Protection</b>		Over voltage protection (up to a voltage of 26.4 VDC)							
	<b>Auto-shift input<sup>6</sup></b>		Voltage free input (Reed or Solid state), input for 5 ms or longer, Independently controllable auto-shift function ON/OFF							
	<b>Unit<sup>6</sup></b>		MPa, kPa, Pa, kgf/cm <sup>2</sup> , bar, mbar, psi, inHg, mmHg, mmH <sub>2</sub> O (depends on selected range)							
	<b>Display type</b>		LCD							
	<b>Number of screens</b>		3-screen display (Main screen, Sub screen x 2)							
	<b>Display colour</b>		Main screen: Red/Green, Sub screen: Orange							
	<b>Number of display digits</b>		Main screen: 4 digits (7 segments), Sub screen (Left): 4 digits (some digits are 11-segments, 7 segments for other), Sub screen (Right): 5 digits (some digits are 11-segments, 7 segments for other)							
	<b>Indicator light</b>		Lights up when switch output is turned ON. OUT1, OUT2: Orange							
	<b>Digital filter<sup>7</sup></b>		Variable from 0 to 30 s/0.01 s increments							
<b>Environment</b>	<b>Enclosure</b>		Front face: IP65 (when panel-mounted), Others: IP40 <sup>8</sup>							
	<b>Withstand voltage</b>		1000 VAC for 1 minute between terminals and housing							
	<b>Insulation resistance</b>		50 MΩ or more (500 VDC measured via megohmmeter) between terminals and housing							
	<b>Operating temperature range</b>		Operating: 0 to 50 °C, Stored: -10 to 60 °C (No condensation)							
	<b>Operating humidity range</b>		Operating/Stored: 35 to 85 % RH (No condensation)							
	<b>Standards</b>		CE/UKCA marking (EMC Directive, RoHS Directive)							
	<b>Body</b>		51 g (Excludes power supply and output cable)							
	Power supply/Output cable		60 g							
	e-CON (1 pc.)		2 g							
	<b>IO-Link type</b>		Device							
<b>Communication (IO-Link mode)</b>	<b>IO-Link version</b>		V1.1							
	<b>Communication speed</b>		COM2 (38.4 kbps)							
	<b>Configuration file</b>		IODD file <sup>9</sup>							
	<b>Minimum cycle time</b>		4.8 ms							
	<b>Process data length</b>		Input data: 10 bytes, Output data: 0 bytes							
	On request data communication		Yes							
	Data storage function		Yes							
	Event function		Yes							
	<b>Vendor ID</b>		131 (0 x 0083)							

\*1 Check the power supply voltage range of the connected sensor.

\*2 Over current on DC (+) side and DC (-) side of the sensor input connector results in breakage of the product.

\*3 Value without digital filter (at 0 ms)

\*4 If the applied pressure fluctuates around the set value, the hysteresis must be set to a value more than the amount of fluctuation, or chattering will occur.

\*5 This setting is only possible for the PSE200A/PSE201A.

\*6 This setting is only possible for models with the unit selection function. Only MPa, kPa, or Pa is available for models without this function.

\*7 The response time indicates when the set value is 90 % in relation to the step input.

\*8 If □48 conversion adapter is used, it meets IP40.

\*9 The configuration file can be downloaded from the SMC website, <https://www.smc.eu>

\* Products with tiny scratches, marks, or display colour or brightness variations which do not affect the performance of the product are verified as conforming products.

### Cable Specifications

<b>Conductor area</b>	0.15 mm <sup>2</sup> (AWG26)
<b>Insulator</b>	O.D. 0.9 mm
<b>Sheath</b>	Finished O.D. Ø 4.8

# PSE200A Series

## Applicable Pressure Sensors

Applicable SMC pressure sensor					Rated pressure range							
PSE53□	PSE54□	PSE550	PSE56□	PSE57□	-100 kPa	0	100 kPa	500 kPa	1 MPa	2 MPa	5 MPa	10 MPa
PSE531	PSE541	—	PSE561	—	-101 kPa	0	100 kPa	—	—	—	—	—
PSE533	PSE543	—	PSE563	PSE573	-100 kPa	0	100 kPa	—	—	—	—	—
PSE532	—	—	—	—	—	0	100 kPa	—	—	—	—	—
—	—	—	PSE564	PSE574	—	0	—	500 kPa	—	—	—	—
PSE530	PSE540	—	PSE560	PSE570	—	0	—	—	1 MPa	—	—	—
—	—	—	—	PSE575	—	0	—	—	—	2 MPa	—	—
—	—	—	—	PSE576	—	0	—	—	—	—	5 MPa	—
—	—	—	—	PSE577	—	0	—	—	—	—	—	10 MPa
—	—	PSE550	—	—	—	0	2 kPa	—	—	—	—	—


## Internal Circuits and Wiring Examples

PSE20□ A - □□□□

• Input/Output specifications


0

- NPN open collector 5 outputs + Auto-shift 1 input

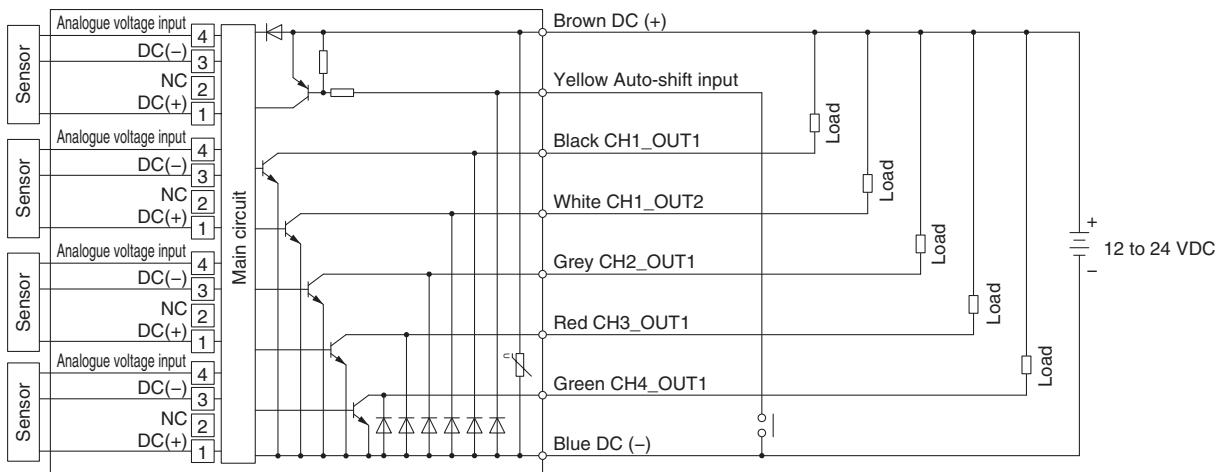

1

- PNP open collector 5 outputs + Auto-shift 1 input

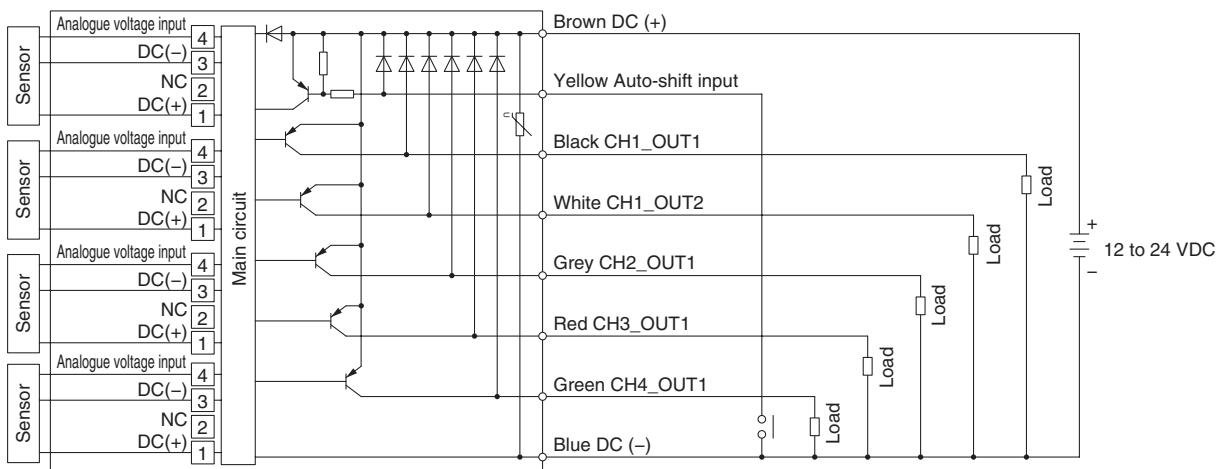

## Internal Circuits and Wiring Examples


**PSE20**  A - 

• Input/Output specifications


**2**

- IO-Link/NPN open collector 1 output + NPN open collector 4 outputs

When used as an IO-Link device

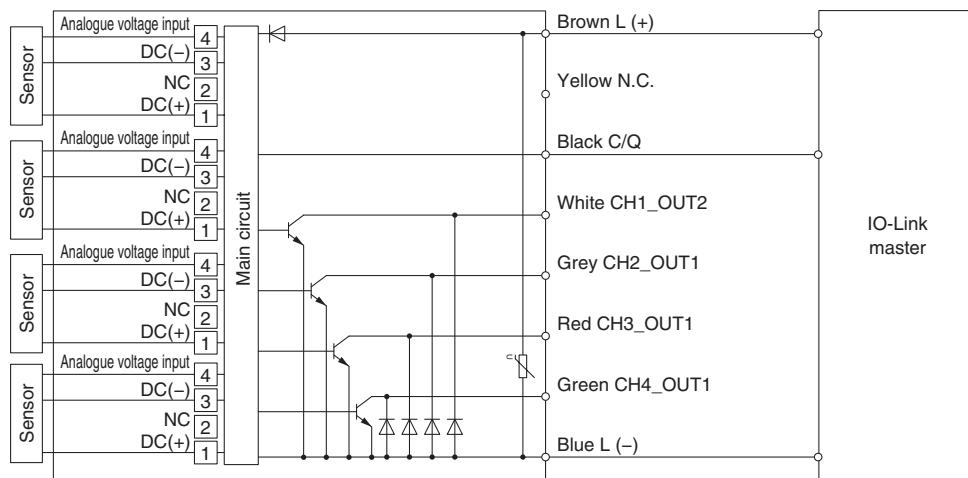

When used as a switch output device

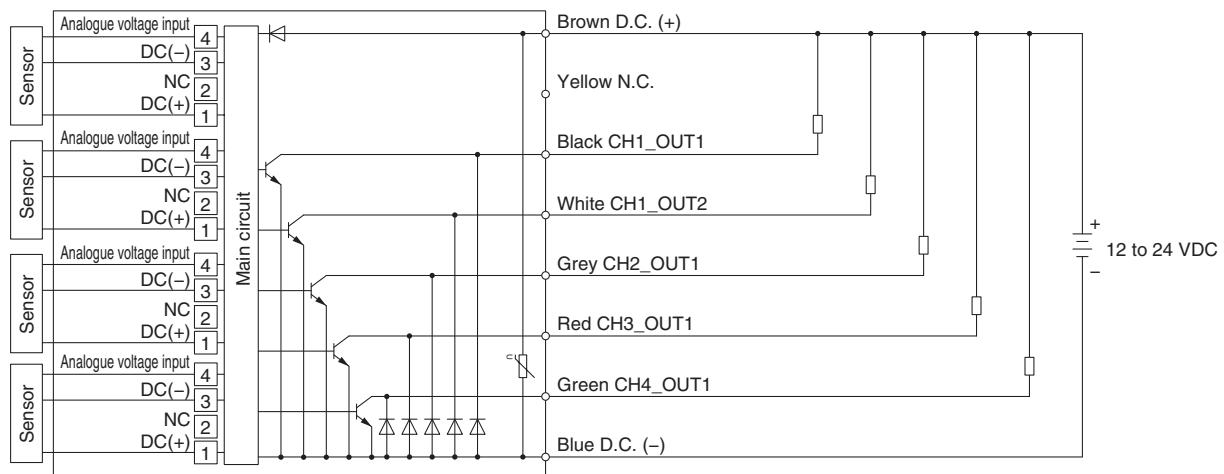

# PSE200A Series

## Internal Circuits and Wiring Examples


PSE20  A - 

• Input/Output specifications


3

- IO-Link/PNP open collector 1 output + PNP open collector 4 outputs

When used as an IO-Link device

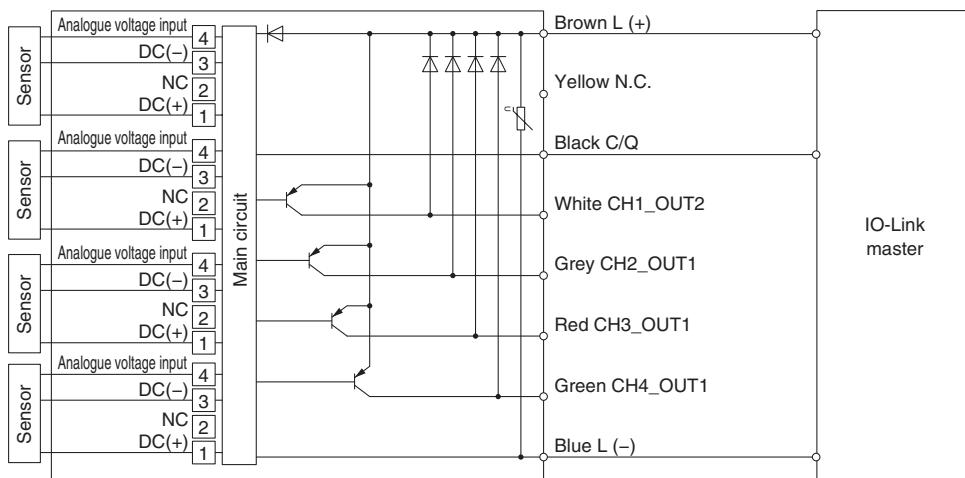


When used as a switch output device

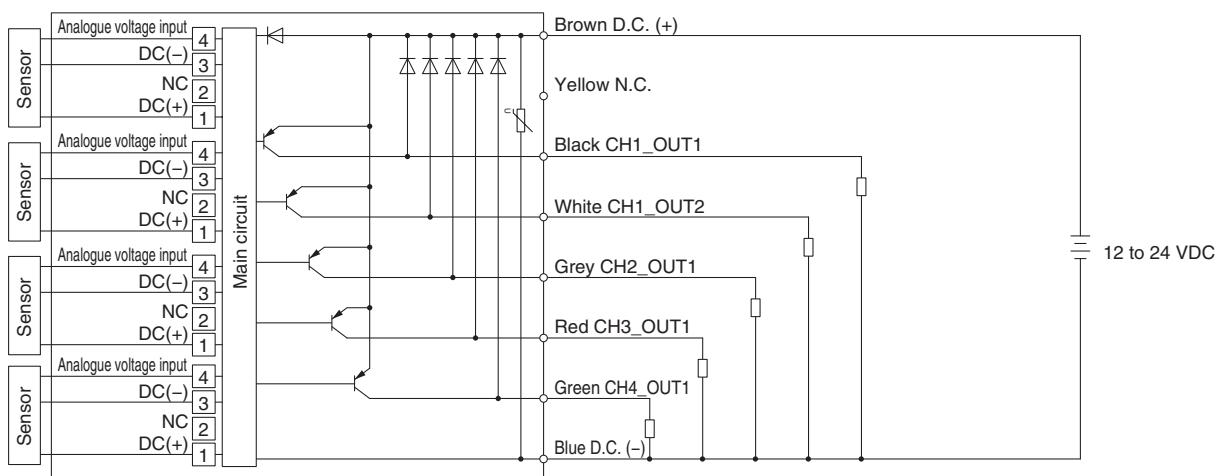

## Dimensions





**Connector (Option)**

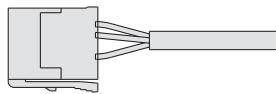


**Sensor connector (4P x 4)**

Pin no.	Terminal
①	DC (+)
②	N.C.
③	DC (-)
④	IN (1 to 5 V)

**Power supply/Output connector (8P)**

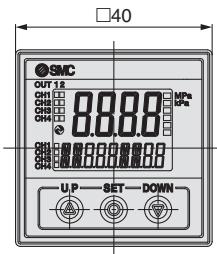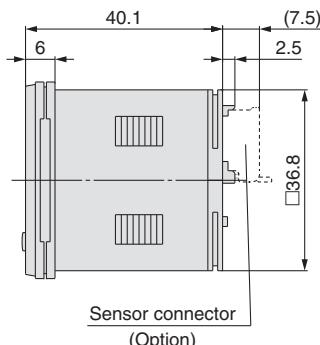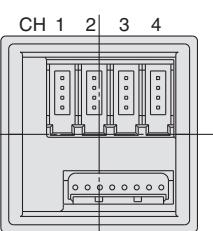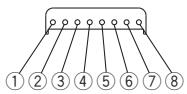

**Power supply/Output connection cable (Accessory)**

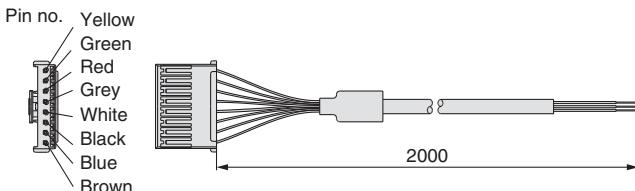


Pin no.	Terminal	
	PSE200A/PSE201A	PSE202A/PSE203A
①	DC (+)	L+
②	DC (-)	L-
③	CH1_OUT1	C/Q (CH1_OUT1)
④		CH1_OUT2
⑤		CH2_OUT1
⑥		CH3_OUT1
⑦		CH4_OUT1
⑧	Auto-shift input	N.C.



**Power supply with M12 connector/Output cable (Made to Order)**

\* For use when using an M12 connector for IO-Link communication



Connector pin assignment

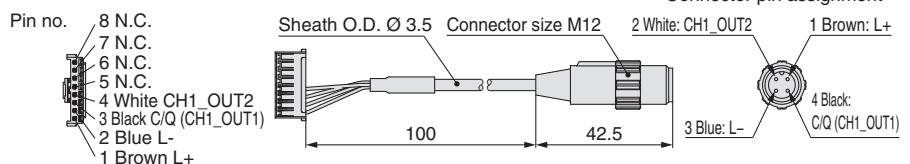

## Front protection cover + Panel mount adapter

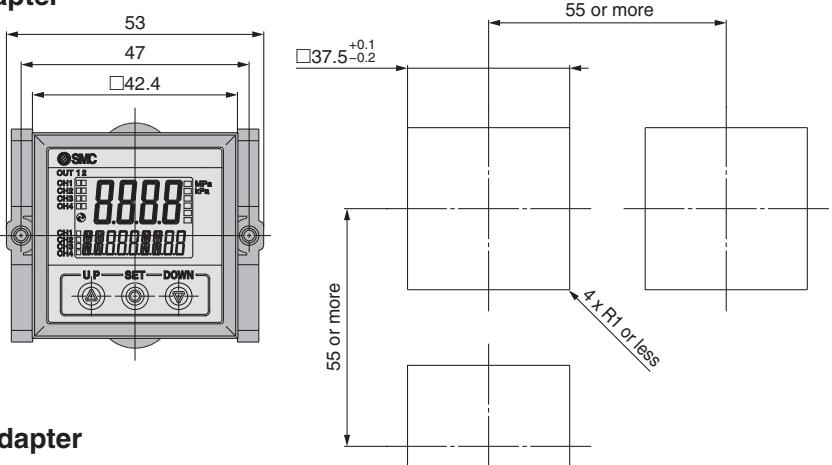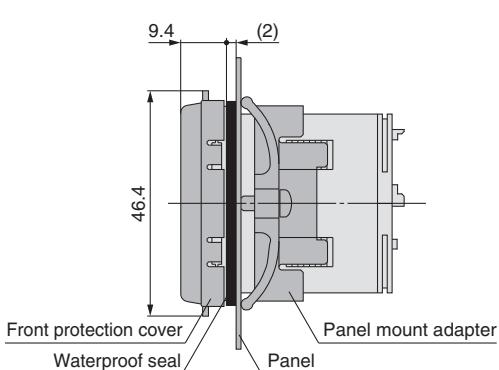

## □48 conversion adapter + Panel mount adapter

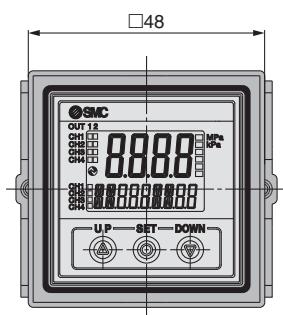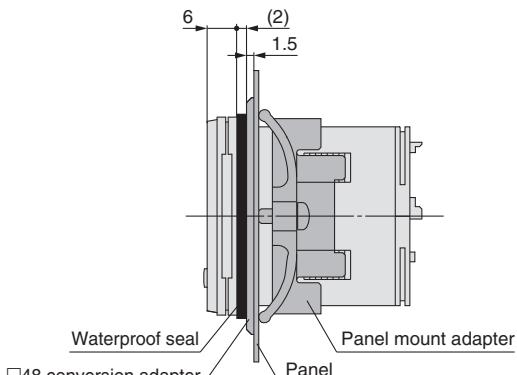

**Panel fitting dimensions**

Applicable panel thickness:



0.5 to 8 mm

# PSE200A Series



## Function Details

Display examples of the main and sub (set value) screens of each mode. (When 1 MPa range is selected)



### Hysteresis mode, Normal output

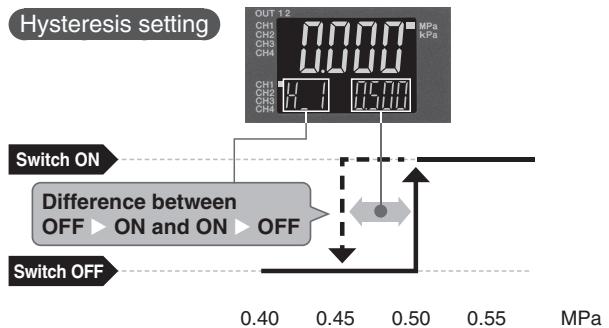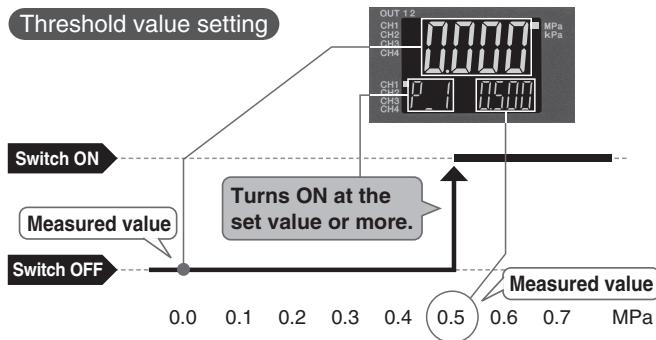



### Hysteresis mode, Reversed output

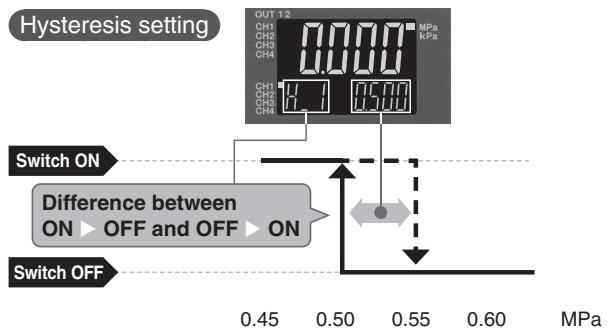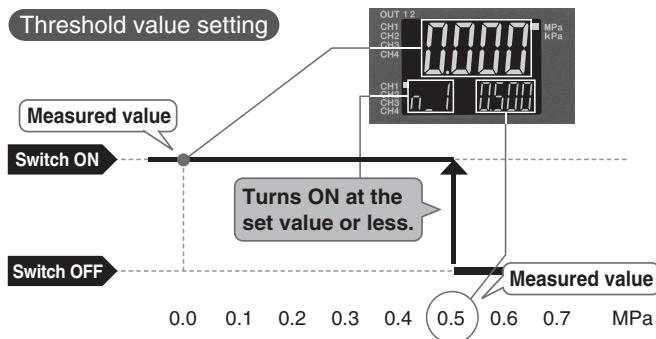

### Window comparator mode, Normal output

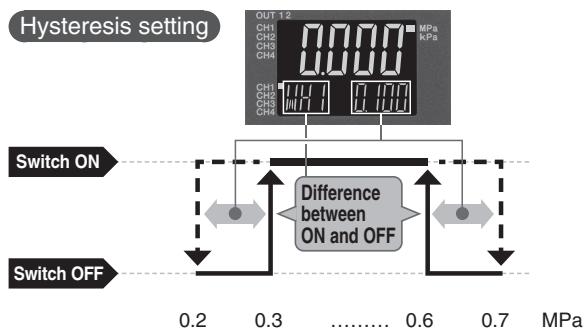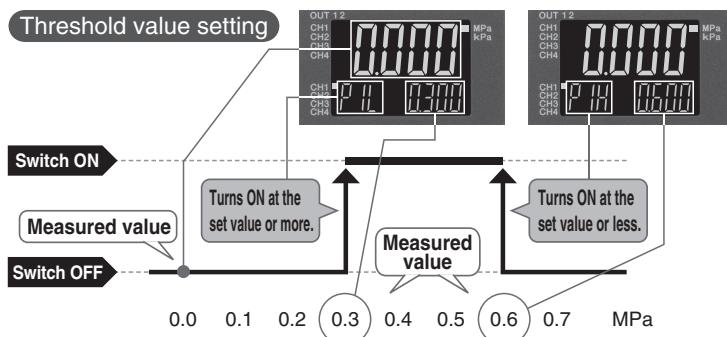

### Window comparator mode, Reversed output

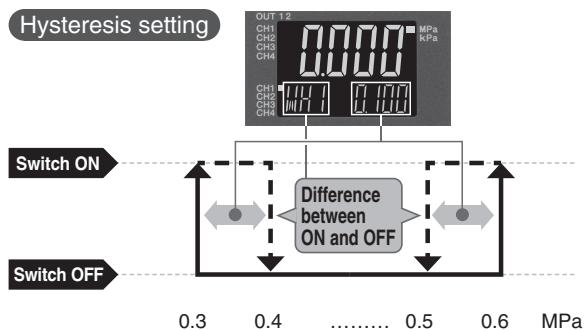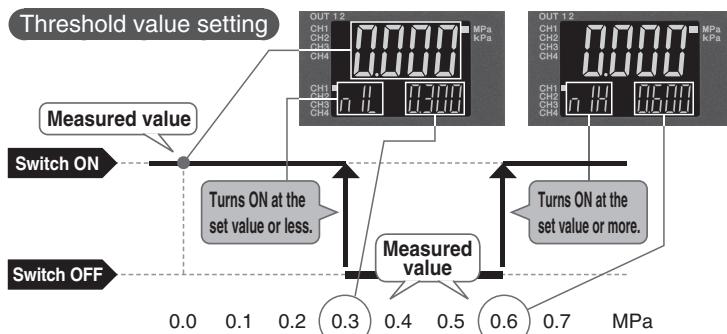


## Function Details

### A Auto-preset function (F4)

This function, when selected in the initial setting, calculates and stores the set value from the measured pressure. For example, if this function is used for suction verification, the optimum set value is determined automatically by repeating vacuum and break with the target workpiece several times.

#### Suction Verification

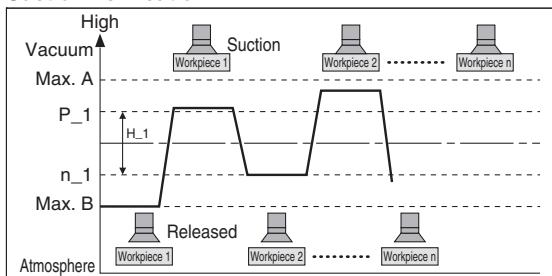


#### Formula for Obtaining the Set Value

$P_1$ or $n_1$	$H_1$
$P_1=A-(A-B)/4$ $n_1=B+(A-B)/4$	$H_1= (A-B)/2 $

### B Display value fine adjustment function (F6)

Fine adjustment of the indicated value of the pressure sensor can be made within the range of  $\pm 5\%$  of the read value. (This eliminates wide variations of the indicated value.)

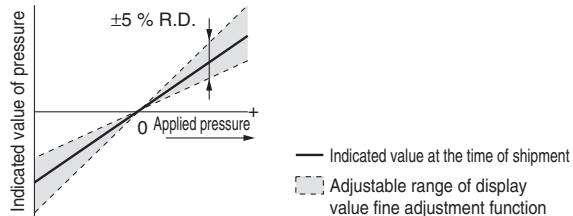

\* When the display value fine adjustment function is used, the set pressure value may change  $\pm 1$  digit.

### C Peak/Bottom value indication function

This function constantly detects and updates the maximum (minimum) pressure when the power is supplied, and allows to hold the maximum (minimum) pressure value.

When the  $\odot$  and  $\ominus$  buttons are simultaneously pressed for 1 second or longer, while "holding", the held value will be reset.

### D Key-lock function

This function prevents operation errors such as accidentally changing setting values.

### E Zero-clear function

This function clears and resets the zero value on the display of measured pressure. The indicated value can be adjusted within  $\pm 7\%$  F.S. of the pressure at the time of factory shipment. ( $\pm 3.5\%$  F.S. for compound pressure)

### F Error display function

This function displays error location and content when a problem or error has occurred.

Error name	Error code	Description	Action
Over current error	 <small>Er 1 CH_1 of 1</small>	The load current applied to the switch output has exceeded the maximum value. *1 indicates the channel with an error.	Turn the power off and remove the cause of the over current. Then supply the power again.
Residual pressure error	 <small>Er 3 Er 0</small>	During zero-clear operation, pressure over $\pm 7\%$ F.S. is present. Note that the mode is returned to measurement mode automatically 1 second later. The zero-clear range varies by $\pm 1\%$ F.S. due to variation between individual products.	Perform zero-clear operation again after restoring the applied pressure to an atmospheric pressure condition.
Applied pressure error		Supply pressure exceeds the maximum set pressure.	Reset applied pressure to a level within the set pressure range. Check the sensor connection.
		Supply pressure is below the minimum set pressure. A sensor may be disconnected or mis-wired.	
System error	     	Internal data error	Turn the power off and then on again. If the failure cannot be solved, please contact SMC for investigation.

If the error cannot be reset after the above measures are taken, or errors other than those above are displayed, please contact SMC for investigation.

# PSE200A Series


## Function Details

### G Anti-chattering function (Simple setting mode or F1, F2)

A large bore cylinder or ejector consumes a large volume of air during operation and may experience a temporary drop in the supply pressure. This function prevents the detection of such temporary drops in the supply pressure as errors by changing the delay time setting. The delay time can be set in the range of 0.00 to 60.00 [s] in 0.01 [s] increments.

<Principle>

This function averages pressure values measured during the response time set by the user and then compares the average pressure value with the pressure set point value to output the result on the switch.

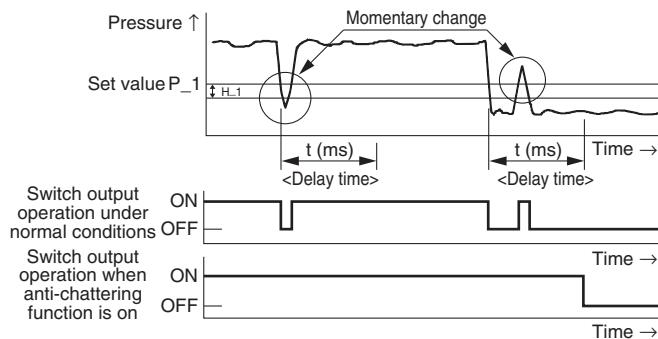

### H Pressure range/Unit selection function (F0)

Pressure range and displayed units can be switched with this function.

Applicable SMC pressure sensor	Display unit Display/ Smallest settable increment	Rated pressure range	Display/ Set pressure range	MPa	kPa	PR	KGF	bR <sub>r</sub>	lbR <sub>r</sub>	PS <sub>i</sub>	inHg	mmHg	mmH <sub>2</sub> O
				MPa	kPa	Pa	kgf/cm <sup>2</sup>	bar	mbar	psi	inHg	mmHg	mmH <sub>2</sub> O
PSE550		0 to 2 kPa	-0.2 to 2.1 kPa	0.001	1				0.01	0.001			0.1
PSE531		-101 to 0 kPa	-105 to 10 kPa	0.001	0.1		0.001	0.001		0.01	0.1	1	
PSE541							0.001	0.001		0.02	0.1	1	
PSE561							0.001	0.001		0.01			
PSE533							0.001	0.001		0.1			
PSE543							0.001	0.001		0.2			
PSE563							0.001	0.001		1			
PSE573							0.001	0.001		1			
PSE532		0 to 100 kPa	-10 to 105 kPa	0.001	0.1		0.001	0.001		0.01			
PSE564		0 to 500 kPa	-50 to 525 kPa	0.001	1		0.01	0.01		0.1			
PSE574							0.01	0.01		0.1			
PSE530							0.01	0.01		0.2			
PSE540							0.1	0.1		1			
PSE560							0.1	0.1		1			
PSE570		0 to 1 MPa	-0.105 to 1.05 MPa	0.001	1		0.01	0.01		0.1			
PSE575		0 to 2 MPa	-0.105 to 2.1 MPa	0.001	1		0.01	0.01		0.2			
PSE576		0 to 5 MPa	-0.25 to 5.25 MPa	0.01			0.1	0.1		1			
PSE577		0 to 10 MPa	-0.5 to 10.5 MPa	0.01			0.1	0.1		1			
	—	0 to 1.6 MPa	-0.105 to 1.68 MPa	0.001	1		0.01	0.01		0.1			
	—	0 to 20 MPa	-1 to 21 MPa	0.01			0.1	0.1		2			
	—	0 to 25 MPa	-1.26 to 26.26 MPa	0.02			0.2	0.2		2			

### I Zero-cut setting (F14)

When the pressure display value is close to zero, this function forces the display to zero.

The range to display zero can be changed within the range of 0.0 to 10.0 %.

Example: When the PSE570 (1 MPa range), zero-cut value = 1.0 %, 0 is displayed in the range of -9 to 9 kPa.

### J Power-saving mode (F80)

Power-saving mode can be selected.

It shifts to power-saving mode automatically when there is no button operation for 30 seconds.

The product is set to normal mode (Power-saving mode is OFF) at the time of factory shipment.

(When in power-saving mode, [ECo] will flash in the sub screen and the operation light will be ON (only when the switch is ON).)

### K Setting of security code (F81)

Users can select whether a security code must be entered to release the key lock.

At the time of factory shipment, it is set so that a security code is not required.


## Function Details

### L Auto-shift function (F5) (This setting is only possible for the PSE200A/PSE201A.)

When there are large fluctuations in the supply pressure, the switch may fail to operate correctly.

This function compensates for such supply pressure fluctuations. It measures the pressure at the time of auto-shift signal input and uses it as the reference pressure to correct the set value on the switch.

#### Set value correction by auto-shift function

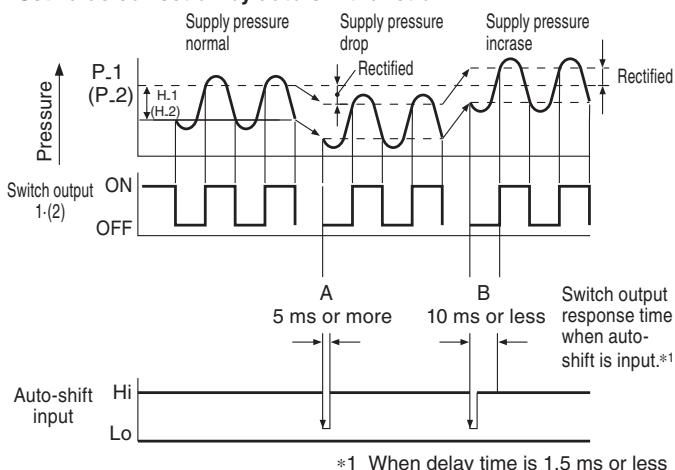

When the auto-shift function is selected, “*R<sub>5</sub> in 000*” will be displayed on the sub screen for about 1 second, and the pressure value at that point will be saved as reference value “*L<sub>-5</sub>*”. Based on the saved reference value, output on-off points controlled by set values\*2 such as “*P<sub>-1</sub>*”, “*H<sub>-1</sub>*”, “*P<sub>-2</sub>*”, and “*H<sub>-2</sub>*” will also be rectified.

\*2 When an output is reversed, output on-off points displayed at “*n<sub>-1</sub>*”, “*H<sub>-1</sub>*”, “*n<sub>-2</sub>*”, and “*H<sub>-2</sub>*” will be rectified.

The above is an example in hysteresis mode. On-off points are similarly rectified in window comparator mode. Outputs that enable the auto-shift function can be changed via the settings.

### M Differential pressure check mode (F0)

Set and display the differential pressure between CH1 - CH2, and CH3 - CH4.

Selected channel is CH1: Differential pressure between CH1 - CH2 can be set and displayed.

Selected channel is CH2: Measurement value of CH2 can be set and displayed.

Selected channel is CH3: Differential pressure between CH3 - CH4 can be set and displayed.

Selected channel is CH4: Measurement value of CH4 can be set and displayed.

### N Channel to channel copy function (F95)

Information that can be copied includes the following:

F0 (system setting): Connected range, displayed unit


F1 (OUT1 setting), F3 (digital filter), F4 (auto-preset), F5 (auto-shift setting), F10 (sub-screen setting), F11 (display resolution setting), F14 (zero-cut setting)

When CH1 is copied to CH2, CH3, and CH4, information on OUT1 in CH1 will be copied.

When CH2 (CH3, or CH4) is copied to CH1, information on OUT1 in CH2 (CH3, or CH4) will be copied only to OUT1 in CH1.

\* When the channel to channel copy function is used, the copied pressure set value may vary by ±1 digit.

Example) When copying CH1 to another channel

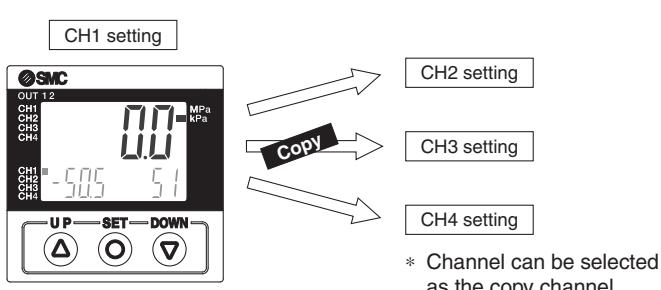


# PSE200A Series

## Function Details

### O Channel select function


Pressure value for the selected channel is displayed.

The function setting of each channel is performed on the selected channel.

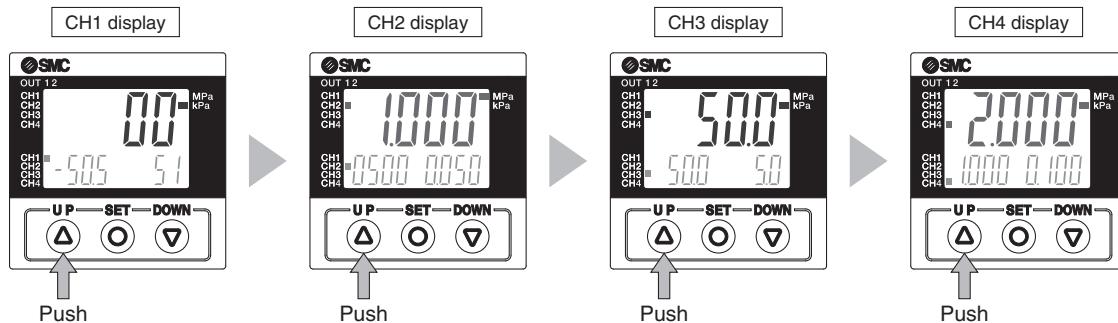

### P Channel scan function

Pressure values for each channel are displayed in turn every 2 seconds.

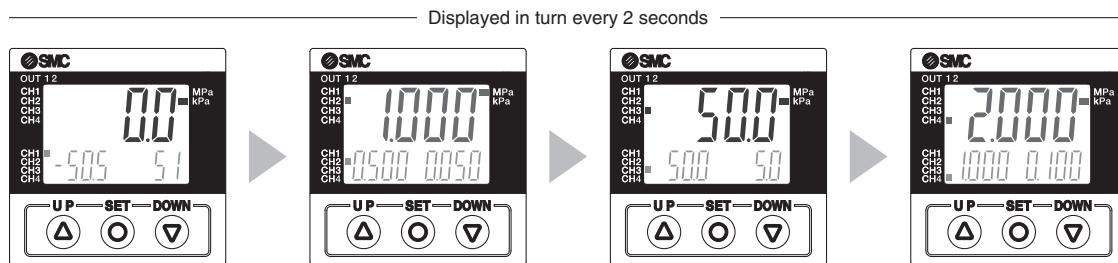

## Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of “**Caution**,” “**Warning**” or “**Danger**.” They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)<sup>1)</sup>, and other safety regulations.

- Caution:** **Caution** indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.
- Warning:** **Warning** indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.
- Danger:** **Danger** indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

- 1) ISO 4414: Pneumatic fluid power – General rules relating to systems.  
ISO 4413: Hydraulic fluid power – General rules relating to systems.  
IEC 60204-1: Safety of machinery – Electrical equipment of machines.  
(Part 1: General requirements)  
ISO 10218-1: Manipulating industrial robots - Safety etc.

## Warning

### **1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.**

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalogue information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

### **2. Only personnel with appropriate training should operate machinery and equipment.**

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

### **3. Do not service or attempt to remove product and machinery/equipment until safety is confirmed.**

1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.

### **4. Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions.**

1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalogue.
3. An application which could have negative effects on people, property, or animals requiring special safety analysis.
4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

## Caution

### **1. The product is provided for use in manufacturing industries.**

The product herein described is basically provided for peaceful use in manufacturing industries.

If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary. If anything is unclear, contact your nearest sales branch.

## Caution

### **SMC products are not intended for use as instruments for legal metrology.**

Measurement instruments that SMC manufactures or sells have not been qualified by type approval tests relevant to the metrology (measurement) laws of each country. Therefore, SMC products cannot be used for business or certification ordained by the metrology (measurement) laws of each country.

## Safety Instructions

Be sure to read “Handling Precautions for SMC Products” (M-E03-3) before using.

## SMC Corporation (Europe)

Austria	+43 (0)2262622800	<a href="http://www.smc.at">www.smc.at</a>	office@smc.at	Lithuania	+370 5 2308118	<a href="http://www.smclt.lt">www.smclt.lt</a>	info@smclt.lt
Belgium	+32 (0)33551464	<a href="http://www.smc.be">www.smc.be</a>	info@smc.be	Netherlands	+31 (0)205318888	<a href="http://www.smc.nl">www.smc.nl</a>	info@smc.nl
Bulgaria	+359 (0)2807670	<a href="http://www.smc.bg">www.smc.bg</a>	office@smc.bg	Norway	+47 67129020	<a href="http://www.smc-norge.no">www.smc-norge.no</a>	post@smc-norge.no
Croatia	+385 (0)13707288	<a href="http://www.smc.hr">www.smc.hr</a>	office@smc.hr	Poland	+48 222119600	<a href="http://www.smc.pl">www.smc.pl</a>	office@smc.pl
Czech Republic	+420 541424611	<a href="http://www.smc.cz">www.smc.cz</a>	office@smc.cz	Portugal	+351 214724500	<a href="http://www.smc.eu">www.smc.eu</a>	apoioclientpt@smc.smces.es
Denmark	+45 70252900	<a href="http://www.smcdk.com">www.smcdk.com</a>	smc@smcdk.com	Romania	+40 213205111	<a href="http://www.smcromania.ro">www.smcromania.ro</a>	smcromania@smcromania.ro
Estonia	+372 651 0370	<a href="http://www.smcee.ee">www.smcee.ee</a>	info@smcee.ee	Russia	+7 (812)3036600	<a href="http://www.smc.eu">www.smc.eu</a>	sales@smc.com
Finland	+358 207513513	<a href="http://www.smc.fi">www.smc.fi</a>	smcfi@smc.fi	Slovakia	+421 (0)413213212	<a href="http://www.smc.sk">www.smc.sk</a>	office@smc.sk
France	+33 (0)164761000	<a href="http://www.smc-france.fr">www.smc-france.fr</a>	supportclient@smc-france.fr	Slovenia	+386 (0)73885412	<a href="http://www.smc.si">www.smc.si</a>	office@smc.si
Germany	+49 (0)61034020	<a href="http://www.smc.de">www.smc.de</a>	info@smc.de	Spain	+34 945184100	<a href="http://www.smc.eu">www.smc.eu</a>	post@smc.smces.es
Greece	+30 210 2717265	<a href="http://www.smchellas.gr">www.smchellas.gr</a>	sales@smchellas.gr	Sweden	+46 (0)86031240	<a href="http://www.smc.nu">www.smc.nu</a>	smc@smc.nu
Hungary	+36 23513000	<a href="http://www.smc.hu">www.smc.hu</a>	office@smc.hu	Switzerland	+41 (0)523963131	<a href="http://www.smc.ch">www.smc.ch</a>	info@smc.ch
Ireland	+353 (0)14039000	<a href="http://www.smcautomation.ie">www.smcautomation.ie</a>	sales@smcautomation.ie	Turkey	+90 212 489 0 440	<a href="http://www.smcturkey.com.tr">www.smcturkey.com.tr</a>	satis@smcturkey.com.tr
Italy	+39 03990691	<a href="http://www.smcitalia.it">www.smcitalia.it</a>	mailbox@smcitalia.it	UK	+44 (0)845 121 5122	<a href="http://www.smc.uk">www.smc.uk</a>	sales@smc.uk
Latvia	+371 67817700	<a href="http://www.smc.lv">www.smc.lv</a>	info@smc.lv				